



QAI AEROSPACE

QAI AEROSPACE (QUALITY AVIATION INSTRUMENTS) EXCHANGE INVENTORY

412-346-0168
sales@qai.aero
www.qai.aero

Part Number Search:

PART NUMBER	DESCRIPTION
124.045	TEMPERATURE & PRESSURE INDICATOR
124.115	OIL TEMPERATURE & PRESSURE INDICATOR
124.546	TEMPERATURE & PRESSURE INDICATOR
2816	TRIM MOTOR ACTUATOR
8000	AIRSPEED INDICATOR
9550	TURN & SLIP INDICATOR
42960	ROTOR RPM INDICATOR
233565	MOTOR DRIVEN VALVE
233575	MOTOR DRIVEN VALVE
522215	PRESSURE INDICATOR
764590	FUEL PROBE
8537651	OIL COOLER
8537653	OIL COOLER
8538100	OIL COOLER
39951213	N/ROTOR INDICATOR
41000720	VALVE
420800001	BLOWER ASSEMBLY
5050031930	DIRECTIONAL GYRO
027-003-001	FUEL QUANTITY TANK UNIT
027-003-004	FUEL QUANTITY TANK UNIT
027-003-005	FUEL QUANTITY TANK UNIT
060-0013-01	DIRECTIONAL GYRO
060-0015-00	DIRECTIONAL GYRO
060-0026-00	DIRECTIONAL GYRO
064-1009-00	VHF COMM TRANSCEIVER
064-1019-00	VHF COMM TRANSCEIVER
064-1023-00	VHF COMM TRANSCEIVER
064-1054-30	VHF COMM TRANSCEIVER
065-00167-0900	ACTUATOR
065-00180-2700	TRIM SERVO
066-03044-00	RADAR ALTIMETER
066-03064-0001	ALTIMETER
066-03064-0005	ALTIMETER

066-03125-2600	DISPLAY
066-04035-0101	MULTI FUNCTION DISPLAY
066-1034-01	TRANSPONDER
066-1037-08	DME RECEIVER
066-1055-52	ISOLATION AMPLIFIER
066-1055-71	ISOLATION AMPLIFIER
066-1062-00	ATC TRANSPONDER
066-1062-02	ATC TRANSPONDER
066-1066-25	DME TRANSCEIVER
066-1071-00	TRANSPONDER
066-1072-00	ADF RECEIVER
066-1072-04	ADF RECEIVER
066-1072-14	ADF RECEIVER
066-1078-00	NAVIGATION RECEIVER
066-3044-00	RADAR ALTIMETER
066-3044-01	RADAR ALTIMETER
066-3046-04	H.S.I
066-3046-05	H.S.I
066-3046-07	H.S.I
066-3054-01	RADAR ALTIMETER INDICATOR
066-3060-00	RADIO MAGNETIC INDICATOR
066-3063-00	ADF INDICATOR
066-3064-05	ALTIMETER
069-01032-0201	VHF TRANSCEIVER/NAVIGATION RECEIVER
069-1024-34	VHF TRANSCEIVER/NAVIGATION RECEIVER
069-1024-35	VHF TRANSCEIVER/NAVIGATION RECEIVER
069-1024-39	VHF TRANSCEIVER/NAVIGATION RECEIVER
069-1025-25	TRANSCEIVER
07031-94123-7	VOLTAGE REGULATOR
071-01507-1301	CONTROL PANEL
071-01507-6503	CONTROL PANEL
071-1041-01	VOLTAGE CONVERTER
071-1215-70	COMM CONTROL UNIT
071-1242-01	SLAVING ACCESSORY
071-1276-11	CONTROL PANEL
071-1282-38	VHF COMM TRANSCEIVER
071-1283-27	NAV CONTROL
071-1284-09	ADF CONTROL
07148-11126-2	CONTROL UNIT
07639-1152-12A	VOLTAGE REGULATOR
07639-CSV1829-7	VOLTAGE REGULATOR
099-799-150	SEARCHLIGHT
10035-11424	ALTIMETER
101627-01696	ALTIMETER

101720-01546	ALTIMETER
101735-01455	ALTIMETER
101735-11807	ALTIMETER
102-0051-02	GYRO HORIZON
102200-11829	ENCODING ALTIMETER
102200-11850	ALTIMETER
103-0022-01	DIRECTIONAL GYRO
103-0023-01	DIRECTIONAL GYRO
10355N04T00	ITT INDICATOR
10355N07T00	ITT INDICATOR
10446N02W00	TORQUE INDICATOR
10450-31327	ALTIMETER
105-90871	FUEL PRESSURE INDICATOR
105-90872	OIL TEMPERATURE INDICATOR
105-90873	TRIPLE OIL PRESSURE INDICATOR
105-90880	AIRSPEED INDICATOR
105-90942	TOT INDICATOR
105-90947	TOT INDICATOR
105-93921	ANTI-ICE LINEAR ACTUATOR
10611T03Y00	FUEL PROBE
10612B01Y02	FUEL SIGNAL CONDITIONER
10612B01Y03	FUEL SIGNAL CONDITIONER
1100-28LS	GYRO
1106P89	PRESSURE SWITCH
111302-5	H.S.I.
111303-4	ADI
115.201-4	SIGNAL CONDITIONER
117-61312-03	SWITCH
117-64151-03	FUEL BOOST PUMP
117-64152-03	FUEL QUANTITY TRANSMITTER
117-69005-03(H5)	DUAL TORQUE INDICATOR
117-902101	N1 INDICATOR
117-92031-03	LIGHT CONTROL UNIT
117-92031-07	LIGHT CONTROL UNIT
117-92039-03	POWER SUPPLY
117-94042-03	AIRSPEED INDICATOR
117-940471	AIRSPEED INDICATOR
117-94053-03	TRIPLE TACH INDICATOR
117-94054-01	FUEL QUANTITY INDICATOR
117-94056-03	GAS PRODUCER TACHOMETER
117-940691	DUAL TORQUE INDICATOR
122Y025	OIL TEMPERATURE & PRESSURE INDICATOR
122Y026	OIL TEMPERATURE & PRESSURE INDICATOR
1234T100-3TZ	TURN & BANK INDICATOR

124.013	TEMPERATURE & PRESSURE INDICATOR
124.014	OIL TEMPERATURE & PRESSURE INDICATOR
124.039	DUAL AMMETER
124.04	VOLTMETER
124.041-1	OIL TEMPERATURE & PRESSURE INDICATOR
124.041-12	OIL TEMPERATURE & PRESSURE INDICATOR
124.044	FUEL PRESSURE INDICATOR
124.1013-1	OIL TEMPERATURE & PRESSURE INDICATOR
124.1013-2	OIL TEMPERATURE & PRESSURE INDICATOR
124.1014-2	FUEL PRESSURE AND LOAD INDICATOR
124.115-3	TEMPERATURE & PRESSURE INDICATOR
124.244-102	VOLTMETER
124.273-5	TEMPERATURE & PRESSURE INDICATOR
124.439	TRANSMISSION OIL PRESSURE INDICATOR
124.44	FUEL QUANTITY INDICATOR
124.443	DC AMMETER
124.444-10	T.O.T. INDICATOR
124.444-12	T.O.T. INDICATOR
124.55	TEMPERATURE & PRESSURE INDICATOR
124L039-6	DUAL AMMETER
124Q1348	FUEL QUANTITY INDICATOR
124T1340	ITT INDICATOR
1301-2001	ALTIMETER
1372-1-5	RPM LIMIT DETECTOR
1394T100-7Z	TURN & SLIP INDICATOR
140100-01-01	ATTITUDE INDICATOR
141-20339-001	ANNUNCIATOR PANEL
152C2D	TEMPERATURE INDICATOR
152HL2W	T.O.T INDICATOR
1564T100-5	ACTUATOR
1564T100-9	LINEAR ACTUATOR
1589-1-F	VOLTAGE REGULATOR
160SG139Q-2	STARTER GENERATOR
16340-4	VOLTAGE REGULATOR
16340-473-1	VOLTAGE REGULATOR
1783755-645	GYRO COMPASS INDICATOR
18-1732-1	COURSE INDICATOR
1977-1	LAMP DIMMER
1978191-1	ATTITUDE INDICATOR
19A2501	FAN
19A827	FAN
1C64-1	FUEL BOOST PUMP
20015-11187	AIRSPEED INDICATOR
20020-11212	AIRSPEED INDICATOR

20020-11365	AIRSPEED INDICATOR
20020-11388	AIRSPEED INDICATOR
20022-0000-0105	FUEL PROBE
20036-0000-0102	FUEL PROBE
20042-0000-01	FUEL PROBE
200-914-002	FUEL QUANTITY INDICATOR
200DC	DIRECTIONAL GYRO
200DC(28)	DIRECTIONAL GYRO
200DC(28)L	DIRECTIONAL GYRO
200DC(BELL)	DIRECTIONAL GYRO
200DCBELL	DIRECTIONAL GYRO
200DCL	DIRECTIONAL GYRO
200DCL(28)	DIRECTIONAL GYRO
200DCL28	DIRECTIONAL GYRO
203-022-008	OIL TEMPERATURE INDICATOR
204-001-376-003	MAGNETIC BRAKE
204-001-376-3	MAGNETIC BRAKE
204-060-762-001	ACTUATOR
204-060-762-1	ACTUATOR
204-060-762-103	ACTUATOR
204-070-907-103	WIPER MOTOR & CONVERTER
204-070-907-104	WIPER MOTOR & CONVERTER
205-060-606-003	FUEL PUMP
205-060-606-3	FUEL PUMP
205-061-635-005	FUEL FLOW SWITCH
205-061-635-5	FUEL FLOW SWITCH
205-072-277-009	AIR MIXING VALVE
205-072-277-9	AIR MIXING VALVE
205-075-388-15	RPM LIMIT DETECTOR
205-1BL	DIRECTIONAL GYRO
205-7BL	DIRECTIONAL GYRO
206-062-627-003	TACH GENERATOR
206-062-627-3	TACH GENERATOR
206-062-687-101	FUEL BOOST PUMP
206-062-721-011	ACTUATOR
206-062-721-109	ACTUATOR
206-062-721-11	ACTUATOR
206-062-721-113	ACTUATOR
206-062-721-115	ACTUATOR
206-062-721-117	LINEAR ACTUATOR
206-063-633-101	FUEL QUANTITY INDICATOR
206-063-633-103	FUEL QUANTITY INDICATOR
206-063-656-001	FUEL QUANTITY TANK UNIT
206-063-656-005	FUEL QUANTITY TRANSMITTER

206-063-656-1	FUEL QUANTITY TANK UNIT
206-063-656-5	FUEL QUANTITY TRANSMITTER
206-064-618-001	FUEL QUANTITY TANK UNIT
206-064-618-1	FUEL QUANTITY TANK UNIT
206-064-635-101	FUEL QUANTITY TANK UNIT
206-070-265-007	DUAL TACH INDICATOR
206-070-265-5	DUAL TACH INDICATOR
206-070-265-7	DUAL TACH INDICATOR
206-070-266-009	TACHOMETER
206-070-266-9	TACHOMETER
206-070-267-009	TEMPERATURE INDICATOR
206-070-267-011	T.O.T INDICATOR
206-070-267-9	TEMPERATURE INDICATOR
206-070-274-005	TURN & SLIP INDICATOR
206-070-274-101	TURN & SLIP INDICATOR
206-070-274-5	TURN & SLIP INDICATOR
206-070-278-005	VERTICAL SPEED INDICATOR
206-070-278-5	VERTICAL SPEED INDICATOR
206-070-307-1A	OIL TEMPERATURE INDICATOR
206-070-307-3A	DC AMMETER
206-070-307-4A	FUEL QUANTITY INDICATOR
206-070-320-003	ATTITUDE GYRO
206-070-320-3	ATTITUDE GYRO
206-070-473-001	INSTRUMENT CLUSTER
206-070-473-1	INSTRUMENT CLUSTER
206-070-475-005	FAN
206-070-475-5	FAN
206-070-493-001	BEARING HEADING INDICATOR
206-070-493-1	BEARING HEADING INDICATOR
206-070-990-001	VERTICAL SPEED INDICATOR
206-070-990-1	VERTICAL SPEED INDICATOR
206-075-185-001	TORQUE INDICATOR
206-075-185-1	TORQUE INDICATOR
206-075-185-105	TORQUE INDICATOR
206-075-186-003	DUAL INDICATOR
206-075-186-005	LOAD AND FUEL INDICATOR
206-075-186-3	DUAL INDICATOR
206-075-186-5	LOAD AND FUEL INDICATOR
206-075-187-003	DUAL INDICATOR
206-075-187-3	DUAL INDICATOR
206-075-188-1	TEMPERATURE & PRESSURE INDICATOR
206-075-188-3	TEMPERATURE & PRESSURE INDICATOR
206-075-189-001	FUEL QUANTITY INDICATOR
206-075-189-1	FUEL QUANTITY INDICATOR

206-075-190-001	TOT INDICATOR
206-075-190-1	TOT INDICATOR
206-075-447-007	VOLTAGE REGULATOR
206-075-447-3	VOLTAGE REGULATOR
206-075-447-7	VOLTAGE REGULATOR
206-075-456-101	CAUTION LIGHT ANNUNCIATOR AND CONTROL PANEL
206-075-456-7	ANNUNCIATOR PANEL
206-075-606-103	DIRECTIONAL GYRO
206-075-606-107	DIRECTIONAL GYRO
206-075-606-109	DIRECTIONAL GYRO
206-075-607-101	GYRO HORIZON
206-075-676-107	FUEL PRESSURE AND LOAD INDICATOR
206-075-677-103	OIL TEMPERATURE & PRESSURE INDICATOR
206-075-677-105	OIL TEMPERATURE & PRESSURE INDICATOR
206-075-681-103	TACHOMETER
206-075-681-115	DUAL TACH INDICATOR
206-075-681-117	DUAL TACH INDICATOR
206-075-681-121	DUAL TACH INDICATOR
206-075-681-123	DUAL TACH INDICATOR
206-075-682-001	TACHOMETER
206-075-682-1	TACHOMETER
206-075-682-109	GAS PRODUCER TACHOMETER
206-075-705-1	OIL TEMPERATURE & PRESSURE INDICATOR
206-075-706-001	TRANSMISSION OIL PRESSURE INDICATOR
206-075-706-1	TRANSMISSION OIL PRESSURE INDICATOR
206-075-707-001	FUEL QUANTITY INDICATOR
206-075-707-1	FUEL QUANTITY INDICATOR
206-075-708-1	TURBINE OUTLET TEMPERATURE
206-075-710-001	DC AMMETER
206-075-710-1	DC AMMETER
206-075-711-1	TORQUE INDICATOR
206-075-725-001	AIRSPEED INDICATOR
206-075-725-1	AIRSPEED INDICATOR
206-075-725-103	AIRSPEED INDICATOR
206-075-739-105	TORQUE INDICATOR
206-075-739-107	TORQUE INDICATOR
206-075-739-113	TORQUE INDICATOR
206-075-740-107	FUEL QUANTITY INDICATOR
206-075-740-113	FUEL QUANTITY INDICATOR
206-351-0001	INSTRUMENT CLUSTER
206-364-601-101	FUEL PROBE
206-373-901-103	VALVE
206-375-005-101	T.O.T. INDICATOR
206-375-009-101	T.O.T. INDICATOR

206-375-011-101	TACHOMETER
209-060-221-001	STARTER GENERATOR
209-060-221-1	STARTER GENERATOR
209-062-002-001	DIFFERENTIAL PRESSURE INDICATOR
209-062-002-1	DIFFERENTIAL PRESSURE INDICATOR
209-062-214-001	LINEAR ACTUATOR
209-062-214-1	LINEAR ACTUATOR
209-062-501-001	OIL COOLER
209-062-501-002	OIL COOLER
209-062-501-005	OIL COOLER
209-062-501-1	OIL COOLER
209-062-501-2	OIL COOLER
209-062-501-5	OIL COOLER
209-062-780-101	ACTUATOR
209-070-262-003	OIL TEMPERATURE & PRESSURE INDICATOR
209-070-262-009	OIL TEMPERATURE & PRESSURE INDICATOR
209-070-262-101	TEMPERATURE & PRESSURE INDICATOR
209-070-262-109	OIL TEMPERATURE & PRESSURE INDICATOR
209-070-262-3	OIL TEMPERATURE & PRESSURE INDICATOR
209-070-262-9	OIL TEMPERATURE & PRESSURE INDICATOR
209-070-263-003	VOLTMETER
209-070-263-009	VOLTMETER
209-070-263-3	VOLTMETER
209-070-263-9	VOLTMETER
209-070-264-003	DUAL AMMETER
209-070-264-105	DUAL AMMETER
209-070-264-3	DUAL AMMETER
209-075-326-001	RPM LIMIT DETECTOR
209-075-326-005	RPM LIMIT DETECTOR
209-075-326-1	RPM LIMIT DETECTOR
209-075-326-5	RPM LIMIT DETECTOR
209-075-652-003	TACHOMETER
209-075-652-3	TACHOMETER
209-075-663-001	VERTICAL SPEED INDICATOR
209-075-663-1	VERTICAL SPEED INDICATOR
2100904-1	BLOWER ASSY
212-030-104-101	LINK
212-040-122-101	CHIP DETECTOR
212-070-108-103	TRIPLE TACH INDICATOR
212-070-116-009	OIL TEMPERATURE & PRESSURE INDICATOR
212-070-116-9	OIL TEMPERATURE & PRESSURE INDICATOR
212-070-122-011	AIRSPED INDICATOR
212-070-122-11	AIRSPED INDICATOR
212-070-160-005	DUAL TORQUE INDICATOR

212-070-160-007	DUAL TORQUE INDICATOR
212-070-160-101	DUAL TORQUE INDICATOR
212-070-160-113	DUAL TORQUE INDICATOR
212-070-160-5	DUAL TORQUE INDICATOR
212-070-160-7	DUAL TORQUE INDICATOR
212-070-180-003	COURSE INDICATOR
212-070-180-3	COURSE INDICATOR
212-070-238-001	ALTIMETER
212-070-238-007	ALTIMETER
212-070-238-1	ALTIMETER
212-070-238-7	ALTIMETER
212-070-239-001	VERTICAL SPEED INDICATOR
212-070-239-1	VERTICAL SPEED INDICATOR
212-070-242-011	TACHOMETER
212-070-242-11	TACHOMETER
212-073-927-001	POSITIONING MOTOR
212-073-927-003	SERVO CONTROLLER
212-073-927-1	POSITIONING MOTOR
212-073-927-3	SERVO CONTROLLER
212-075-036-101	OIL TEMPERATURE & PRESSURE INDICATOR
212-075-036-107	OIL TEMPERATURE & PRESSURE INDICATOR
212-075-036-109	OIL TEMPERATURE & PRESSURE INDICATOR
212-075-037-101	TACHOMETER
212-075-037-103	GAS PRODUCER TACHOMETER
212-075-037-105	GAS PRODUCER TACHOMETER
212-075-037-109	GAS PRODUCER TACHOMETER
212-075-037-113	GAS PRODUCER TACHOMETER
212-075-037-117	GAS PRODUCER TACHOMETER
212-075-037-119	GAS PRODUCER TACHOMETER
212-075-067-105	ITT INDICATOR
212-075-067-119	ITT INDICATOR
212-075-067-123	ITT INDICATOR
212-075-139-001	LANDING LIGHT
212-075-139-1	LANDING LIGHT
212-075-418-003	ACTUATOR
212-075-418-103	PASSENGER STEP ACTUATOR
212-075-418-105	PASSENGER STEP ACTUATOR
212-075-418-107	PASSENGER STEP ACTUATOR
212-075-418-3	ACTUATOR
212-075-514-001	CLOCK
212-075-514-1	CLOCK
212-075-962-001	LIGHT DIMMER
212-075-962-1	LIGHT DIMMER
212-076-015-001	VALVE

212-076-015-1	VALVE
212-077-200-001	COMMUNICATIONS CONTROL
212-077-200-1	COMMUNICATIONS CONTROL
214-040-806-101	PRESSURE SWITCH
214-060-056-103	STARTER
214-060-056-109	STARTER
214-075-186-001	CONTROL UNIT
214-075-186-1	CONTROL UNIT
214-075-220-1	COURSE INDICATOR
214-075-222-005	TEMPERATURE & PRESSURE INDICATOR
214-075-222-5	TEMPERATURE & PRESSURE INDICATOR
214-075-239-011	TORQUE INDICATOR
214-075-239-11	TORQUE INDICATOR
214-075-244-001	RATE TRANSMITTER
214-075-244-1	RATE TRANSMITTER
214-175-249-101	GAS PRODUCER TACHOMETER
214-175-278-101	ALTIMETER
21562/475-1	VOLTAGE REGULATOR
222-366-685-101	FUEL SIGNAL CONDITIONER
222-375-010-103	LIGHT ASSEMBLY
222-375-016-101	TEMPERATURE & PRESSURE INDICATOR
222-375-018-101	OIL TEMPERATURE & PRESSURE INDICATOR
222-375-021-103	TRIPLE TACH INDICATOR
222-375-021-105	TRIPLE TACH INDICATOR
222-375-022-105	GAS PRODUCER TACHOMETER
222-375-023-103	TEMPERATURE INDICATOR
222-375-027-107	AIRSPEED INDICATOR
222-375-027-111	AIRSPEED INDICATOR
222-375-027-113	AIRSPEED INDICATOR
222-375-033-101	ATTITUDE INDICATOR
222-375-033-103	ATTITUDE INDICATOR
222-375-064-101	DUAL FUEL QUANTITY INDICATOR
222-375-067-101	RPM LIMIT DETECTOR
222-375-071-105	TRIPLE TORQUE INDICATOR
2260-1001-1	RPM LIMIT DETECTOR
22A6000	TACH GENERATOR
22A649	TACH GENERATOR
23046-020	STARTER GENERATOR
2306-556-00-10	FUEL GAUGE
2306-557-00-10	FUEL GAUGE
23081-073	STARTER GENERATOR
2309-155-00-10	VOLTMETER
2313M-20-5	WIPER MOTOR & CONVERTER
2313M-20-6	WIPER MOTOR & CONVERTER

23-501-06-3	ATTITUDE GYRO
2502-7001	FUEL QUANTITY TRANSMITTER
250F17-2	FUEL FLOW SWITCH
25140/65A238	LINEAR ACTUATOR
2579-116-1	DC VOLTMETER
2587193-43	DIRECTIONAL GYRO
2591411-444	HORIZON FLIGHT DIRECTOR
2593996-333	3 AXIS GYRO
2612-2001	OIL TEMPERATURE INDICATOR
27-19160-001	OIL TEMPERATURE & PRESSURE INDICATOR
27-66004-17	ITT INDICATOR
27-66006-1	FUEL PRESSURE INDICATOR
27-66008-5	OIL TEMPERATURE INDICATOR
27-81007-5	HYDRAULIC PRESSURE INDICATOR
27-82092-1	PITCH TRIM INDICATOR
284356-0001	VALVE
2A10001G	STATIC INVERTER
2C27-3	FUEL CARTRIDGE
2CM272B1	STARTER
30-231	SMOKE DETECTOR
3045478-01	TRIM COMPENSATOR
3057-169-2	DUAL TORQUE INDICATOR
3057-3-136-6	TORQUE INDICATOR
3080-201-2	DUAL TORQUE INDICATOR
3100-2003	ENGINE OIL PRESSURE INDICATOR
3101-3001	TORQUE INDICATOR
31230-1127	VERTICAL SPEED INDICATOR
31300-0101-0111	C-5000 COMMUNICATIONS MANAGEMENT UNIT
31-3172-11	STROBE LIGHT
32005-007	TACH GENERATOR
32005-023	TACH GENERATOR
32005-037	TACH GENERATOR
3208-2002	FUEL QUANTITY INDICATOR
3252011-0101	ENCODING ALTIMETER
331A-3G	COURSE INDICATOR
339F-12	DME INDICATOR
34090-402	AIRSPEED INDICATOR
34670-102	VERTICAL SPEED INDICATOR
35060-1122	VERTICAL SPEED INDICATOR
3567411-1502	PRESSURE TRANSMITTER
3567411-6003	PRESSURE TRANSMITTER
356F-3	SPEAKER AMPLIFIER
356H2802	POWER SUPPLY
3571251-9119	TEMPERATURE INDICATOR

3571251-9122	GAS PRODUCER TACHOMETER
3571251-9131	ITT INDICATOR
3571262-2301	TACHOMETER
3571262-5108	TACHOMETER
3571262-5109	TACHOMETER
369A4516	TACHOMETER INDICATOR
36D831711G4	STARTER
3706-2001	DC AMMETER
374GC01Y	MASTER ELECTRICAL BOX
37500-0841	ALTIMETER
37500-220	ALTIMETER
37500-2241	ALTIMETER
3809357-2	TURBINE OUTLET TEMPERATURE
3809400-2	TACHOMETER
38210-490	VERTICAL SPEED INDICATOR
38399-490	AIRSPEED INDICATOR
384178-091	FUEL SELECTOR SWITCH
391046-197	FUEL PROBE
391046-200	FUEL PROBE
393008-040	FUEL QUANTITY INDICATOR
393008-046	FUEL QUANTITY INDICATOR
3932241-9002	DUAL FUEL QUANTITY INDICATOR
3941213-9003	GAS PRODUCER TACHOMETER
3943333-9002	TRIPLE TACH INDICATOR
39600-5241	ENCODING ALTIMETER
400-0098-000	TRANSCEIVER
400-0102-000	TRANSCEIVER
400-0103-000	TRANSCEIVER
400-0103-002	TRANSCEIVER
400-0106-001	CONTROL UNIT
400-0106-010	CONTROL UNIT
400-012785-00	TRANSCEIVER
400-012785-02	TRANSCEIVER
400-014525-00	TRANSCEIVER
4000504-0301	ANTENNA DRIVE
40-0100-3	STROBE LIGHT
4012-1003	VOLTMETER
4020936-902	TARSYN 3 AXIS GYRO
4021541-671	HORIZON GYRO
4025008-918	COMPUTER
407-375-001-105	MGT INDICATOR
407-375-002-103	NG INDICATOR
407-375-002-105	NG INDICATOR
407-375-003-107	NG INDICATOR

407-375-003-109	TORQUE INDICATOR
407-375-004-103	OIL TEMPERATURE & PRESSURE INDICATOR
407-375-005-101	TEMPERATURE & PRESSURE INDICATOR
407-375-005-103	TEMPERATURE & PRESSURE INDICATOR
407-375-006-103	FUEL QUANTITY INDICATOR
407-375-007-105	FUEL PRESSURE/AMMETER INDICATOR
407-375-007-107	FUEL PRESSURE/AMMETER INDICATOR
407-375-008-101	DUAL TACH INDICATOR
407-375-008-107	DUAL TACH INDICATOR
407-375-011-101	FUEL PROBE
407-375-016-101	FUEL SIGNAL CONDITIONER
407-375-016-103	FUEL SIGNAL CONDITIONER
412-074-101-101	CONTROL MOTION TRANSDUCER
412-075-008-111	DUAL TORQUE INDICATOR
412-075-009-105	AIRSPEED INDICATOR
412-075-010-109	TRIPLE TACH INDICATOR
412-075-010-111	TRIPLE TACH INDICATOR
412-075-101-101	INVERTER
412-375-001-105	FUEL QUANTITY INDICATOR
412-375-007-101	TRIPLE TORQUE INDICATOR
412-375-007-103	TRIPLE TORQUE INDICATOR
412-375-007-105	TRIPLE TORQUE INDICATOR
412-375-007-107	TRIPLE TORQUE INDICATOR
412-375-007-109	TRIPLE TORQUE INDICATOR
412-375-007-111	TRIPLE TORQUE INDICATOR
412-375-007-113	TRIPLE TORQUE INDICATOR
412-375-007-117	TRIPLE TORQUE INDICATOR
418-00061	PRESSURE TRANSMITTER
418-00529-102	TRIM ACTUATOR
41850A17-4580	SEARCH LIGHT
4300-8170-1L	ATTITUDE INDICATOR
4300-8220L	GYRO HORIZON
4300-8765-1L	ATTITUDE INDICATOR
4308-3018	TORQUE INDICATOR
4308-3058	TORQUE INDICATOR
4310-3005	TORQUE INDICATOR
44090-0941-02	AIRSPEED INDICATOR
446000275	VERTICAL SPEED INDICATOR
446000458-00	VERTICAL SPEED INDICATOR
449-2	LIGHT POWER SUPPLY
45-0128-3	SEARCHLIGHT
453-0422-366	ELT
46700-01	VERTICAL SPEED INDICATOR
473203-003	FUEL SIGNAL CONDITIONER

473215-001	FUEL SIGNAL CONDITIONER
488069366	FUEL SELECTOR SWITCH
488069366-00	FUEL SELECTOR SWITCH
5000B-9	ATTITUDE GYRO
5006-1036	TOT INDICATOR
501-1210-01	VERTICAL GYRO
501-1224-02	VERTICAL GYRO
501-1874-06	ATTITUDE INDICATOR
501-1874-09	ATTITUDE INDICATOR
5021-3001	TOT INDICATOR
5032-3001	T.O.T. INDICATOR
5035P2-P13	ALTIMETER
5035P2-P44	ENCODING ALTIMETER
5035PB-P57	ALTIMETER
504-0017-901	GYRO HORIZON
504-0017-907	GYRO HORIZON
504-0017-926	GYRO HORIZON
504-0031-914	GYRO HORIZON
504-0032-902	GYRO HORIZON
504-0045-901	GYRO HORIZON
504-0045-902	GYRO HORIZON
504-0045-904	GYRO HORIZON
504-0111-932	ATTITUDE GYRO
505-0002-904	DIRECTIONAL GYRO
505-0010-902	DIRECTIONAL GYRO
505-0017-904	DIRECTIONAL GYRO
505-0031-903	DIRECTIONAL GYRO
505-0031-904	DIRECTIONAL GYRO
505-0031-930	DIRECTIONAL GYRO
505-2B	GYRO HORIZON
509-0004-901	TURN & SLIP INDICATOR
510-1A	GYRO HORIZON
510-1G	GYRO HORIZON
510-27N	GYRO HORIZON
510-35A	GYRO HORIZON
510-35B	GYRO HORIZON
510-35D	GYRO HORIZON
510-7A	GYRO HORIZON
51509-002	VOLTAGE REGULATOR
5201351000	BEARING HEADING INDICATOR
5201351-007	BEARING HEADING INDICATOR
5205160-006	COURSE INDICATOR
5209130-003	H.S.I.
5209130004	H.S.I.

5209130-004	H.S.I.
5209137-004	H.S.I.
522-2638-007	COURSE INDICATOR
522-2866-000	ISOLATION AMPLIFIER
522-2867-000	SPEAKER AMPLIFIER
522-4414-050	COURSE INDICATOR
5306-155-00-10	OIL TEMPERATURE & PRESSURE INDICATOR
5306-255-00-11	OIL TEMPERATURE INDICATOR
5309-155-00-11	FUEL PRESSURE INDICATOR
5448-709-91-11	N1 INDICATOR
550-34670-102	VERTICAL SPEED INDICATOR
5550-8465N1L	TURN & SLIP INDICATOR
5550-9235N1L	TURN & BANK INDICATOR
5560-8165N1L	TURN & BANK INDICATOR
55670	LIGHT DIMMER
5626-522-0	TEMPERATURE INDICATOR
5626-524-00-00	TEMPERATURE INDICATOR
5626-525-0	TEMPERATURE INDICATOR
5626-555-00-11	TEMPERATURE INDICATOR
563-031	OIL TEMPERATURE & PRESSURE INDICATOR
5633-707-80-12	NG SPEED AND LIMIT INDICATOR
56515-2	ITT INDICATOR
5707-3002	FUEL QUANTITY INDICATOR
5707-3027	FUEL QUANTITY INDICATOR
5802-3060	AIRSPEED INDICATOR
5934-1	ALTIMETER
5934P-1	ALTIMETER
5934P-A56	ALTIMETER
5934PD-3	ALTIMETER
5A16.22.20K.05.1.AU	AIRSPEED INDICATOR
60-2885-1	POWER SUPPLY
605-1	RPM LIMIT DETECTOR
61015-007-1	DUAL TORQUE INDICATOR
6110-00-138-8687	VOLTAGE REGULATOR
618-17250	AMMETER
622-1204-003	RADAR ALTIMETER
622-1270-001	TRANSPONDER
622-1879-001	VHF TRANSCEIVER
622-1879-002	VHF20A
622-2078-001	VHF251
622-2080-011	NAVIGATION INDICATOR
622-2175-001	DME INDICATOR
622-3672-001	DME INDICATOR
622-6389-011	TRANSCEIVER

6340-01-087-2792	SMOKE DETECTOR
64251-903-1	PRESSURE TRANSMITTER
64550-023-1	TACH GENERATOR
64751-003-2	FUEL PROBE
64751-003-3	FUEL PROBE
64818-012-1	OIL TEMPERATURE INDICATOR
6501-1006	TACHOMETER INDICATOR
6502-1001	DUAL TACH INDICATOR
6502-3010	DUAL TACH INDICATOR
6503A-3101	GAS PRODUCER TACHOMETER
6505A-3053	TRIPLE TACH INDICATOR
65-0878-3	LIGHT ASSEMBLY
65A173	ACTUATOR
65A181	ACTUATOR
65A192	ACTUATOR
65A237	ACTUATOR
65A238	LINEAR ACTUATOR
6601-1004	VERTICAL SPEED INDICATOR
6625-01-046-1435	DC AMMETER
6680-00-179-2251	FUEL QUANTITY INDICATOR
6685-01-036-6894	TURBINE OUTLET TEMPERATURE
672379-103	PRESSURE INDICATOR
7000299-901	HELIPILOT CONTROLLER
7000299-903	HELI PILOT CONTROLLER
7000466-915	ATTITUDE DIRECTOR INDICATOR
7000605-901	FLIGHT DIRECTOR MODE SELECTOR
7000839-902	RADIO ALTIMETER
7000839-904	RADIO ALTIMETER
7001840-934	RADIO ALTIMETER
7002353-902	AIR DATA SENSOR
700348-15	RPM LIMIT DETECTOR
7007700-706	RADAR INDICATOR
704A43-230-006	TRIM MOTOR ACTUATOR
704A37-633-008	OIL TEMPERATURE INDICATOR
704A37-644-004	FUEL PRESSURE INDICATOR
704A37-650-099	FUEL GAUGE
704A37-650-100	FUEL GAUGE
704A46-814-049	LIGHT DIMMER
704A47-111-037	VERTICAL SPEED INDICATOR
704A-47611-014	TACH GENERATOR
704A47-612-052	N ROTOR INDICATOR
704A47-612-063	DUAL TACHOMETER
704A47-612-113	NG SPEED AND LIMIT INDICATOR
704A47-612-120	N/ROTOR INDICATOR

704A47-616-013	TRIPLE TACH INDICATOR
704A-47-620-019	PRESSURE TRANSMITTER
704A-47-621-089	DUAL TORQUE INDICATOR
704A47-632-038	TEMPERATURE INDICATOR
704A47-632-066	TEMPERATURE INDICATOR
704A-47-633-047	OIL TEMPERATURE INDICATOR
704A-47-651-012	FUEL PROBE
7060C.20	VERTICAL SPEED INDICATOR
7125-1	RATE TRANSMITTER
7125-2	RATE TRANSMITTER
7160C130	VERTICAL SPEED INDICATOR
7185-1	ACTUATOR
73-118-1	FUEL PROBE
739U-03	AIRSPEED INDICATOR
7582-175-00-12	DUAL TACHOMETER
7582-175-00-12X	DUAL TACH INDICATOR
76450-01076-110	INDICATOR N1
76450-01078-112	OIL TEMPERATURE INDICATOR
7813-175-00-13	TRIPLE TACH INDICATOR
7813-175-00-13X	TRIPLE TACH INDICATOR
78200000-03	TRIPLE TACH INDICATOR
78200000-04	TRIPLE TACH INDICATOR
78300000-05	TRIPLE TORQUE INDICATOR
8000B.336	AIRSPEED INDICATOR
8000B.751	AIRSPEED INDICATOR
8000B.860	AIRSPEED INDICATOR
8000-BH5	AIRSPEED INDICATOR
80-0381-3	CAUTION LIGHT ANNUNCIATOR AND CONTROL PANEL
8107-101-00-12	PRESSURE SENSOR
811B	CLOCK
83000-00501	LIGHT CONTROL UNIT
83000-00502	LIGHT CONTROL UNIT
83000-01402	POWER SUPPLY
83-104-1	FUEL QUANTITY INDICATOR
843-67-6	VERTICAL SPEED INDICATOR
843-67-6-R	VERTICAL SPEED INDICATOR
8DJ1201-WAA	DUAL TACH INDICATOR
8DJ120AAP1	DUAL TACH INDICATOR
8DJ148WAF-1	TACHOMETER
8DJ150WAG1	TACHOMETER
8DJ173LWD1	OIL QUANTITY INDICATOR
8DJ181LVH4	TACHOMETER
8DJ67-FAF-1	DUAL TACHOMETER
8DJ81WBS4	TACHOMETER

8G1247-1	SWITCH
90080006-08	MGT INDICATOR
90090003-01	NG INDICATOR
9009-3004	TEMPERATURE & PRESSURE INDICATOR
9009-3009	DUAL INDICATOR
9009-3010	TEMPERATURE & PRESSURE INDICATOR
9016-3002	DUAL INDICATOR
9016-3003	LOAD AND FUEL INDICATOR
9032-1003	FUEL QUANTITY INDICATOR
903BD	GYRO HORIZON
903BD-V2	GYRO HORIZON
903BD-V6	GYRO HORIZON
9050-2001	OIL TEMPERATURE & PRESSURE INDICATOR
9133-25-B1	FUEL TRANSMITTER
91D74-1	SERVO CONTROLLER
91D75-1	POSITIONING MOTOR
92DR147	DIFFERENTIAL PRESSURE INDICATOR
930-500-50-1	SEARCH LIGHT
9550AN.589	TURN & SLIP INDICATOR
9599-607-18503	TRANSCEIVER
96774-18-1874	COURSE INDICATOR
9696	MOTOR
9813-25-05	DUAL TORQUE INDICATOR
9813-25-07	DUAL TORQUE INDICATOR
9813-25-17	DUAL TORQUE INDICATOR
9813-25-21	DUAL TORQUE INDICATOR
A301-6W	COMMUNICATIONS CONTROL
A5930-02	TURN & SLIP INDICATOR
A607SP-1	CHIP DETECTOR
AA95-863 TSO	AUDIO CONTROLLER
AA95-913N	AUDIO CONTROLLER
AAU-31/A	ALTIMETER
AAU-32/A	ENCODING ALTIMETER
AD-650H	ATTITUDE DIRECTOR INDICATOR
AI-360	ATTITUDE INDICATOR
AMS43TSO	SINGLE CHANNEL AUDIO CONTROLLER
AR-209-4	FUEL FLOW INDICATOR
ASH450-1	INVERTER
ASH584-5	STATIC INVERTER
AV24B1119B	MOTOR DRIVEN VALVE
AW1842BA03	TORQUE INDICATOR
AW1842BA06	TORQUE INDICATOR
AW2842AH01	TORQUE INDICATOR
AZ-649	AIR DATA SENSOR

B4515210002	ENCODING ALTIMETER
B4553110004	ALTIMETER
B4553110104	ALTIMETER
C-1000	CONTROL UNIT
C-14D	DIRECTIONAL GYRO
C2300-DL4-B	COMPASS
C35D10	AIR MIXING VALVE
C-5000	C-5000 COMMUNICATIONS MANAGEMENT UNIT
C661071-0101	ALTIMETER
CH251-01F	NAT RT
CH303-0F3	TAC / COM
CH310-000	TAC /COM
CM2645L1	FUEL QUANTITY GAGE
CSV1829-3	VOLTAGE REGULATOR
D107318E	FUEL PUMP
D107319	FUEL BOOST PUMP
D2206104004	ALTIMETER
DK040	PRESSURE TRANSMITTER
DK042	PRESSURE TRANSMITTER
DK433	FUEL PRESSURE INDICATOR
DK433-40	FUEL PRESSURE INDICATOR
DK449-40	TRIPLE OIL PRESSURE INDICATOR
DK453	PRESSURE INDICATOR
DK504	DUAL TORQUE INDICATOR
DK504-39	DUAL TORQUE INDICATOR
DL401-14	DUAL TACH INDICATOR
DL401-15	DUAL TACH INDICATOR
DL401-17	DUAL TACH INDICATOR
DL401-18	DUAL TACH INDICATOR
DL404-109	TRIPLE TACH INDICATOR
DL404-38	TRIPLE TACH INDICATOR
DL404-7	TRIPLE TACH INDICATOR
DL412-39	TACHOMETER
DL412-40	GAS PRODUCER TACHOMETER
DL412-55	GAS PRODUCER TACHOMETER
DL412-62	TACHOMETER
DL412-63	GAS PRODUCER TACHOMETER
DL412-64	GAS PRODUCER TACHOMETER
DL412-65	GAS PRODUCER TACHOMETER
DL412-66	GAS PRODUCER TACHOMETER
DL412-70	GAS PRODUCER TACHOMETER
DL439	DUAL TACH INDICATOR
DST1017-25	ITT INDICATOR
DT409-10	TRIPLE TORQUE INDICATOR

DT409-11	TRIPLE TORQUE INDICATOR
DT409-13	TRIPLE TORQUE INDICATOR
DT409-3	TRIPLE TORQUE INDICATOR
DT409-4	TRIPLE TORQUE INDICATOR
DT409-6	TRIPLE TORQUE INDICATOR
DT409-8	TRIPLE TORQUE INDICATOR
DT409-9	TRIPLE TORQUE INDICATOR
DT410-3	DUAL TORQUE INDICATOR
DT501-7	DUAL TORQUE INDICATOR
E1070-2	POWER MODULE
EA470-3587	FUEL PROBE
ERT-160	TRANSCEIVER
FM504	AIRSPEED INDICATOR
FM504-39	AIRSPEED INDICATOR
FM504-40	AIRSPEED INDICATOR
FM504-50	AIRSPEED INDICATOR
FZ-702	FLIGHT DIRECTOR MODE SELECTOR
G5400-15	LANDING LIGHT
G5400-6	LANDING LIGHT
G6250-1	SEARCH LIGHT
G6250-4	SEARCH LIGHT
G6250-5	SEARCH LIGHT
G8385-1	SEARCH LIGHT
G8385-7	LANDING LIGHT
GEU-7/A	TACH GENERATOR
H140CWM	GYRO HORIZON
H321FCM	GYRO HORIZON
HAS902-00028-01	APC CONTROL PANEL
HZ-444	HORIZON FLIGHT DIRECTOR
ID1347CARN-82	COURSE INDICATOR
ID1351/A	BEARING HEADING INDICATOR
ID-1351D/A	BEARING HEADING INDICATOR
IND-451	DME INDICATOR
IPT-70RT1-1000-250G	PRESSURE TRANSDUCER
KA39	VOLTAGE CONVERTER
KA51B	SLAVING ACCESSORY
KAA1803LU/0/1	ALTIMETER
KCA-0105W	COMPASS
KCA0113W	COMPASS
KDM705A	DME RECEIVER
KDM706A	DME TRANSCEIVER
K-DW-02	RPM WARNING BOX
KEA129	ALTIMETER
KFS564A	NAV CONTROL

KFS576A	CONTROL PANEL
KFS578A	CONTROL PANEL
KFS586A	ADF CONTROL
KFS598	COMM CONTROL UNIT
KFS598A	VHF COMM TRANSCEIVER
KG102A	DIRECTIONAL GYRO
KI227	ADF INDICATOR
KI250	RADAR ALTIMETER INDICATOR
KI525A	H.S.I
KMA24H	ISOLATION AMPLIFIER
KMD540	MULTI FUNCTION DISPLAY
KNI416	RADAR ALTIMETER
KNI582	RADIO MAGNETIC INDICATOR
KNR634	NAVIGATION RECEIVER
KR87	ADF RECEIVER
KS272C	TRIM SERVO
KSG105	DIRECTIONAL GYRO
KSM575	ACTUATOR
KT76A	TRANSPONDER
KTR905	VHF COMM TRANSCEIVER
KTR908	VHF COMM TRANSCEIVER
KWX-58	RADAR INDICATOR
KX155	VHF TRANSCEIVER/NAVIGATION RECEIVER
KX155A	VHF TRANSCEIVER/NAVIGATION RECEIVER
KX165	TRANSCEIVER
KXP756	TRANSPONDER
KY196	VHF COMM TRANSCEIVER
KY196A	VHF COMM TRANSCEIVER
LA11A2121-1	ACTUATOR
LA11A2129	PASSENGER STEP ACTUATOR
LA11A2129-1	PASSENGER STEP ACTUATOR
LT-50	LIGHT DIMMER
MD41-448	GPS ANN. CONTROL UNIT
MML-0C19AT	ITT INDICATOR
MP498-3	MAGNETIC BRAKE
MS18071-12	VOLTAGE REGULATOR
MS28045T1	AIRSPEED INDICATOR
N301A-000	AUDIO CONTROL BOX
NTX138-000	NAT VHF FM TRANSCEIVER
PA 110	PA AMP
PC-12VR	STATIC INVERTER
PC-251-123A	STATIC INVERTER
PC-702	HELIPILOT CONTROLLER
PF240-N3	FUEL QUANTITY INDICATOR

PF537-N2	FUEL QUANTITY TRANSMITTER
PS304-1	INVERTER
R460M15-11	MAGNETIC BRAKE
RA-315	RADIO ALTIMETER
RA-335	RADIO ALTIMETER
RC30VIL	VERTICAL SPEED INDICATOR
RC30VIL4	VERTICAL SPEED INDICATOR
RCA15BK-1	DIRECTIONAL GYRO
RCA15BK-2	DIRECTIONAL GYRO
RCA25C2	ATTITUDE GYRO
RCA26BK-2	GYRO HORIZON
RG12240D	FUEL PUMP
RT-138	TRANSCEIVER
RT-138F	TRANSCEIVER
RT-30	TRANSCEIVER
RT-300	RADIO ALTIMETER
RT-406	TRANSCEIVER
RT-406F	TRANSCEIVER
RT-450	TRANSCEIVER
S-15-KA	AIRSPEED INDICATOR
S15KLIR11	AIRSPEED INDICATOR
S-218-2	HYDRAULIC PRESSURE INDICATOR
SEL-O19DR	T.O.T. INDICATOR
SEL-OC29CF	INDICATOR N1
SLZ8126	VERTICAL SPEED INDICATOR
SP711	COMPUTER
SPC-30	STATIC INVERTER
SPC30B	STATIC INVERTER
SPS-1307	STATIC INVERTER
SPS-206	STATIC INVERTER
ST-4H	OIL PRESSURE TRANSMITTER
SYLC50114	LINEAR ACTUATOR
SYLC50228-1	ACTUATOR
SYLC50228-3	PASSENGER STEP ACTUATOR
SYLC9190-10	ACTUATOR
TGH-11-HS-4	TRANSMITTER
TH250-2FF	FLEX COMM
TH260-2ZZ	FM TACTICAL COM
TM410	OIL TEMPERATURE INDICATOR
TM410-40	OIL TEMPERATURE INDICATOR
TM420	TOT INDICATOR
TM427-40	TOT INDICATOR
TS100WR	SPEAKER
VG-208C	VERTICAL GYRO

VHF 20A	VHF20A
VHF-21A	TRANSCEIVER
VHF251	VHF251
VIR351	NAVIGATION INDICATOR
VM-450-6-L	VARIOMETER
VR1530-3	VOLTAGE REGULATOR
VT089-1	FUEL PROBE
VT426	FUEL QUANTITY INDICATOR
VT426-1	FUEL QUANTITY INDICATOR
VT426-39	FUEL QUANTITY INDICATOR
VT426-40	FUEL QUANTITY INDICATOR
VT426-41	FUEL QUANTITY INDICATOR
VT476-2	FUEL QUANTITY INDICATOR
WL/1101AM/MS/2	ENCODING ALTIMETER
WA310	AIRSPEED INDICATOR
W-33-7511-10	CLOCK
W33-7510-10ET	CLOCK
VT484-4	FUEL QTY INDICATOR
VT476-2	FUEL QTY INDICATOR
VT426-41	FUEL QTY INDICATOR
VT426-40	FUEL QTY INDICATOR
VT426-39	FUEL QTY INDICATOR
VT426-1	FUEL QTY INDICATOR
VT426	FUEL QTY INDICATOR
VT108-2	LOW LEVEL SWITCH
VT089-1	FUEL QUANTITY TRAN
VT087-1	FUEL QUANTITY TRAN
VM450-6L	VSI
TS100WR	SPEAKER
TS100A	SPEAKER
TRA-3000	RADAR ALTIMETER ANT
TM427-40	TOT INDICATOR
TM420	TOT INDICATOR
TM410-53	TEMP IND
TM410-40	OIL TEMP INDICATOR
TM410-39	OIL TEMP INDICATOR
TM410	OIL TEMP INDICATOR
TH450-2FFFJ	FLEXCOM
TH260-2ZZ	FM TACTICAL COM
TH250-2UN	FM COMM
TH250-2FF	FLEX COMM
TGH-11-HS-4	TRANSMITTER
SYLC50228-3	LINEAR ACTUATOR
ST-4H	OIL PRESSURE TRANS

SPS-750	INVERTER
SPS-206	STATIC INVERTER
SPS-1307	STATIC INVERTER
SPC-5	STATIC INVERTER
SPC30B	STATIC INVERTER
SPC-30	STATIC INVERTER 300
SPC-10(W)	STATIC INVERTER
SLZ9125A	VERTICAL SPEED IND
SLZ8126	VERTICAL SPEED INDIC
SEL-OC29CF	TACH
S-218-2	HYD. PRESSURE GAUGE
S-15-KAW	AIRSPEED INDICATOR
S-15-KA	AIRSPEED INDICATOR
S12-19M01-001*	TABLET ARM
RS16-001	RELAY
RG12240D	FUEL BOOSTER PUMP
RCA26BK-2	GYRO, ATTITUDE
RCA26BK-12	GYRO HORIZON
RCA15BK-2	DIRECTIONAL GYRO
RCA15BK-1	DIRECTIONAL GYRO
RCA11-4	DIRECTIONAL GYRO IND
RC-30-VIL	VERTICAL SPEED INDIC
PS304-1	STATIC INVERTER
PF240-N4	FUEL QTY INDICATOR
PF240-N3	FUEL QTY INDICATOR
PC-12VR	DC TO DC CONVERTER
PA 110	PA AMP
NTX138-050	VHF FM TRANSCEIVER
NTX138-000	NAT VHF FM TRANS
NABO 17 ES	CLOCK
MS28009-1	GAUGE, OIL TEMPERATU
MS18071-12	VOLTAGE REGULATOR
MI-592100	VHF NAV SYSTEM
MI-585202	RADAR ANTENNA
MI-585201-1	RADAR INDICATOR
MI-585200	RECEIVER TRANS.
MI-585073-3	VHF NAV SYSTEM
MI-585072-3	VHF NAV SYSTEM
MI-585002	RMI CONVERTER
MD41-448	GPS ANN. CONTROL
M803B-2-0/5V-BATT	CLOCK
LT-370	MULTIPLE LIGHT DIM
LE46-1	ALTIMETER ENCODING
LA11A2129-1	LINEAR ACTUATOR

L334M3820101	LANDING LIGHT
K-DW-02	RPM WARNING BOX
KCA0113W	STANDBY COMPASS
KCA0105W	COMPASS
KAA1803LU/0/1	ALTIMETER
JB153-07	CLOCK
IPT-70RT1-1000-250G	PRESSURE SENSOR
IPT-20RT1-1000-80G	PRESSURE TRANSDUCER
IFR5-12-8	INDICATOR
HAS902-00028-01	APC 854 CONTROL PNL
H321FCM	GYRO HORIZON
H140CWM	GYRO HORIZON
H140BAM2	GYRO HORIZON
G991-01-1C	VERTICAL SPEED
G991-01-10	VERTICAL SPEED
G8385-7	LANDING LIGHT
G8385-1	SEARCH LIGHT
G-6250-5	SEARCH LIGHT
G-6250-4	SEARCH LIGHT
G-6250-1	SEARCH LIGHT
G5400-6	LANDING LIGHT
FM504-50	AIRSPEED
FM504-40	AIRSPEED
FM504-39	AIRSPEED
FM504	AIRSPEED
FA979AA	HP HANDHELD CONTROL
EA-1409A	VERTICAL SPEED
E-1070-2	POWER MODULE
DT-AWMR-4MBA-8	SUBWOOFER 8OHM MAG R
DT-AUS-4MRC*	SUBWOOFER (UNDER SEA
DT501-7	DUAL TORQUE IND.
DT501-6	TORQUE DUAL
DT409-9	TRIPLE TORQUE IND
DT409-8	TRIPLE TORQUE IND
DT409-6	TRIPLE TORQUE IND
DT409-4	TRIPLE TORQUE IND
DT409-3	TRIPLE TORQUE IND
DT409-13	TRIPLE TORQUE IND
DT409-11	TRIPLE TORQUEMETER
DT409-10	TRIPLE TORQUE IND
DST1017-25	ITT
DSF1549-2	INDICATOR FUEL FLOW
DL439	DUAL TACHOMETER
DL439	DUAL TACHOMETER

DL412-70	GAS PRODUCER TACH
DL412-66	GAS PRODUCER TACH
DL412-65	GAS PRODUCER TACH
DL412-64	GAS PRODUCER TACH
DL412-63	GAS PRODUCER TACH
DL412-61	GAS PRODUCER TACH
DL412-57	GAS PRODUCER TACH
DL412-56	GAS PRODUCER TACH
DL412-55	GAS PRODUCER TACH
DL412-53	GAS PRODUCER TACH
DL412-40	GAS PRODUCER TACH
DL412-39	TACHOMETER
DL404-7	TRIPLE TACHOMETER
DL404-4	TRIPLE TACHOMETER
DL404-38	TRIPLE TACHOMETER
DL404-109	TRIPLE TACHOMETER
DL401-18	DUAL TACHOMETER
DL401-17	DUAL TACHOMETER
DL401-16	DUAL TACHOMETER
DL401-15	DUAL TACHOMETER
DL401-14	DUAL TACH INDICATOR
DK504-39	DUAL TORQUE IND
DK504	DUAL TORQUE IND
DK453	PRESSURE INDICATOR
DK449-40	TRIPLE OIL PRESSURE
DK433-40	FUEL PRESSURE IND
DK433	FUEL PRESSURE IND
DK042	PRESSURE TRANSMITTER
D2206104004	ALTIMETER
D120-P2-T	ALTIMETER
D107319	FUEL PUMP
D107318E	FUEL PUMP
CP1766G	AUDIO CONTROL PANEL
CM2645L1	FUEL QTY GAGE
CH310-000	TAC /COM
CH303-0F3	TAC / COM
CH251-01F	NAT RT
CC450-0V2	COM CONTROLLER
CC250-001	COMM CONTROL
C661071-0101	ALTIMETER
C2300L4-24B	COMPASS
C2300-DL4-B	COMPASS
C2300DL4	COMPASS
BHL-4305-15	SENSOR SPA

B4553110104	ALTIMETER
B4553110004	ALTIMETER
B17-941.27.00.0.A	CLOCK
AVM4090FH	VIDEO DISPLAY UNIT
AV24B1119B	MOTOR DRIVEN VALVES
AT1621-23*	ANTENNA
ASO AAU-6A/A	ALTIMETER
ASH584-5	STATIC INVERTER
ASH564B-6	INVERTER
ASH450-1	STATIC INVERTER
AR-209-4	FUEL FLOW
APTE-138-150G	PRESSURE TRANSDUCER
APTE-130LF-1000-75G	PRESSURE TRANSDUCER
APTE-130-1000-75G	PRESSURE TRANSDUCER
AN 5760	ALTIMETER
AMS43TSO	SINGLE CHANNEL AUDIO
AC-102	AIRSPED INDICATOR
AAU-31/A	ALTIMETER
AAU-31/A	ALTIMETER
AAU-31/A	ALTIMETER
AA95-863TSO	AUDIO PANEL
AA80-020	INTERVOX
A80-AAU-7A/A	ALTIMETER
A80 AAU 8A/A	ALTIMETER PRESS IND
A-702AP	CUTOUT-REVERSE CURRE
A5930-02	TURN & SLIP INDICATO
A50691103	TACH GENERATOR
A413A,HDA-DF-28	STROBE LIGHT POWER
A301-6W	COMMUNICATION CONTRO
99251-3252011-0101	ALTIMETER ENCODING
99251-3252011-0101	ALTIMETER ENCODING
99002-8	HORIZON GYRO
9813-25-07	DUAL TORQUE IND
964001-103	OUTLINE, DECODER DIG
963001-103	ENCODER DIGITAL INTE
962001-101	AREA DISTRIBUTION BO
93835/63143-01	HYDRAULIC PUMP
935200-00*	MISC ELEC
932006-100	TAILWIND
932001-102	TAIL MOUNT UNIT, TAI
932001-100	TAIL MOUNT UNIT, TAI
932000-200	FUSELAGE MOUNTED UNI
932000-100	FUSELAGE MOUNTED UNI
931000-212	RDU, DUAL MIDDLE EAS

931000-207	RDU, DUAL MIDDLE EAS
931000-205	RDU, DUAL EUROPE, TP
931000-202	RDU, US/COMMON INTER
931000-201	RDU, CONUS DIRECTV,
931000-200	RDU, COMMON INTERFAC
930-500-50-1	SEARCH LIGHT
930010-02	IF MULTIPLEXER UNIT,
925410-100-1*	MOUNT KIT, 4 MCU
914095-100	OUTLINE DRAWING
912041TD	FUEL FLOW IND
903BD	GYRO HORIZON
9032-1003	FUEL QTY INDICATOR
90090002-02	TORQUE INDICATOR
9001046-2	NAVIGATION DISPLAY
9001045-2	PRIMARY FLIGHT DIS
8DJ81WDG4	TACH INDICATOR
8DJ81WBS4	TACHOMETER
8DJ67-FAF-1	DUAL TACHOMETER
8DJ173LWD1	OIL QUANTITY IND
897478-2	BETA TUBE ASSEMBLY
8502C-S20LW	AIRSPEED
834-1	AUDIO AMPLIFIER
83000-00501	LIGHT CONTROL UNIT
811B	CLOCK
8107-101-00-12	PRESSURE SENSOR
810-0001-650	FILE SERVER APPLICAT
810-0001-222	FILE SERVER APPLICAT
805DO630-21	LORAN RECEIVER
805D0450	R NAV 612
80-0381-3	CAUTION LIGHT ANNUNC
8000T	AIRSPEED
8000-BH5	AIRSPEED INDICATOR
8000B336	AIRSPEED
8000B.860	AIRSPEED INDICATOR
78300000-05	TRIPLE TACHOMETER
78200000-08	TRIPLE TACHOMETER
78200000-03	TRIPLE TACHOMETER
7813-175-00-13	TRIPLE TACHOMETER
76650-098908-102	HYDRAULIC PUMP
76450-01078-123	DUAL TORQUE
76450-01076-110	INDICATOR N1
76450-01076-107	TEMPERATURE IND
76450-01076-103	TRIPLE TACHOMETER
7582-175-00-12	DUAL TACH INDICATOR

739U-03	AIRSPEED INDICATOR
73001002-002	MISC ELECT
716-586-1	FUEL INDICATOR
7160C130	VERTICAL SPEED INDIC
713617-2	MISC ELECT
7125-1	GYRO RATE XMTR
7060.C20	VERTICAL SPEED IND
704A47-651-012	FUEL QUANTITY TRANS
704A-47-621-089	TORQUE DUAL
704A47-612-052	RPM INDICATOR
704A-47-612-042	TACH
7012977-970	DISPLAY CONTROLLER
7007700-706	RADAR INDICATOR
7002353-913	AIR DATA SENSOR
7002353-902	AIR DATA SENSOR
7001840-934	RADIO ALTIMETER
7000839-904	RADIO ALTIMETER IND.
7000839-902	RADIO ALTIMETER IND.
7000466-915	ATTITUDE DIRECTOR
7000299-901	HELIPILOT CONTROLLER
6601-3009	RATE OF CLIMB
6601-1004	VERTICAL SPEED INDIC
65A327	ACTUATOR
65A238	LINEAR ACTUATOR
6505A-3053	TRIPLE TACHOMETER
6503A-3101	GAS PRODUCER TACH
6502-3046	DUAL TACH INDICATOR
6502-3010	DUAL TACH INDICATOR
6502-3010	DUAL TACH INDICATOR
6501-1006	TACHOMETER
64818-012-1	OIL TEMP INDICATOR
64751-003-3	TRANSMITTER GAUGE
64751-003-3	TRANSMITTER GAUGE
64751-003-2	TRANSMITTER GAUGE
64550-023-1	TACHOMETER GENERATOR
64279-004-1	PRESSURE TRANSMITTER
64251-903-1	PRESSURE TRANSMITTER
61-2008	STROBE POWER SUPPLY
61015-007-1	DUAL TORQUE IND
605-1	RPM LIMIT DETECTOR
5A16.22.20K.05.1.AU	AIRSPEED INDICATOR
5934PD-3	ALTIMETER
5934PAD-1 A 132	ALTIMETER
5934PA-3A.86	ALTIMETER

5934P-3 A.194	ALTIMETER
5934P-1	ALTIMETER
5934D-3A.159	ALTIMETER
5934D-1	ALTIMETER
5934-A66	ALTIMETER
5934A.91	ALTIMETER
5934-1	ALTIMETER
5802-3060	AIRSPEED
5707-3027	FUEL QUANTITY IND
56515-2	ITT INDICATOR
5633-707-80-12	NG SPEED AND LIMIT
5633-707-80-12	NG SPEED AND LIMIT
563-031	OIL TEMP/PRESS.IND.
5626-555-00-11	TEMP INDICATOR
5626-525-0	T4 INDICATOR
5626-524-00-00	TEMP INDICATOR
5626-522-0	TEMP INDICATOR
5626-522-0	TEMP INDICATOR
557-4131-902	RMI
5560-8165N1L	TURN & BANK IND
5550-8465 N1L	TURN & SLIP IND
5501-100	REMOTE DISPLAY MODUL
5448-709-91-11	N1 INDICATOR
5418227-29	CO-PILOT ELECTRICAL
531-1	CURRENT LIMITER
5309-155-00-11	FUEL PRESS INDICATOR
5306-255-00-11	OIL TEMP INDICATOR
5306-155-00-10	OIL PRESSURE IND
52D67	ATTITUDE GYRO
522-4414-050	COURSE INDICATOR
522-4329-001	SENSOR
522-4140-001*	ALTIMETER ANTENNA
522-3866-001	AMPLIFIER, INSTRUMEN
522-3763-002	CONTROL, AUDIO
522-3551-001	CONTROL, PEDESTAL
522-3241-000	GYRO, DIRECTIONAL
522-3226-001	FLIGHT DIRECTOR INDI
522-2901-034	COMPUTER, AUTOPILOT
522-2901-021	COMPUTER, AUTOPILOT
522-2901-016	COMPUTER, AUTOPILOT
522-2901-007	COMPUTER, AUTOPILOT
522-2901-002	COMPUTER, AUTOPILOT
522-2900-026	COMPUTER AMPLIFIER
522-2866-000	ISOLATION AMPLIFIER

522-2866-000	ISOLATION AMPLIFIER
522-2645-000	GYRO, DIRECTIONAL
522-2638-006	INDICATOR, COURSE
522-2632-000*	L BAND AIRBORNE ANTE
522-1400-000	SERVO AMPLIFIER
522-0854-069*	ANTENNA, MARKER BEAC
522-0854-003*	ANTENNA, MARKER BEAC
522-0700-023*	GLIDESLOPE ANTENNA N
5209137-004	HORIZONTAL SITUATION
520-9130-004	HSI
520-9130004	H.S.I
520-9130-003	H.S.I.
5205160-006	INDICATOR COURSE SEL
520137-1332	SLAVED NAVIGATION SI
5201351-007	BEARING HEADING INDI
51509-002	VOLTAGE REGULATOR
509-0004-901	TURN & SLIP INDICATO
505-0031-930	DIRECTIONAL GYRO
505-0031-904	DIRECTIONAL GYRO
505-0031-903	DIRECTIONAL GYRO
505-0023-907	DIRECTIONAL GYRO
505-0017-904	DIRECTIONAL GYRO
505-0010-902	DIRECTIONAL GYRO
504-0121-923	HORIZON REFERENCE IN
504-0111-932	ATTITUDE INDICATOR
504-0045-904	GYRO HORIZON
504-0045-904	GYRO HORIZON
504-0045-902	GYRO HORIZON
504-0045-902	GYRO HORIZON
504-0045-901	ATTITUDE INDICATOR
504-0017-926	ATTITUDE INDICATOR
504-0017-901	GYRO HORIZON
50-3800-43-3	TACH INDICATOR
5035PB-P57	ALTIMETER ENCODING
5035P2-P42	ENCODING ALTIMETER
5035P2-P13	ALTIMETER
5021-3001	TOT INDICATOR
501-1874-09	ATTITUDE INDICATOR
501-1228-03	POWER SUPPLY
501-1228-03	EPS
501-1224-02	VERTICAL GYRO
501-1170-21	ATTITUDE INDICATOR
501-1149-01	DIRECTIONAL GYRO
501-1111-02	YAW DAMPER

501-1107-01	AUTOPILOT CONTROLLER
5007555-1	BRAKE ASSEMBLY
5006-1036	TEMPERATURE INDICATO
4D7007	NO DESC PROVIDED
4A7002	NO DESC PROVIDED
488069366-00	SELECTOR SWITCH
473215-001	FUEL SIGNAL CONDITIO
473203-003	SIGNAL CONDITIONER
46700-01	VERTICAL SPEED INDIC
453-2550-10	ARNAV DISPLAY
453-2530-08	ARNAV PROCESSOR
453-0529-03	ARNAV DATA LINK
453-0422-366	ELT
45-0128-3	SEARCHLIGHT
449-2	POWER SUPPLY
446000458-00	VERTICAL SPEED IND
44090-1941-02	AIRSPEED
44090-0941-02	AIRSPEED
4308-3018	TORQUE INDICATOR
41850A17-4580	SEARCH LIGHT
418-00529-102	TRIM ACTUATOR
418-00064	OIL PRESSURE TRANS
418-00061	PRESSURE TRANSMITTER
412-375-007-117	TRIPLE TORQUEMETER
412-375-007-113	TRIPLE TORQUEMETER
412-375-007-111	TRIPLE TORQUE IND
412-375-007-109	TRIPLE TORQUE IND
412-375-007-107	TRIPLE TORQUE IND
412-375-007-105	TRIPLE TORQUE IND
412-375-007-103	TRIPLE TORQUE IND
412-375-007-101	TRIPLE TORQUE IND
412-375-006-103	PRESSURE TRANSDUCER
412-375-006-101	TRANSDUCER
412-375-001-105	FUEL QTY INDICATOR
412-075-101-101	INVERTER
412-075-010-111	TRIPLE TACHOMETER
412-075-010-109	TRIPLE TACHOMETER
412-075-009-105	AIRSPEED
412-075-008-113	DUAL TORQUE INDICATO
412-075-008-111	TORQUE INDICATOR
412-074-101-103	CONTROL MOTION TRANS
412-074-101-101	CONTROL MOTION TRANS
407-375-011-101	FUEL PROBE
407-375-008-107	DUAL TACH IND

407-375-008-105	DUAL TACHOMETER
407-375-008-101	DUAL TACH INDICATOR
407-375-008-101	DUAL TACH INDICATOR
407-375-007-107	PRESS AMMETER IND
407-375-006-103	FUEL QTY IND
407-375-006-101	FUEL QUANTITY IND.
407-375-005-103	TEMP PRESS INDICATOR
407-375-005-101	TRANSMISSION TEMP/PR
407-375-004-103	OIL TEMP PRESS INDIC
407-375-003-109	TORQUE INDICATOR
407-375-003-107	TORQUE INDICATOR
407-375-002-105	NG INDICATOR
407-375-002-103	NG INDICATOR
407-375-001-107	MGT INDICATOR
4027170-904	HORIZ SITUATION INDI
40-250	AIRSPEED INDICATOR
4022211-100	GYRO HORIZON
4012-1003	VOLTMETER
4001670-2513	COLOR RADAR
40-0103-31	BEACON ASSEMBLY
4000504-0301	ANTENNA DRIVE
400-014525-00	FLEXCOMM FM COMMUNIC
400-012785-02	FLEXCOMM FM COMMUNIC
400-012785-00	TRANCEIVER FLEXCOM
400-0106-011	CONTROL UNIT
400-0106-010	CONTROL UNIT
400-0106-001	CONTROL UNIT
400-0103-002	FLEXCOMM FM COMMUNIC
400-0103-001	FLEXCOMM FM COMMUNIC
400-0103-000	FLEXCOMM FM COMMUNIC
400-0102-000	FLEXCOMM FMTRANSCEIV
400-0098-001	FLEXCOMM FM COMMUNIC
400-0098-000	FLEXCOM FM COMMUNICA
400-0033	FLITE FONE III
3E1150-10	ELECTRICAL DE-ICER
39600-5241	ENCODING ALTIMETER
3941213-9003	GAS PRODUCER TACH
393008-046	FUEL QUANTITY INDICA
393008-040	FUEL QUANTITY
393004-01970	FUEL QUANTITY INDICA
384178-091	FUEL SELECTOR SWITCH
38399-490-02	AIRSPEED
38399-490	AIRSPEED
38210-490	VERTICAL SPEED INDIC

37500-2241	ALTIMETER
37500-220	ALTIMETER
37500-0841	ALTIMETER
374GC01Y	MASTER ELECTRICAL BO
371K-05	SENSITIVE ALTIMETERS
371GC01Y021	MASTER ELECTRICAL BO
3706-2001	DC AMMETER
37.010.20.000/6	OIL COOLER
369H92518	ATTITUDE GYRO
369A4516	GAS PRODUCER TACH
3571262-5109	GAS PRODUCER TACH
3571262-5108	GAS PRODUCER TACH
3571262-2301	TACHOMETER
3571251-9119	MEASURED GAS TEMP IN
356H2802	POWER SUPPLY
3567411-6003	PRESSURE TRANSMITTER
3567411-1502	PRESSURE TRANSMITTER
355A-61-5187-01	PCB BOARD
35060-1122	VERTICAL SPEED INDIC
34670-102	VERTICAL SPEED INDIC
34090-402	AIRSPED INDICATOR
331A-3G	COURSE INDICATOR
327383*	CIM INTERFACE CABLE
3252010-1101	ALTIMETER
3208-2002	FUEL QUANTITY INDICA
32005-023	TACH GENERATOR
32005-007	TACH GENERATOR
31-3172-11	STROBE LIGHT
31300-0101-0111	C-5000 COMMUNICATION
31230-1127	VERTICAL SPEED IND
3101-3001	TORQUE INDICATOR
3100-2003	ENGINE OIL PRESSURE
3080-201-2	DUAL TORQUE IND.
3057-3-136-6	TORQUE INDICATOR
3057-169-2	DUAL TORQUE INDICATO
3045478-01	TEMPERATURE COMPENSA
3043937-03	IGNITION EXCITER
30-326 ET-1	CONTROL AMPLIFIER
30-231	SMOKE DETECTOR
300-2234-000	RT-450
300-014140	SYNTHESIZER
2LA005613-01	POSITION LIGHT
2A1000-1G	STATIC INVERTER
28007-227	ENCODING ALTIMETER

27-86022-15	AIRSPEED INDICATOR
27-82092-1	PITCH TRIM
27-81007-5	HYD PRESS
27-66008-5	OIL TEMP IND
27-66004-17	ITT INDICATOR
27-19162-003	FUEL FLOW TOTALIZER
26-877007-3	DE-ICING PRESS
2680003-2	MACH AIRSPEED INDICA
26-66306-1	TACHOMETER
2612-2001	OIL TEMPERATURE INDI
2594733-200	FLAG AMPLIFIER
2591411-444	HORIZON FLIGHT DIREC
2587193-23	DIRECTIONAL GYRO
25140-22A690	TACH GENERATOR
25140/164A168-1	PUMP FUEL BOOST
251-003	PA AMPLIFIER
2503148-2	ANNUNCIATOR
2502-7001	FUEL QTY XMTR
23-501-06-9	GYRO HORIZON
23-501-06-3	GYRO HORIZON
23-1205-2A	INVERTER
2309-155-00-10	VOLTMETER
23081-073	DC STARTER GENERATOR
23081-057	DC STARTER GENERATOR
2306-557-00-10	FUEL GAGE
2306-556-00-10	FUEL GAGE
23032-048	STARTER GENERATOR
23032-018	STARTER GENERATOR
22A6000	TACH GENERATOR
2260-1001-1	RPM LIMIT DETECTOR
222-375-071-105	TRIPLE TORQUEMETER
222-375-067-101	RPM SENSOR
222-375-064-101	DUAL FUEL QUANTITY
222-375-062-107	MAST TORQUE SIGNAL
222-375-033-103	ATTITUDE GYRO
222-375-033-101	GYRO HORIZON
222-375-028-101	TURN AND BANK INDICA
222-375-027-117	AIRSPEED INDICATOR
222-375-027-113	AIRSPEED
222-375-027-111	AIRSPEED
222-375-027-107	AIRSPEED
222-375-023-103	TEMP INDICATOR
222-375-022-105	GAS PRODUCER TACH
222-375-021-105	TRIPLE TACHOMETER

222-375-021-103	TRIPLE TACHOMETER
222-375-018-101	OIL & PRESS IND.
222-375-017-101	OIL & PRESS IND.
222-375-016-101	TEMP & OIL PRESS IND
222-375-010-103	LIGHT ASSEMBLY
222-366-685-101	FUEL SIGNAL CONDITIO
222-360-010-101	TORQUE CONTROL
222-005-030-111	RPM LIMIT DETECTOR
222-005-030-101	RPM LIMIIT DETECTOR
214-175-278-101	ALTIMETER
214-175-257-105	FUEL QUANTITY INDICA
214-075-222-005	TEMP & PRESSURE
214-075-220-1	COURSE INDICATOR
214-075-186-1	CONTROL UNIT
214-060-056-109	STARTER
214-001-347-005	ROTARY ACTUATOR
212-076-015-001	VALVE ASSEMBLY
212-075-418-107	PASSENGER STEP ACTU
212-075-418-105	PASSENGER STEP ACTUA
212-075-418-103	PASSENGER STEP ACTUA
212-075-418-003	ACTUATOR
212-075-237-001	PHASE ADAPTER
212-075-067-123	ITT INDICATOR
212-075-067-119	ITT INDICATOR
212-075-067-105	ITT INDICATOR
212-075-037-119	TACHOMETER
212-075-037-117	TACHOMETER
212-075-037-113	TACHOMETER
212-075-037-109	TACHOMETER
212-075-037-107	GAS PRODUCER TACH
212-075-037-105	TACHOMETER
212-075-037-103	GAS PRODUCER TACH
212-075-037-101	TACHOMETER
212-075-036-109	OIL TEMP & PRESS IND
212-075-036-107	OIL & PRESS IND.
212-075-036-101	OIL & PRESS IND.
212-073-927-1	MOTOR
212-070-242-11	TACHOMETER
212-070-239-001	VERTICAL SPEED INDIC
212-070-238-3	ALTIMETER
212-070-238-1	ALTIMETER
212-070-238-007	ALTIMETER
212-070-180-3	COURSE INDICATOR
212-070-160-15	TORQUE DUAL

212-070-160-113	DUAL TORQUE INDICATO
212-070-160-101	DUAL TORQUE IND.
212-070-160-005	DUAL TORQUE INDICATO
212-070-116-9	OIL PRESSURE INDICAT
212-070-108-103	TRIPLE TACHOMETER
212-030-104-101	LINK
210-5A	DIRECTIONAL GYRO AIR
2100904-1	BLOWER ASSY
209-375-047-101	OIL & PRESS IND.
209-075-663-1	VERTICAL INDICATOR
209-075-654-5	TORQUE INDICATOR
209-075-652-3	TACHOMETER
209-075-326-5	RPM LIMIT DETECTOR
209-075-326-1	RPM LIMIT DETECTOR
209-075-326-005	RPM LIMIT DETECTOR
209-070-278-001	INDICATOR
209-070-264-3	DUAL AMMETER
209-070-264-105	DUAL AMMETER
209-070-263-9	VOLTMETER
209-070-263-3	DUAL VOLTMETER
209-070-263-003	VOLTMETER
209-070-262-9	OIL TEMP & PRESS IND
209-070-262-101	OIL TEMP & PRESS IND
209-070-262-009	OIL & PRESS IND.
209-070-262-003	OIL TEMPERATURE & PR
209-062-501-005	OIL COOLER
209-062-501-002	OIL COOLER
209-062-214-001	ELECTROMECHANICAL LI
209-062-002-1	DIFF. PRESSURE INDIC
209-060-221-1	STARTER GENERATOR
206-375-011-101	TACHOMETER
206-375-005-101	TOT INDICATOR
206-373-901-103	VALVE
206-373-901-103	VALVE
206-351-0001	INSTRUMENT CLUSTER
206-076-031-17	SERVO ACTUATOR
206-076-031-17	SERVO ACTUATOR
206-075-740-113	FUEL QTY INDICATOR
206-075-740-107	FUEL QTY INDICATOR
206-075-739-135	TORQUE INDICATOR
206-075-739-133	ENGINE TORQUE INDICA
206-075-739-119	TORQUE INDICATOR
206-075-739-111	TORQUE INDICATOR
206-075-739-105	TORQUE INDICATOR

206-075-739-103	TORQUE INDICATOR
206-075-725-103	AIRSPED INDICATOR
206-075-725-103	AIRSPED INDICATOR
206-075-725-101	AIRSPED INDICATOR
206-075-725-1	AIRSPED INDICATOR
206-075-711-1	TORQUEMETER INDICATO
206-075-711-1	TORQUEMETER INDICATO
206-075-710-1	DC AMMETER
206-075-708-1	TURBINE OUTLET TEMPE
206-075-708-1	TURBINE OUTLET TEMPE
206-075-707-1	FUEL QUANTITY INDICA
206-075-706-1	TRANSMISSION OIL PRE
206-075-705-1	OIL TEMPERATURE/PRES
206-075-705-1	OIL TEMPERATURE/PRES
206-075-682-109	GAS PRODUCER TACH
206-075-682-107	GAS PRODUCER TACH
206-075-682-105	GAS PRODUCER TACH
206-075-682-1	TACHOMETER
206-075-682-001	TACHOMETER
206-075-681-123	DUAL TACHOMETER
206-075-681-121	DUAL TACHOMETER
206-075-681-119	DUAL TACHOMETER
206-075-681-117	DUAL TACH INDICATOR
206-075-681-117	DUAL TACH INDICATOR
206-075-681-115	DUAL TACHOMETER
206-075-681-113	DUAL TACH INDICATOR
206-075-681-103	DUAL TACH INDICATOR
206-075-681-101	DUAL TACH INDICATOR
206-075-677-103	OIL TEMPERATURE & PR
206-075-676-107	FUEL PRESSURE AND LO
206-075-607-103	GYRO HORIZON
206-075-607-101	GYRO HORIZON
206-075-606-109	DIRECTIONAL GYRO
206-075-606-107	DIRECTIONAL GYRO
206-075-606-107	DIRECTIONAL GYRO
206-075-606-103	GYRO
206-075-606-103	GYRO
206-075-456-7	ANNUNCIATOR PANEL
206-075-447-7	VOLTAGE REGULATOR
206-075-447-3	VOLTAGE REGULATOR
206-075-447-3	VOLTAGE REGULATOR
206-075-447-101	VOLTAGE REGULATOR
206-075-447-007	VOLT REGULATOR
206-075-190-1	TOT INDICATOR

206-075-190-1	TOT INDICATOR
206-075-189-1	FUEL QTY INDICATOR
206-075-189-1	FUEL QTY INDICATOR
206-075-188-3	DUAL INDICATOR
206-075-188-3	DUAL INDICATOR
206-075-188-1	TEMPERATURE & PRESSU
206-075-188-1	TEMPERATURE & PRESSU
206-075-187-3	DUAL INDICATOR
206-075-187-3	DUAL INDICATOR
206-075-187-1	TEMPERATURE/PRESSURE
206-075-187-1	TEMPERATURE/PRESSURE
206-075-186-5	LOAD AND FUEL INDICA
206-075-186-5	LOAD AND FUEL INDICA
206-075-186-3	LOAD AND FUEL INDICA
206-075-186-3	LOAD AND FUEL INDICA
206-075-186-005	LOAD AND FUEL INDICA
206-075-186-005	LOAD AND FUEL INDICA
206-075-186-003	DUAL INDICATOR
206-075-186-003	DUAL INDICATOR
206-075-185-105	TORQUE INDICATOR
206-075-185-103	TORQUE INDICATOR
206-075-185-101	TORQUE INDICATOR
206-075-185-1	TORQUE INDICATOR
206-075-185-1	TORQUE INDICATOR
206-075-185-1	TORQUE INDICATOR
206-070-990-1	VERTICAL SPEED INDIC
206-070-990-1	VERTICAL SPEED INDIC
206-070-493-1	BEARING HEADING INDI
206-070-475-5	FAN
206-070-475-005	FAN
206-070-473-1	INSTRUMENT CLUSTER
206-070-320-3	ATTITUDE GYRO
206-070-320-3	ATTITUDE GYRO
206-070-307-4A	FUEL QUANTITY INDICA
206-070-307-4A	FUEL QUANTITY INDICA
206-070-278-5	VERTICAL SPEED INDIC
206-070-278-5	VERTICAL SPEED INDIC
206-070-274-101	TURN & SLIP INDICATO
206-070-274-005	TURN AND SLIP
206-070-267-011	T.O.T INDICATOR
206-070-266-9	TACHOMETER
206-070-266-9	TACHOMETER
206-070-266-009	TACHOMETER
206-070-265-7	DUAL TACH INDICATOR

206-070-265-7	DUAL TACH INDICATOR
206-070-265-5	DUAL TACH INDICATOR
206-070-265-101	DUAL TACH INDICATOR
206-070-264-7	AIRSPEED
206-070-264-5	AIRSPEED
206-070-263-101	ALTIMETER
206-064-635-101	FUEL QUANTITY PROBE
206-064-618-001	FUEL QUANTITY TANK
206-063-656-001	FUEL QUANTITY TANK U
206-063-640-103	MOTOR DRIVEN VALVES
206-063-633-103	FUEL QTY INDICATOR
206-062-721-113	ACTUATOR
206-062-721-109	LINEAR ACTUATOR
206-062-721-011	LINEAR ACTUATOR
206-062-687-101	FUEL BOOST PUMP
206-062-627-3	TACH GENERATOR
206-062-627-1	TACH GENERATOR
206-062-627-1	TACH GENERATOR
205-7BL	DIRECTIONAL GYRO
2051VL	DIRECTIONAL GYRO
2051BL	DIRECTIONAL GYRO
205-061-635-5	FUEL FLOW SWITCH
205-001-046-115	GRIP ASSY
204-075-705-045	CAUTION PANEL
204-070-482-001	SELECTOR ASSEMBLY
204-060-762-1	LINEAR ACTUATOR
204-060-762-001	LINEAR ACTUATOR
204-060-683-5	FUEL QTY INDICATOR
204-001-376-3	MAGNETIC BRAKE
203-022-008	TRANSMISSION OIL TEM
203-021-003	FUEL QUANTITY IND
20-2000	TURN AND BANK
200SGL115Q	STARTER GENERATOR
200DCL(28)	DIRECTIONAL GYRO
200DCL	DIRECTIONAL GYRO
200DCBELL	DIRECTIONAL GYRO
200DC(BELL)	DIRECTIONAL GYRO
200DC(28)	DIRECTIONAL GYRO
200DC	DIRECTIONAL GYRO
200-914-002	FUEL QUANTITY INDICA
20036-0000-0102	FUEL PROBE
20022-0000-0105	FUEL QUANTITY TRANSM
20020-11388	AIRSPEED INDICATOR
20015-11187	AIRSPEED

2001-00-00	GPS/LORAN RX
1B1000-1G	STATIC INVERTER
19A827	FAN
19A2501	BLOWER ASSEMBLY
1978191-1	ATTITUDE GYRO
1977-1	LAMP DIMMER
1829-7	VOLT REGULATOR
18-1838-15	TORQUE DUAL
1783867-1	SERVO AMP
1783755-645	GYRO COMPASS INDICAT
16340-473-1	VOLT REGULATOR
15DA03B	TRIPLE TACH
1564T100-9	LINEAR ACTUATOR
1564T100-5	ACTUATOR
152HL2W	T.O.T INDICATOR
152C2D	TEMPERATURE INDICATO
143100-01-02	ATTITUDE INDICATOR
140100-01-01	ATTITUDE INDICATOR
1394T100-7Z	TURN & SLIP INDICATO
1372-1-5	RPM LIMIT DETECTOR
1308520-100	TOUCH SCREEN EQPT, 1
1301-2001	ALTIMETER
128-384046-3	FAN SPEED INDICATOR
128-384045-5	TURBINE SPEED INDICA
128-384031-1	FUEL QUANTITY INDICA
127450-5	H.S.I.
126.307-5	FUEL QTY INDICATOR
124.499-4	TOT INDICATOR
124.498-6	TEMP PRESSURE INDICA
124.444-12	T.O.T.
124.444-10	TOT INDICATOR
124.273-5	TEMP & PRESS IND.
124.244-102	DUAL VOLT INDICATOR
124.1013-2	OIL & PRESS IND.
124.040-1	DUAL INDICATOR
124.039-3	DUAL INDICATOR
1234T100-3TZ	TURN AND BANK INDICA
121-017850-01	AT-550 ANTENNA
117-940691	TORQUE INDICATOR
117-94056-03	GAS PRODUCER TACH
117-94054-01	FUEL QTY INDICATOR
117-94053-03	TRIPLE TACHOMETER
117-94051-07	TOT INDICATOR
117-94051-05	TOT INDICATOR

117-94048-03	MASTER LIGHT
117-940471	AIRSPEED
117-92039-03	EMERGENCY LIGHTS PWS
117-92031-07	LIGHT CONTROL UNIT
117-92031-03	LIGHT CONTROL UNIT
117-902101	NI INDICATOR
117-902041	ENG. OIL TEMP IND.
117-902031	TOT INDICATOR
117-69005-03(H5)	DUAL TORQUE IND.
117-69005-03	TORQUE DUAL
117-64152-03	FUEL QTY TRANS
117-31822	PITCH LINK
115.201-4	HYD. SIG. COND.
115.201-3	HYD. PRESS IND
111303-4	ADI
111302-5	H.S.I
105-93951	FIRER WARNING
105-93921	ANTI-ICE LINEAR
105-31821	PITCH LINK
105-13241	DRIVE LINK
103-0023-01	DIRECTIONAL GYRO
103-0022-01	DIRECTIONAL GYRO
102A100	AMMETER
1022060-102	THREE SEAT DEMULIP
102200-11829	ENCODING ALTIMETER
102-0054-03	GYRO HORIZON
101735-11807	ALTIMETER
101735-01455	ALTIMETER
101720-01546	ALTIMETER
101627-01696	ALTIMETER
101420-11207	ALTIMETER, PRESS
100-601981-001	MISC ELECTR: OTHER
10035-11424	ALTIMETER
10035-11326	ALTIMETER
099-799-150	SEARCH LIGHT
099-799-100	SEARCH LIGHT
099-370-150	VALVE
07148-11126-2	CONTROL UNIT
071-4037-01	KA33 COOLING BLOWER
071-1282-38	VHF COMM. TRAN
071-1276-11	CONTROL PANEL
071-1242-01	SLAVING ACCESSORY
071-1114-01	KA 131 ANTENNA
071-1114-00	RADAR ALTIMETER

071-1041-01	VOLTAGE CONVERTER
071-01507-6503	CONTROL PANEL
071-01507-1301	CONTROL PANEL
071-01378-0000	RADAR SENSOR
071-00166-0411	TRAFFIC MODULE
07031-94214A	VOLTAGE REGULATOR
07031-94123-7	VOLTAGE REGULATOR
069-1025-25	NAV/COMM TRANS
069-1024-39	VHF TRANSCEIVER
069-1024-39	VHF TRANSCEIVER
069-1024-35	VHF TRANSCEIVER
069-1024-34	VHF TRANSCEIVER
069-01032-0101	NAV/COMM
066-3064-05	ALTIMETER
066-3063-00	ADF INDICATOR
066-3054-01	RADAR ALTIMETER
066-3046-04	H.S.I.
066-3046-01	H.S.I
066-3044-01	RADAR ALTIMETER
066-3044-00	RADAR ALTIMETER
066-3038-00	RMI
066-1078-00	NAV RECEIVER
066-1072-04	ADF RECEIVER
066-1072-00	ADF RECEIVER
066-1071-00	TRANSPONDER
066-1066-25	DME
066-1062-02	ATC TRANSPONDER
066-1062-01	TRANSPONDER
066-1062-00	ATC TRANSPONDER
066-1061-03	RADAR ALTIMETER
066-1061-01	RADAR ALTIMETER
066-1055-71	ISOLATION AMPLIFIER
066-1055-52	ISOLATION AMPLIFIER
066-1034-01	KT76 TRANSPONDER
066-04035-0101	KMD540
066-03125-2600	DISPLAY
066-03064-0005	ALTIMETER
066-03064-0001	ENCODING ALT
066-01141-0101	KT 70 MODE ATC TRAN
065-0144-02	FLIGHT COMPUTER
065-00180-2700	TRIM SERVO
065-00167-0900	ACTUATOR ASSEMBLY
064-1054-30	VHF COMMUNICATION
064-1054-30	VHF COMM

064-1009-00	VHF TRANSCIEVER
060-0015-00	DIRECTIONAL GYRO
060-0013-01	DIRECTIONAL GYRO
051-22000-03	REMOTE TRANSFER
035 370 021	EMS AIRCRAFT CLOCK
027-003-001	FUEL QUANTITY TANK
013-2012-010	ANTENNA, GPS C190
013-1592-010	RADAR ALTIMETER ANT
01-0790079-06	STROBE POWER SUPPLY
01-0770905-02	ANTI COLLISION LIGHT
01-0770900-05	ANTI COLLISION LIGHT
01-0770062-03	POWER SUPPLY
009-0287-110*	FAN SPEED INDICATOR
009-0287-110	BULKHEAD DISPLAY FAN
5209130004	H.S.I
5050031930	DIRECTIONAL GYRO
5050031904	DIRECTIONAL GYRO
5050031903	DIRECTIONAL GYRO
5040045904	GYRO HORIZON
5040031914	ATTITUDE GYRO
4026206976	INST REMOTE CONTROL
446000275	VSI
446000275	VSI
446000275	VERTICLE SPEED
420800001	BLOWER MOTOR
88060263	TRANSMISSION PRESS
32005023	TACHOMETER GENERATOR
4004512	ALTIMETER ANTENNA
3596237	STROBE LIGHT
886874.951	CABIN LOUDSPEAKER
764590	TANK PROBE, UPPER
233575	MOTOR DRIVEN VALVES
203443	SWITCH PANEL WATER L
129222	HSI
33542	AIR TEMP CONTROL
10401	ANTENNA
9550	TURN & SLIP INDICATO
9100	LORAN RECEIVER
8000	AIRSPEED
7160	INSTANTANEUOUS VERTI
7060	VERTICAL SPEED
2816	TRIM MOTOR ACTUATOR
124.55	ENG. OIL TEMP IND.
124.546	OIL TEMP & PRESSURE

