



QAI AEROSPACE

QAI AEROSPACE (QUALITY AVIATION INSTRUMENTS) MASTER REPAIR CAPABILITY LIST

412-346-0168
sales@qai.aero
www.qai.aero

Part Number Search:

PART NUMBER	DESCRIPTION
115.015	Hydraulic Temperature Indicator
117.902031	Turbine Outlet Temperature Indicator
124.013	Temperature & Pressure Indicator
124.014	Temperature & Pressure Indicator
124.027	Inter Turbine Temperature Indicator
124.029	Inter Turbine Temperature Indicator
124.039	Dual Ammeter
124.04	Dual Voltmeter
124.041	Oil Temperature & Pressure Indicator
124.043	Oil Temperature & Pressure Indicator
124.044	Fuel Pressure Indicator
124.045	Oil Temperature & Pressure Indicator
124.067	Temperature Indicator
124.069	Fuel Pressure Indicator
124.1006	Oil Temperature & Pressure Indicator
124.1007	Oil Temperature & Pressure Indicator
124.1012	Oil Temperature & Pressure Indicator
124.1013	Oil Temperature & Pressure Indicator
124.1014	Fuel Pressure/Load Meter
124.102	Torque Indicator
124.1027	Volt/Ammeter
124.1028	Cockpit/Cabin Temperature Indicator
124.1062	Battery Temperature Indicator
124.113	Voltmeter
124.1149	Oil Temperature & Pressure Indicator
124.115	Oil Temperature & Pressure Indicator
124.1185	Oil Temperature & Pressure Indicator
124.132	Voltmeter
124.14	TORQUE GAUGE INDICATOR
124.193	Inter Turbine Temperature Indicator
124.323	Ammeter
124.331	Egt Indicator
124.419	Pressure Indicator
124.439	Transmission Oil Pressure Indicator
124.44	Fuel Quantity Indicator
124.443	Dc Ammeter
124.444	Turbine Outlet Temperature Indicator
124.463	Torque Indicator

124.499	T.O.T. Indicator
124.5	Temperature Indicator
124.503	Dual Oil Pressure Indicator
124.507	Dc Ammeter
124.511	Torque Indicator
124.545	Fuel Quantity Indicator
124.546	Oil Temperature & Pressure Indicator
124.549	Oil Temperature & Pressure Indicator
124.55	Oil Temperature & Pressure Indicator
124.552	Oil Temperature & Pressure Indicator
124.559	TORQUE GAUGE INDICATOR
124.56	TORQUE GAUGE INDICATOR
124.676	Hydraulic Temperature & Pressure Indicator
124.677	Hydraulic Temperature & Pressure Indicator
124.678	Hydraulic Temperature & Pressure Indicator
124.679	Hydraulic Temperature & Pressure Indicator
124.838	Temperature Indicator
200	Directional Gyro
449	Power Supply
904	Horizon Gyro
1432	Altimeter
1434	Altimeter
2501	Vertical Speed Indicator
2816	Trim Motor Actuator
3459	Control Unit
3935	Turn & Slip Indicator
5257	Temperature Probe
5586	Blower Assembly
5728	Turn & Slip Indicator
5932	Altimeter
6335	Pressure Switch
6445	Fire Overheat Control Card
7030	Vertical Speed Indicator
7040	Vertical Speed Indicator
7060	Vertical Speed Indicator
7160	Vertical Speed Indicator
7200	Rate Of Climb Indicator
7201	Rate Of Climb Indicator
7210	Rate Of Climb Indicator
7211	Rate Of Climb Indicator
8000	Airspeed Indicator
8025	Airspeed Indicator
8030	Airspeed Indicator
8100	Airspeed Indicator
8125	Airspeed Indicator
8130	Airspeed Indicator
8135	Airspeed Indicator
9000	Turn Coordinator
9011	Rate Of Climb Indicator

9130	Horizontal Situation Indicator
9500	Turn & Slip Indicator
9501	Turn & Slip Indicator
9502	Turn & Slip Indicator
9550	Turn & Slip Indicator
9551	Turn & Slip Indicator
9552	Turn & Slip Indicator
9696	Dc Motor
11760	Rate Gyro
12003	Altimeter
13503	Altimeter
17500	Searchlight
21408	Airspeed Indicator
21843	Rate Of Climb Indicator
21844	Rate Of Climb Indicator
21856	Rate Of Climb Indicator
21857	Rate Of Climb Indicator
24780	DIAL INDICATOR
29800	H.S.I.
29993	REMOTE ATTITUDE INDICATOR
31807	Flux Valve
31808	Flux Valve
33204	Thermometer
33205	Dual Temperature Indicator
33349	Thermometer
33350	Dual Temperature Indicator
33724	Dual Temperature Indicator
34970	Thermometer
35350	Thermometer
36101	Gyro Horizon
38200	Gyro Horizon
38204	Gyro Horizon
38300	Gyro Horizon
38314	Gyro Horizon
41550	REMOTE ATTITUDE INDICATOR
41830	Rotor Rpm Indicator
42370	Rotor Rpm Indicator
42960	Rotor Rpm Indicator
42965	Rotor Rpm Indicator
44524	Gyro
50010	Annunciator Panel
50084	Blower Motor
50143	Blower Motor
50145	Blower Assembly
50234	Hydraulic Pressure Transmitter
50579	Hydraulic Pressure Transmitter
50629	Hydraulic Pressure Transmitter
50871	Pressure Transducer
51210	Encoding Altimeter

53500	Warning Annunciator Panel
53860	Warning Annunciator Panel
55670	Light Dimmer
59410	Fan Performance Monitor
70129	Tachometer Indicator
70160	Tachometer Indicator
70285	Anti-Collision Light
73949	Control Grip Assembly
81579	Nomen Grip Assembly
86197	Transmitter
95211	Voltage Regulator
100524	Horizontal Situation Indicator
101420	Encoding Altimeter
101720	Altimeter
101730	Altimeter
101735	Altimeter
101750	Altimeter
102262	Remote Attitude Indicator
102524	Remote Attitude Indicator
102550	Attitude Indicator
102630	Remote Attitude Indicator
107500	Attitude Indicator
109290	Rate Gyro
112090	Remote Attitude Indicator
112790	Attitude Indicator
117800	Attitude Indicator
118550	Horizontal Situation Indicator
118600	Course Indicator
129060	Vertical Speed Indicator
129222	Horizontal Situation Indicator
131070	Attitude Indicator
132876	Temperature Indicator
133640	Horizontal Situation Indicator
135070	Attitude Indicator
137660	Outside Air Temperature Indicator
137661	Temperature Indicator
155751	Altimeter
157800	Temperature Indicator
157801	Temperature Indicator
200138	Static Inverter
200139	Static Inverter
200158	Static Inverter
200169	Static Inverter
200175	Static Inverter
200176	Static Inverter
200177	Static Inverter
200181	Dc To Dc Converter
206112	Dual Tachometer Indicator
206115	Torque Indicator

206116	Tachometer Indicator
206500	Instrument Cluster
233565	Motor Driven Valve
245010	Ac Ammeter
245020	Ac Voltmeter
245030	Dc Voltmeter
245040	Dc Loadmeter
253607	Trim Position Indicator
254030	Dc Voltmeter
260245	Ac Voltmeter
260246	Ac Voltmeter
260283	Ac Ammeter
260287	Ac Ammeter
277700	A.D.I.
304565	Dual Rate Sensor
400086	Clock
400201	Clock
400202	Clock
400216	Clock
400240	Clock
400250	Clock
400270	Clock
401894	2 Axis Sensor
415540	R.P.M. Indicator
472017	I.T.T. Indicator
472018	Turbine Speed Indicator
472019	Fan Speed Indicator
472020	Oil Temperature Indicator
472021	Oil Pressure Indicator
473051	Smoke Detector
473054	Smoke Detector
511950	Altimeter
511951	Altimeter
511958	Altimeter
511992	Altimeter
520104	Ac Ammeter
520108	Ac Ammeter
520127	Ac Voltmeter
520479	Ac Voltmeter
521696	I.T.T. Indicator
521875	I.T.T. Indicator
521939	I.T.T. Indicator
521940	I.T.T. Indicator
521941	I.T.T. Indicator
521942	I.T.T. Indicator
521944	I.T.T. Indicator
521945	I.T.T. Indicator
521992	T.O.T. Indicator
522215	Pressure Indicator

522293	I.T.T. Indicator
522298	Turbine Outlet Temperature Indicator
522325	I.T.T. Indicator
522387	Cabin Air Temperature Indicator
522396	Hydraulic Quantity Level Indicator
522406	Dc Volt/Ammeter
522456	Hydraulic Brake Pressure Indicator
522457	Dual De-Icing Pressure Indicator
522458	Dual Hydraulic Pressure Indicator
522459	Cabin Duct Temp Indicator
522484	Rudder Trim Indicator
522486	Aileron Trim Indicator
522487	Battery Temp Monitor
522540	Hydraulic Pressure Indicator
522541	Volt/Ammeter
522542	Cockpit/Cabin Temperature Indicator
522543	E.G.T. Indicator
522544	Tachometer Indicator
522545	Battery Temperature Indicator
522686	I.T.T. Indicator
522778	Dc Power Monitor
522780	I.T.T. Indicator
522781	Total Fuel Used Indicator
522783	Cabin Pressurization Indicator
522790	Fuel Temperature Indicator
522792	Propeller Speed Indicator
522793	Gas Generator Speed Indicator
522794	Engine Oil Pressure/Temperature Indicator
522795	Propeller Oil/Temperature Indicator
522796	Dual Hydraulic Pressure Indicator
522797	Dual Hydraulic Brake Pressure Indicator
522808	Ac Power Monitor
522809	Battery & Fuel Temperature Indicator
522814	Total Fuel Used Indicator
522823	Torque Indicator
522834	Trim Position Indicator
522840	Hydraulic Fluid Indicator
522848	Engine Oil Temperature & Pressure Indicator
522849	Lo Pressure Rotor Speed Indicator
522858	Dual Flap Position Indicator
522861	I.T.T. Indicator
522942	Flap Position Indicator
522945	Fuel Tank Temperature Indicator
522948	Torque Indicator
523048	Gas Generator Speed Indicator
523115	Rudder Trim Indicator
523139	Tachometer Indicator
523188	Flap Position Indicator
523244	Fuel Temperature Indicator

523250	Dual Hydraulic Pressure Indicator
523267	Cabin Air Temperature Indicator
523271	Temperature Indicator
523281	Oil Temperature & Pressure Indicator
523297	Cockpit/Cabin Temperature Indicator
523347	Itt Indicator
523401	Engine Torque Indicator
523402	Itt Indicator
523466	Itt Indicator
523535	Propeller Oil/Temperature Indicator
543944	Dual Tachometer Indicator
545344	Tach Generator
545345	Fuel Quantity Indicator
630000	Blower Motor
640000	Blower Motor
656520	Flux Valve
664543	Flux Valve
700348	Rpm Limit Detector
716879	Fuel Indicator
727790	Airspeed Indicator
738292	Dual Fuel Quantity Amplifier
748538	Fuel Quantity Indicator
748735	Fuel Quantity Indicator
749753	Indicator
764590	Tank Probe, Upper
764591	Tank Probe, Lower
764805	Fuel Probe
766804	Fuel Probe
788664	Nr/Nf Indicator
788864	Nr/Nf Indicator
794165	Fuel Probe
794166	Fuel Probe
864490	Voltmeter
1168504	Airspeed Indicator
1775277	Flux Valve
1896101	Horizontal Situation Indicator
1918407	Lighting Panel
2586047	COMPASS CONTROLLER
2593691	Vertical Gyro
4019759	Directional Gyro
4094489	Gyro Horizon
4100579	Fan Performance Monitor
4168732	Retractable Light
4168748	Retractable Light
4168762	Searchlight
4171072	Retractable Light
4189941	Windshield Wiper System
4202104	Searchlight
4217212	Retractable Light

4217228	Searchlight
4219867	Retractable Light
4226271	Searchlight
4257624	Retractable Light
4274479	Searchlight
4296000	N Rotor Indicator
4296788	Searchlight
4307405	Searchlight
4360404	Searchlight
4361646	Searchlight
5017567	Phase Adapter
6481302	Anti-Collision Light
6482002	Power Supply
6485000	Anti-Collision Light
6485200	Anti-Collision Light
6829274	Torque Indicator
7010133	Flux Valve
7028511	Strobe Light
7090502	Anti-Collision Light
24929532	Encoding Altimeter
32005023	Tach Generator
39951213	Tachometer Indicator
41003285	Switch
83910001	Handgrip
83910004	Handgrip
83910051	Handgrip
88060263	Transmission Pressure Gauge
420800001	Blower Motor
420800006	Evaporation Motor
446000275	Vertical Speed Indicator
446001239	Fuel Quantity Indicator
446001265	Fuel Quantity Indicator
488001241	Selector Switch
488069366	Fuel Selector Switch
495269986	Fuel Probe
4060001130	Anti-Collision Light
4700716860	Rear Position Light
5040017908	Gyro Horizon
5040031914	Attitude Gyro
5040045901	Gyro Horizon
5040045904	Gyro Horizon
5040053901	Attitude Indicator
5050010904	Directional Gyro
5050031903	Directional Gyro
5050031904	Directional Gyro
5050031930	Directional Gyro
5070020910	Turn & Bank Indicator
5207137011	Rmi
5209130004	Horizontal Situation Indicator

6401497000	Temperature Probe
6700525800	Pressure Indicator
6700527200	Temperature & Pressure Indicator
6708110101	Voltmeter
6742109405	Dual Tachometer Indicator
6742122600	Fuel Quantity Transmitter
6742125200	Pressure Indicator
6783300403	Tachometer Indicator
6783300600	Fuel Quantity Transmitter
6783300700	Fuel Quantity Transmitter
6783300800	Fuel Quantity Transmitter
6783301902	Fuel Quantity Indicator
6784402202	Pressure Switch
6786417003	Fuel Limit Detector
9550176240	Torque Transmitter
9580113720	Torque Transmitter
5.93014E+12	Fuel Level Switch
5.93014E+12	Fuel Level Switch
5.93014E+12	Fuel Level Switch
5.93014E+12	Fuel Level Switch
5.93014E+12	Fuel Level Switch
5.93014E+12	Fuel Level Switch
5.93015E+12	Fuel Level Switch
6.34014E+12	Control Unit
6.61001E+12	Position Indicator
6.61001E+12	Position Indicator
6.61001E+12	Attitude Indicator
6.61001E+12	Position Indicator
6.61001E+12	Position Indicator
6.61001E+12	Encoding Altimeter
6.61501E+12	Mode Annunciator
6.62001E+12	Tachometer Indicator
6.62001E+12	Dual Torque Indicator
6.625E+12	Ac Ammeter
6.62514E+12	Voltmeter
6.62514E+12	Ammeter
6.68001E+12	Oil Quantity Indicator
6.68014E+12	Tach Generator
6.68014E+12	Tach Generator
6.685E+12	Temperature Indicator
6.68501E+12	Pressure Indicator
6.68501E+12	Oil Pressure Indicator
6.68501E+12	Temperature Indicator
6.68501E+12	Temperature Indicator
6.68501E+12	Temperature Indicator
000-20382	Oil Temperature & Pressure Indicator
000-20439-2	Temperature & Pressure Indicator
000-20442-2	Oil Temperature & Pressure Indicator
0003-007	Altimeter

006-5169-003	Vhf Communications Transceiver
006-5169-01	Vhf Communications Transceiver
006-5169-02	Vhf Communications Transceiver
006-5169-03	Vhf Communications Transceiver
006-5169-04	Vhf Communications Transceiver
010-017-007	Liquid Level Transmitter
01-003-1	Exhaust Gas Temperature Indicator
01-004-1	Exhaust Gas Temperature Indicator
01-0770285-11	Anti-Collision Light
01-0770285-21	Anti-Collision Light
01-0770905-01	Anti-Collision Light
01-200-102	Encoding Altimeter
01-200-103	Encoding Altimeter
01-200-105	Encoding Altimeter
01-200-106	Encoding Altimeter
017-22000-01	Annunicator Dimmer
017499-1	Light Assembly
017500-11	Searchlight
0202644-001	Searchlight
0202644-002	Searchlight
0202644-003	Searchlight
0202644-004	Searchlight
0202644-005	Searchlight
020644-004	Searchlight
020-960-001	Fuel Quantity Tank Unit
021213-1	Audio Mode Selector
022-100-000	Compass
022-100-010	Compass
022-100-020	Compass
022-100-110	Compass
022-100-120	Compass
022-200-000	Compass
022-200-010	Compass
022-200-011	Compass
022-200-020	Compass
022-200-031	Compass
022-200-041	Compass
022-200-110	Compass
022-200-120	Compass
022-201-041	Compass
022-210-031	Compass
022-210-041	Compass
022-210-120	Compass
022-220-031	Compass
022-220-041	Compass
022-220-120	Compass
022TA01-01	Warning Panel
022TA04-01	Control Warning System
022TA05-01A	Control Warning System

0230116-001	Tri Lamp Searchlight
0230116-002	Tri Lamp Searchlight
0230134-002	Searchlight
0230134-003	Searchlight
0230154-001	Searchlight
0230154-002	Searchlight
0230311-001	Searchlight
0230311-003	Searchlight
0230311-004	Searchlight
0230311-005	Searchlight
0230311-006	Searchlight
0230311-007	Searchlight
0230311-101	Searchlight
0230311-103	Searchlight
0230311-104	Searchlight
0230311-105	Searchlight
0230311-106	Searchlight
0230311-107	Searchlight
0230380-001	Searchlight
0230380-002	Searchlight
0230380-003	Searchlight
0230380-101	Searchlight
0230380-102	Searchlight
0230380-111	Searchlight
0230380-112	Searchlight
0230380-201	Searchlight
0230380-202	Searchlight
0230380-211	Searchlight
0230380-212	Searchlight
0230390-001	Searchlight
0230390-002	Searchlight
0230390-101	Searchlight
0230390-102	Searchlight
0230390-201	Searchlight
0230390-202	Searchlight
0230397-001	Searchlight
0230397-002	Searchlight
0230636-001	Searchlight
0230636-002	Searchlight
0230636-003	Searchlight
0230636-004	Searchlight
0230636-005	Searchlight
0230636-006	Searchlight
0230636-007	Searchlight
0230636-008	Searchlight
0230636-009	Searchlight
0230636-010	Searchlight
0230636-011	Searchlight
0230636-012	Searchlight

0230644-001	Searchlight
0230644-002	Searchlight
0230697-101	Searchlight
0230697-102	Searchlight
0230697-201	Searchlight
0230697-202	Searchlight
0231102-001	Searchlight
0231102-002	Searchlight
0231102-003	Searchlight
0231102-004	Searchlight
0231102-005	Searchlight
0231102-006	Searchlight
0231102-007	Searchlight
0231102-008	Searchlight
0231241-101	Searchlight
0231241-102	Searchlight
0231241-201	Searchlight
0231241-202	Searchlight
0231318-101	Searchlight
0231318-102	Searchlight
0231318-201	Searchlight
0231318-202	Searchlight
0231370-001	Searchlight
0231370-002	Searchlight
027-003-001	Fuel Quantity Tank Unit
027-003-002	Fuel Quantity Tank Unit
027-003-003	Fuel Quantity Tank Unit
027-003-004	Fuel Quantity Tank Unit
027-003-005	Fuel Quantity Tank Unit
027-003-006	Fuel Quantity Tank Unit
027-003-013	Fuel Quantity Tank Unit
028-025-001	Fuel Quantity Transmitter
0306-003	Dc Voltmeter
0307-007	Dc Ammeter
031216-1	VHF/Low Band/FM Transceiver
031217-1	VHF/Low Band/FM Transceiver
031220-1	Audio Mode Selector
0355-0391	TORQUE GAUGE INDICATOR
0355-0474	TORQUE GAUGE INDICATOR
04DB18-1064	Fuel Quantity Indicator
04DB23-1090	Fuel Quantity Indicator
050052-1	Blower Motor
050084-4	Fan Motor
050084-6	Blower Assembly
050084-7	Blower Assembly
05088 CU09609168	Servo Motor
05088-91D74-01	Cabin Temperature Control
05088-91D74-1	Servo Control
05088-91D75-1	Actuator

051242-1	Remote Control Head
056-0023-08	Turn & Bank Indicator
060-00015-0000	Directional Gyro
060-00016-0000	Directional Gyro
060-00017-0000	Flight Director
060-00020-0001	Gyro Horizon
060-00026-0000	Vertical Gyro
060-00040-0100	3 Axis Sensor
060-00040-0200	3 Axis Sensor
060-0013-00	Directional Gyro
060-0013-01	Directional Gyro
060-0015-00	Directional Gyro
060-0016-00	Directional Gyro
060-0016-01	Directional Gyro
060-0017-00	Flight Director
060-0020-01	Gyro Horizon
060-0024-00	Rate Gyro
060-0026-00	Vertical Gyro
060-0037-00	Attitude Gyro
060-0037-01	Gyro Horizon
060-0037-02	Gyro Horizon
060-0037-03	Gyro Horizon
060-0038-00	Gyro Horizon
060-0038-01	Gyro Horizon
060-0038-02	Gyro Horizon
060-0038-03	Gyro Horizon
060-0038-04	Gyro Horizon
060-0038-05	Gyro Horizon
060-01078-0014	Navigation Receiver
060-2600-15C	Static Inverter
061247-1	Remote Control Head
064-01009-0000	Vhf Communications Transceiver
064-01016-0000	CONTROL UNIT
064-01016-0001	CONTROL UNIT
064-01016-0002	CONTROL UNIT
064-01016-0003	CONTROL UNIT
064-01016-0004	CONTROL UNIT
064-01016-0010	CONTROL UNIT
064-01016-0011	CONTROL UNIT
064-01016-0012	CONTROL UNIT
064-01016-0013	CONTROL UNIT
064-01016-0014	CONTROL UNIT
064-01019-0000	Vhf Communications Transceiver
064-01019-0004	Vhf Communications Transceiver
064-01019-0005	Vhf Communications Transceiver
064-01019-0022	Vhf Communications Transceiver
064-01023-0000	Vhf Communications Transceiver
064-01053-0010	Vhf Communications Transceiver
064-01053-0011	Vhf Communications Transceiver

064-01053-0012	Vhf Communications Transceiver
064-01053-0030	Vhf Communications Transceiver
064-01053-0031	Vhf Communications Transceiver
064-01053-0032	Vhf Communications Transceiver
064-01053-0060	Vhf Communications Transceiver
064-01054-0010	Vhf Communications Transceiver
064-01054-0011	Vhf Communications Transceiver
064-01054-0012	Vhf Communications Transceiver
064-01054-0030	Vhf Communications Transceiver
064-01054-0031	Vhf Communications Transceiver
064-01054-0032	Vhf Communications Transceiver
064-01054-0040	Vhf Communications Transceiver
064-01054-0041	Vhf Communications Transceiver
064-01054-0042	Vhf Communications Transceiver
064-01054-0050	Vhf Communications Transceiver
064-01054-0060	Vhf Communications Transceiver
064-01065-0100	Vhf Communications Transceiver
064-01084-0101	Vhf Communications Transceiver
064-1009-00	Vhf Communications Transceiver
064-1009-03	Vhf Communications Transceiver
064-1016-00	CONTROL UNIT
064-1016-01	CONTROL UNIT
064-1016-02	CONTROL UNIT
064-1016-03	CONTROL UNIT
064-1016-04	CONTROL UNIT
064-1016-10	CONTROL UNIT
064-1016-11	CONTROL UNIT
064-1016-12	CONTROL UNIT
064-1016-13	CONTROL UNIT
064-1016-14	CONTROL UNIT
064-1019-00	Vhf Communications Transceiver
064-1019-01	Vhf Communications Transceiver
064-1019-02	Vhf Communications Transceiver
064-1019-04	Vhf Communications Transceiver
064-1019-05	Vhf Communications Transceiver
064-1019-06	Vhf Communications Transceiver
064-1019-07	Vhf Communications Transceiver
064-1019-10	Vhf Communications Transceiver
064-1019-11	Vhf Communications Transceiver
064-1019-12	Vhf Communications Transceiver
064-1019-20	Vhf Communications Transceiver
064-1019-21	Vhf Communications Transceiver
064-1019-22	Vhf Communications Transceiver
064-1019-31	Vhf Communications Transceiver
064-1019-32	Vhf Communications Transceiver
064-1021-00	Vhf Communications Transceiver
064-1021-01	Vhf Communications Transceiver
064-1021-05	Vhf Communications Transceiver
064-1021-10	Vhf Communications Transceiver

064-1021-11	Vhf Communications Transceiver
064-1021-20	Vhf Communications Transceiver
064-1023-00	Vhf Communications Transceiver
064-1023-01	Vhf Communications Transceiver
064-1023-02	Vhf Communications Transceiver
064-1023-03	Vhf Communications Transceiver
064-1023-04	Vhf Communications Transceiver
064-1023-05	Vhf Communications Transceiver
064-1023-06	Vhf Communications Transceiver
064-1023-07	Vhf Communications Transceiver
064-1023-08	Vhf Communications Transceiver
064-1023-09	Vhf Communications Transceiver
064-1023-10	Vhf Communications Transceiver
064-1023-11	Vhf Communications Transceiver
064-1023-12	Vhf Communications Transceiver
064-1023-13	Vhf Communications Transceiver
064-1023-14	Vhf Communications Transceiver
064-1023-15	Vhf Communications Transceiver
064-1051-10	Vhf Communications Transceiver
064-1051-11	Vhf Communications Transceiver
064-1051-30	Vhf Communications Transceiver
064-1051-31	Vhf Communications Transceiver
064-1051-50	Vhf Communications Transceiver
064-1051-51	Vhf Communications Transceiver
064-1051-60	Vhf Communications Transceiver
064-1051-61	Vhf Communications Transceiver
064-1051-70	Vhf Communications Transceiver
064-1052-10	Vhf Communications Transceiver
064-1052-11	Vhf Communications Transceiver
064-1052-30	Vhf Communications Transceiver
064-1052-31	Vhf Communications Transceiver
064-1052-50	Vhf Communications Transceiver
064-1052-51	Vhf Communications Transceiver
064-1052-60	Vhf Communications Transceiver
064-1052-61	Vhf Communications Transceiver
064-1052-70	Vhf Communications Transceiver
064-1053-10	Vhf Communications Transceiver
064-1053-11	Vhf Communications Transceiver
064-1053-12	Vhf Communications Transceiver
064-1053-30	Vhf Communications Transceiver
064-1053-31	Vhf Communications Transceiver
064-1053-32	Vhf Communications Transceiver
064-1053-60	Vhf Communications Transceiver
064-1054-10	Vhf Communications Transceiver
064-1054-11	Vhf Communications Transceiver
064-1054-12	Vhf Communications Transceiver
064-1054-30	Vhf Communications Transceiver
064-1054-31	Vhf Communications Transceiver
064-1054-32	Vhf Communications Transceiver

064-1054-40	Vhf Communications Transceiver
064-1054-41	Vhf Communications Transceiver
064-1054-42	Vhf Communications Transceiver
064-1054-50	Vhf Communications Transceiver
064-1054-60	Vhf Communications Transceiver
064-1084-0101	Vhf Communications Transceiver
064-1084-0201	Vhf Communications Transceiver
065-00053-0000	Altitude Selector/Alerter
065-00053-0008	Altitude Selector/Alerter
065-0053-00	Altitude Selector/Alerter
065-0053-08	Altitude Selector/Alerter
066-0015-00	Directional Gyro
066-01047-0000	ADF RECEIVER
066-01047-0001	ADF RECEIVER
066-01053-0000	Transponder
066-01053-0002	Transponder
066-01055-01	Isolation Amplifier
066-01062-0000	Atrcbs Transponder
066-01062-0001	Atrcbs Transponder
066-01062-0002	Atrcbs Transponder
066-01062-0003	Atrcbs Transponder
066-01062-0010	Atrcbs Transponder
066-01062-0020	Atrcbs Transponder
066-01063-0000	VOR/LOC CONVERTER & GLIDSCOPE RECEIVER
066-01066-0025	Navigation Receiver
066-01067-0000	Navigation Receiver
066-01067-0001	Navigation Receiver
066-01067-0002	Navigation Receiver
066-01067-0003	Navigation Receiver
066-01067-0004	Navigation Receiver
066-01067-0005	Navigation Receiver
066-01067-0010	Navigation Receiver
066-01069-0000	Dme Indicator
066-01069-0001	Dme Indicator
066-01069-0002	Dme Indicator
066-01069-0003	Dme Indicator
066-01069-0004	Dme Indicator
066-01069-0005	Dme Indicator
066-01069-0006	Dme Indicator
066-01069-0007	Dme Indicator
066-01069-0008	Dme Indicator
066-01069-0009	Dme Indicator
066-01069-0010	Dme Indicator
066-01069-0011	Dme Indicator
066-01069-0012	Dme Indicator
066-01069-0013	Dme Indicator
066-01069-0014	Dme Indicator
066-01069-0015	Dme Indicator
066-01071-0000	Transponder

066-01072-000	Adf Control
066-01072-0000	Adf Control
066-01072-0001	Adf Control
066-01072-0002	Adf Control
066-01072-0003	Adf Control
066-01072-0004	Adf Control
066-01072-0005	Adf Control
066-01072-0006	Adf Control
066-01072-0007	Adf Control
066-01072-001	Adf Control
066-01072-0014	Adf Control
066-01072-0015	Adf Control
066-01072-0017	Adf Control
066-01072-002	Adf Control
066-01072-003	Adf Control
066-01077-0000	Adf Receiver
066-01077-0001	Adf Receiver
066-01078-0010	Navigation Receiver
066-01078-0011	Navigation Receiver
066-01078-0012	Navigation Receiver
066-01078-0013	Navigation Receiver
066-01078-0014	Navigation Receiver
066-01078-0015	Navigation Receiver
066-01078-0016	Navigation Receiver
066-01078-0017	Navigation Receiver
066-01141-0101	Transponder
066-01141-0201	Transponder
066-01141-0501	Transponder
066-01156-0101	Transponder
066-01156-0201	Transponder
066-03034-0018	Navigation Receiver
066-03034-0022	Navigation Indicator
066-03044-0000	Radar Altimeter
066-03046-0001	Pictorial Navigation Indicator
066-03046-0005	H.S.I.
066-03051-0000	Altitude Digitizer
066-03060-0001	Rmi
066-03060-0002	Rmi
066-03060-0003	Rmi
066-03060-0004	Rmi
066-03060-0005	Rmi
066-03062-00 08	Encoding Altimeter
066-03062-0000	Altimeter
066-03062-0002	Encoding Altimeter
066-03064-0001	Encoding Altimeter
066-03064-0002	Altimeter
066-03064-0003	Altimeter
066-03064-0005	Encoding Altimeter
066-03064-005	Encoding Altimeter

066-04009-0000	VOR/LOC CONVERTER & GLIDSCOPE RECEIVER
066-04010-0000	Navigation Receiver
066-04010-0001	Navigation Receiver
066-04010-0002	Navigation Receiver
066-04010-0003	Navigation Receiver
066-04010-0004	Navigation Receiver
066-04010-0010	Navigation Receiver
066-04010-0011	Navigation Receiver
066-04010-0012	Navigation Receiver
066-04010-0013	Navigation Receiver
066-04010-0014	Navigation Receiver
066-04010-0015	Navigation Receiver
066-04010-0016	Navigation Receiver
066-04010-0017	Navigation Receiver
066-04010-0018	Navigation Receiver
066-04010-0019	Navigation Receiver
066-04010-0020	Navigation Receiver
066-04010-0021	Navigation Receiver
066-04010-0030	Navigation Receiver
066-04010-0031	Navigation Receiver
066-04010-0032	Navigation Receiver
066-04010-0033	Navigation Receiver
066-04010-0034	Navigation Receiver
066-04010-0035	Navigation Receiver
066-04010-0036	Navigation Receiver
066-04010-0037	Navigation Receiver
066-04010-0038	Navigation Receiver
066-04010-0039	Navigation Receiver
066-04010-0040	Navigation Receiver
066-04010-0060	Navigation Receiver
066-04010-0061	Navigation Receiver
066-04010-0062	Navigation Receiver
066-04010-0063	Navigation Receiver
066-04010-0064	Navigation Receiver
066-04010-0065	Navigation Receiver
066-04010-0066	Navigation Receiver
066-04010-0067	Navigation Receiver
066-04010-0068	Navigation Receiver
066-04010-0069	Navigation Receiver
066-04010-0070	Navigation Receiver
066-04010-0071	Navigation Receiver
066-1016-00	Adf Receiver
066-1021-00	Marker Beacon Receiver
066-1021-01	Marker Beacon Receiver
066-1021-02	Marker Beacon Receiver
066-1024-00	Marker Beacon Receiver
066-1024-01	Beacon Marker Receiver
066-1024-02	Marker Beacon Receiver
066-1025-05	Vhf Navigation Receiver

066-1034-00	Transponder
066-1034-01	Atc Transponder
066-1034-02	Atc Transponder
066-1034-03	Atc Transponder
066-1034-04	Atc Transponder
066-1034-07	Transponder
066-1034-10	Atc Transponder
066-1034-11	Transponder
066-1037-08	Dme Indicator
066-1041-00	Atc Transponder
066-1041-01	Atc Transponder
066-1044-00	Marker Beacon Receiver
066-1044-01	Marker Beacon Receiver
066-1047-00	ADF RECEIVER
066-1047-01	Adf Receiver
066-1053-00	Transponder
066-1053-02	Atc Transponder
066-1055-00	Audio Controller
066-1055-01	Audio Controller
066-1055-02	Audio Controller
066-1055-03	Audio Controller
066-1055-50	Audio Controller
066-1055-51	Audio Controller
066-1055-52	Audio Controller
066-1055-53	Audio Controller
066-1055-54	Audio Controller
066-1055-65	Audio Controller
066-1055-68	Audio Controller
066-1055-70	Audio Controller
066-1055-71	Audio Controller
066-1061-003	Radar Altimeter
066-1061-01	Radar Altimeter
066-1061-02	Radar Altimeter
066-1061-03	Radar Altimeter
066-1062-00	Atc Transponder
066-1062-01	Atc Transponder
066-1062-02	Atc Transponder
066-1062-03	Atc Transponder
066-1062-10	Atc Transponder
066-1062-20	Atc Transponder
066-1063-00	VOR/LOC CONVERTER & GLIDSCOPE RECEIVER
066-1065-00	Marker Beacon Receiver
066-1066-00	Dme Transceiver
066-1066-01	Dme Transceiver
066-1066-02	Dme Transceiver
066-1066-11	Dme Transceiver
066-1066-20	Dme Transceiver
066-1066-21	Dme Transceiver
066-1066-22	Dme Transceiver

066-1066-23	Dme Transceiver
066-1066-24	Dme Transceiver
066-1066-25	Dme Transceiver
066-1066-31	Dme Transceiver
066-1066-41	Dme Indicator
066-1067-00	Navigation Receiver
066-1067-01	Navigation Receiver
066-1067-02	Navigation Reciever
066-1067-03	Navigation Receiver
066-1067-04	Navigation Receiver
066-1067-05	Navigation Reciever
066-1067-10	Navigation Receiver
066-1068-00	Dme Transceiver
066-1068-01	Dme Transceiver
066-1068-04	Dme Transceiver
066-1069-00	Dme Indicator
066-1069-01	Dme Indicator
066-1069-02	Dme Indicator
066-1069-03	Dme Indicator
066-1069-04	Dme Indicator
066-1069-05	Dme Indicator
066-1069-06	Dme Indicator
066-1069-07	Dme Indicator
066-1069-08	Dme Indicator
066-1069-09	Dme Indicator
066-1069-10	Dme Indicator
066-1069-11	Dme Indicator
066-1069-12	Dme Indicator
066-1069-13	Dme Indicator
066-1069-14	Dme Indicator
066-1069-15	Dme Indicator
066-1070-00	Dme Indicator
066-1070-01	Dme Indicator
066-1071-00	Transponder
066-1072-00	Adf Receiver
066-1072-01	Adf Receiver
066-1072-02	Adf Receiver
066-1072-03	Adf Receiver
066-1072-04	Adf Receiver
066-1072-05	Adf Receiver
066-1072-06	Adf Receiver
066-1072-07	Adf Receiver
066-1072-14	Adf Receiver
066-1072-15	Adf Receiver
066-1072-17	Adf Receiver
066-1077-00	Adf Receiver
066-1077-01	Adf Receiver
066-1078-00	Navigation Receiver
066-1078-01	Navigation Receiver

066-1078-02	Navigation Receiver
066-1078-03	Navigation Receiver
066-1078-04	Navigation Receiver
066-1078-05	Navigation Receiver
066-1078-06	Navigation Receiver
066-1078-07	Navigation Receiver
066-1078-08	Navigation Receiver
066-1078-10	Navigation Receiver
066-1078-11	Navigation Receiver
066-1078-12	Navigation Receiver
066-1078-13	Navigation Receiver
066-1078-14	Navigation Receiver
066-1078-15	Navigation Receiver
066-1078-16	Navigation Receiver
066-1078-17	Navigation Receiver
066-1088-00	Dme Indicator
066-1088-01	Dme Indicator
066-1107-00	DISTANCE MEASURING SYSTEM
066-1107-01	DISTANCE MEASURING SYSTEM
066-1107-10	DISTANCE MEASURING SYSTEM
066-1107-11	DISTANCE MEASURING SYSTEM
066-1107-12	DISTANCE MEASURING SYSTEM
066-1107-20	DISTANCE MEASURING SYSTEM
066-1107-21	DISTANCE MEASURING SYSTEM
066-1216-12	Navigation Control
066-1216-13	Navigation Control
066-1216-15	Navigation Control
066-1216-16	Navigation Control
066-1216-17	Navigation Control
066-1216-18	Navigation Control
066-1216-20	Navigation Control
066-1216-21	Navigation Control
066-1216-22	Navigation Control
066-1216-23	Navigation Control
066-1216-25	Navigation Control
066-1216-26	Navigation Control
066-1216-27	Navigation Control
066-3012-00	Marker Light
066-3012-01	Marker Light
066-3012-010	Marker Beacon Receiver
066-3014-05	Adf Indicator
066-3014-06	Adf Indicator
066-3024-00	H.S.I.
066-3024-01	H.S.I.
066-3024-02	H.S.I.
066-3024-03	H.S.I.
066-3024-04	H.S.I.
066-3024-05	H.S.I.
066-3024-08	H.S.I.

066-3024-09	H.S.I.
066-3024-10	H.S.I.
066-3024-11	H.S.I.
066-3024-12	H.S.I.
066-3024-13	H.S.I.
066-3024-17	H.S.I.
066-3024-18	H.S.I.
066-3024-19	H.S.I.
066-3024-20	H.S.I.
066-3024-30	H.S.I.
066-3024-32	H.S.I.
066-3024-33	H.S.I.
066-3024-35	H.S.I.
066-3024-38	H.S.I.
066-3024-40	H.S.I.
066-3024-41	H.S.I.
066-3024-43	H.S.I.
066-3024-47	H.S.I.
066-3024-48	H.S.I.
066-3024-49	H.S.I.
066-3024-50	H.S.I.
066-3027-10	H.S.I.
066-3027-11	H.S.I.
066-3027-12	H.S.I.
066-3027-13	H.S.I.
066-3027-14	H.S.I.
066-3027-15	H.S.I.
066-3027-16	H.S.I.
066-3027-17	H.S.I.
066-3027-18	H.S.I.
066-3027-19	H.S.I.
066-3027-20	H.S.I.
066-3027-21	H.S.I.
066-3027-22	H.S.I.
066-3027-23	H.S.I.
066-3027-24	H.S.I.
066-3027-25	H.S.I.
066-3027-26	H.S.I.
066-3029-00	H.S.I.
066-3029-01	H.S.I.
066-3032-11	Dme Indicator
066-3034-00	Navigation Indicator
066-3034-01	Navigation Indicator
066-3034-02	Navigation Indicator
066-3034-03	Navigation Indicator
066-3034-04	Navigation Indicator
066-3034-05	Navigation Indicator
066-3034-06	Navigation Indicator
066-3034-07	Navigation Indicator

066-3034-08	Navigation Indicator
066-3034-09	Navigation Indicator
066-3034-10	Navigation Indicator
066-3034-11	Navigation Indicator
066-3034-12	Navigation Indicator
066-3034-13	Navigation Indicator
066-3034-14	Navigation Indicator
066-3034-15	Navigation Indicator
066-3034-16	Navigation Indicator
066-3034-17	Navigation Indicator
066-3034-18	Navigation Indicator
066-3034-19	Navigation Indicator
066-3034-20	Navigation Indicator
066-3034-21	Navigation Indicator
066-3034-22	Navigation Indicator
066-3034-23	Navigation Indicator
066-3034-24	Navigation Indicator
066-3034-25	Navigation Indicator
066-3034-26	Navigation Indicator
066-3038-00	Radio Magnetic Indicator
066-3038-01	Radio Magnetic Indicator
066-3039-00	Vor/Loc Indicator
066-3042-00	R.M.I.
066-3044-00	Radar Altimeter
066-3044-01	Radar Altimeter
066-3044-02	Radar Altimeter
066-3044-03	Radar Altimeter
066-3045-10	H.S.I.
066-3045-11	H.S.I.
066-3045-12	H.S.I.
066-3045-13	H.S.I.
066-3045-14	H.S.I.
066-3045-15	H.S.I.
066-3045-18	H.S.I.
066-3045-19	H.S.I.
066-3045-20	H.S.I.
066-3045-21	H.S.I.
066-3045-22	H.S.I.
066-3045-23	H.S.I.
066-3045-26	H.S.I.
066-3045-40	H.S.I.
066-3045-42	H.S.I.
066-3045-43	H.S.I.
066-3045-45	H.S.I.
066-3045-48	H.S.I.
066-3045-50	H.S.I.
066-3045-53	H.S.I.
066-3045-56	H.S.I.
066-3046-00	H.S.I.

066-3046-01	H.S.I.
066-3046-02	H.S.I.
066-3046-03	H.S.I.
066-3046-04	H.S.I.
066-3046-05	H.S.I.
066-3046-06	H.S.I.
066-3046-07	H.S.I.
066-3046-08	H.S.I.
066-3046-10	H.S.I.
066-3046-11	H.S.I.
066-3046-12	H.S.I.
066-3051-00	Altimeter
066-3054-00	Radar Altimeter
066-3054-01	Radar Altimeter
066-3054-03	Radar Altimeter
066-3054-04	Radar Altimeter
066-3056-00	Vor/Loc Converter/Indicator
066-3056-00	Vor/Loc Converter/Indicator
066-3056-01	Vor/Loc Converter/Indicator
066-3056-02	Vor/Loc Converter/Indicator
066-3056-02	Vor/Loc Converter/Indicator
066-3056-03	Vor/Loc Converter/Indicator
066-3059-00	Dual Adf Indicator
066-3059-01	Dual Adf Indicator
066-3060-00	Radio Magnetic Indicator
066-3060-01	Radio Magnetic Indicator
066-3060-02	Radio Magnetic Indicator
066-3060-03	Radio Magnetic Indicator
066-3060-04	Radio Magnetic Indicator
066-3060-05	Radio Magnetic Indicator
066-3060-06	Radio Magnetic Indicator
066-3060-10	Radio Magnetic Indicator
066-3060-11	Radio Magnetic Indicator
066-3060-12	Radio Magnetic Indicator
066-3060-13	Radio Magnetic Indicator
066-3062-00	Encoding Altimeter
066-3062-01	Encoding Altimeter
066-3062-02	Encoding Altimeter
066-3062-03	Encoding Altimeter
066-3062-04	Altimeter
066-3062-05	Altimeter
066-3062-06	Altimeter
066-3062-07	Altimeter
066-3062-08	Encoding Altimeter
066-3062-09	Altimeter
066-3062-10	Altimeter
066-3062-11	Altimeter
066-3062-12	Altimeter
066-3063-00	Adf Indicator

066-3063-01	Adf Indicator
066-3064-005	Altimeter
066-3064-01	Altimeter
066-3064-05	Altimeter
066-3077-60	Altimeter/Vertical Speed Indicator
066-3081-00	Horizontal Situation Indicator
066-4007-00	Vor Receiver
066-4009-00	Vor Converter
066-4010-00	Navigation Receiver
066-4010-01	Navigation Receiver
066-4010-02	Navigation Receiver
066-4010-03	Navigation Receiver
066-4010-04	Navigation Receiver
066-4010-10	Navigation Receiver
066-4010-11	Navigation Receiver
066-4010-12	Navigation Receiver
066-4010-13	Navigation Receiver
066-4010-14	Navigation Receiver
066-4010-15	Navigation Receiver
066-4010-16	Navigation Receiver
066-4010-17	Navigation Receiver
066-4010-18	Navigation Receiver
066-4010-19	Navigation Receiver
066-4010-20	Navigation Receiver
066-4010-21	Navigation Receiver
066-4010-30	Navigation Receiver
066-4010-31	Navigation Receiver
066-4010-32	Navigation Receiver
066-4010-33	Navigation Receiver
066-4010-34	Navigation Receiver
066-4010-35	Navigation Receiver
066-4010-36	Navigation Receiver
066-4010-37	Navigation Receiver
066-4010-38	Navigation Receiver
066-4010-39	Navigation Receiver
066-4010-40	Navigation Receiver
066-4010-41	Navigation Receiver
066-4010-60	Navigation Receiver
066-4010-61	Navigation Receiver
066-4010-62	Navigation Receiver
066-4010-63	Navigation Receiver
066-4010-64	Navigation Receiver
066-4010-65	Navigation Receiver
066-4010-66	Navigation Receiver
066-4010-67	Navigation Receiver
066-4010-69	Navigation Receiver
066-4010-70	Navigation Receiver
066-4010-71	Navigation Receiver
066-4010-80	Navigation Receiver

066-4010-81	Navigation Receiver
066-4010-82	Navigation Receiver
066-4010-83	Navigation Receiver
066-4010-84	Navigation Receiver
066-4010-85	Navigation Receiver
066-4010-86	Navigation Receiver
066-4010-87	Navigation Receiver
066-4010-88	Navigation Receiver
066-4010-89	Navigation Receiver
066-4010-90	Navigation Receiver
069-01024-0000	Vhf Transceiver /Navigation Receiver
069-01024-0001	Vhf Transceiver /Navigation Receiver
069-01024-0002	Vhf Transceiver /Navigation Receiver
069-01024-0003	Vhf Transceiver /Navigation Receiver
069-01024-0004	Vhf Transceiver /Navigation Receiver
069-01024-0005	Vhf Transceiver /Navigation Receiver
069-01024-0006	Vhf Transceiver /Navigation Receiver
069-01024-0007	Vhf Transceiver /Navigation Receiver
069-01024-0008	Vhf Transceiver /Navigation Receiver
069-01024-0009	Vhf Transceiver /Navigation Receiver
069-01024-0010	Vhf Transceiver /Navigation Receiver
069-01024-0011	Vhf Transceiver /Navigation Receiver
069-01024-0012	Vhf Transceiver /Navigation Receiver
069-01024-0013	Vhf Transceiver /Navigation Receiver
069-01024-0020	Vhf Transceiver /Navigation Receiver
069-01024-0030	Vhf Transceiver /Navigation Receiver
069-01024-0031	Vhf Transceiver /Navigation Receiver
069-01024-0032	Vhf Transceiver /Navigation Receiver
069-01024-0033	Vhf Transceiver /Navigation Receiver
069-01024-0034	Vhf Transceiver /Navigation Receiver
069-01024-0035	Vhf Transceiver /Navigation Receiver
069-01024-0036	Vhf Transceiver /Navigation Receiver
069-01024-0037	Vhf Transceiver /Navigation Receiver
069-01024-0038	Vhf Transceiver /Navigation Receiver
069-01024-0039	Vhf Transceiver /Navigation Receiver
069-01024-0040	Vhf Transceiver /Navigation Receiver
069-01024-0041	Vhf Transceiver /Navigation Receiver
069-01024-0042	Vhf Transceiver /Navigation Receiver
069-01024-0043	Vhf Transceiver /Navigation Receiver
069-01024-0099	Vhf Transceiver /Navigation Receiver
069-01025-0025	Transceiver
069-01028-0101	Transceiver
069-01033-0101	Transponder
069-01033-0201	Transceiver
069-1019-00	Vhf Transceiver /Navigation Receiver
069-1021-00	Vhf Transceiver /Navigation Receiver
069-1024-00	Vhf Transceiver /Navigation Receiver
069-1024-01	Vhf Transceiver /Navigation Receiver
069-1024-02	Vhf Transceiver /Navigation Receiver

069-1024-03	Vhf Transceiver /Navigation Receiver
069-1024-04	Vhf Transceiver /Navigation Receiver
069-1024-05	Vhf Transceiver /Navigation Receiver
069-1024-06	Vhf Transceiver /Navigation Receiver
069-1024-07	Vhf Transceiver /Navigation Receiver
069-1024-08	Vhf Transceiver /Navigation Receiver
069-1024-09	Vhf Transceiver /Navigation Receiver
069-1024-10	Vhf Transceiver /Navigation Receiver
069-1024-11	Vhf Transceiver /Navigation Receiver
069-1024-12	Vhf Transceiver /Navigation Receiver
069-1024-13	Vhf Transceiver /Navigation Receiver
069-1024-20	Vhf Transceiver /Navigation Receiver
069-1024-30	Vhf Transceiver /Navigation Receiver
069-1024-31	Vhf Transceiver /Navigation Receiver
069-1024-32	Vhf Transceiver /Navigation Receiver
069-1024-33	Vhf Transceiver /Navigation Receiver
069-1024-34	Vhf Transceiver /Navigation Receiver
069-1024-35	Vhf Transceiver /Navigation Receiver
069-1024-36	Vhf Transceiver /Navigation Receiver
069-1024-37	Vhf Transceiver /Navigation Receiver
069-1024-38	Vhf Transceiver /Navigation Receiver
069-1024-39	Vhf Transceiver /Navigation Receiver
069-1024-40	Vhf Transceiver /Navigation Receiver
069-1024-41	Vhf Transceiver /Navigation Receiver
069-1024-42	Vhf Transceiver /Navigation Receiver
069-1024-43	Vhf Transceiver /Navigation Receiver
069-1024-99	Vhf Transceiver /Navigation Receiver
069-1025-00	Vhf Communications Transceiver
069-1025-01	Vhf Communications Transceiver
069-1025-02	Vhf Communications Transceiver
069-1025-03	Vhf Communications Transceiver
069-1025-04	Vhf Communications Transceiver
069-1025-05	Vhf Communications Transceiver
069-1025-06	Vhf Communications Transceiver
069-1025-07	Vhf Communications Transceiver
069-1025-08	Vhf Communications Transceiver
069-1025-09	Vhf Communications Transceiver
069-1025-10	Vhf Communications Transceiver
069-1025-11	Vhf Communications Transceiver
069-1025-12	Vhf Communications Transceiver
069-1025-13	Vhf Communications Transceiver
069-1025-14	Vhf Communications Transceiver
069-1025-15	Vhf Communications Transceiver
069-1025-20	Vhf Communications Transceiver
069-1025-21	Vhf Communications Transceiver
069-1025-22	Vhf Communications Transceiver
069-1025-23	Vhf Communications Transceiver
069-1025-24	Vhf Communications Transceiver
069-1025-25	Vhf Communications Transceiver

069-1025-26	Vhf Communications Transceiver
069-1025-27	Vhf Communications Transceiver
06F9300	Voltage Regulator
070-0609-001/1	Beacon Assembly
070-0609-001/2	Beacon Assembly
070-0609-001/3	Beacon Assembly
07031-64123-7A	Voltage Regulator
07031-94123-7	Voltage Regulator
07031-94123-7A	Voltage Regulator
07031-94214A	Voltage Regulator
071-0003-00	Remote Light Adapter
071-00111-0000	Nav Filter
071-01215-0024	Vhf Communications Transceiver
071-01215-0025	Vhf Communications Transceiver
071-01215-0026	Vhf Communications Transceiver
071-01215-0027	Vhf Communications Transceiver
071-01215-0029	Vhf Communications Transceiver
071-01215-0030	Vhf Communications Transceiver
071-01215-0031	Vhf Communications Transceiver
071-01215-0032	Vhf Communications Transceiver
071-01215-0034	Vhf Communications Transceiver
071-01215-0035	Vhf Communications Transceiver
071-01215-0036	Vhf Communications Transceiver
071-01215-0037	Vhf Communications Transceiver
071-01215-0038	Vhf Communications Transceiver
071-01215-0039	Vhf Communications Transceiver
071-01215-0040	Vhf Communications Transceiver
071-01215-0041	Vhf Communications Transceiver
071-01215-0042	Vhf Communications Transceiver
071-01215-0043	Vhf Communications Transceiver
071-01215-0044	Vhf Communications Transceiver
071-01215-0045	Vhf Communications Transceiver
071-01215-0054	Vhf Communications Transceiver
071-01215-0055	Vhf Communications Transceiver
071-01215-0056	Vhf Communications Transceiver
071-01215-0057	Vhf Communications Transceiver
071-01215-0059	Vhf Communications Transceiver
071-01215-0060	Vhf Communications Transceiver
071-01215-0061	Vhf Communications Transceiver
071-01215-0062	Vhf Communications Transceiver
071-01215-0064	Vhf Communications Transceiver
071-01215-0065	Vhf Communications Transceiver
071-01215-0066	Vhf Communications Transceiver
071-01215-0067	Vhf Communications Transceiver
071-01215-0070	Vhf Communications Transceiver
071-01215-0071	Vhf Communications Transceiver
071-01242-0000	Slaving Accessory
071-01242-0001	Slaving Accessory
071-01242-0002	Slaving Accessory

071-01242-0003	Slaving Accessory
071-01242-0004	Slaving Accessory
071-01242-0005	Slaving Accessory
071-01242-0006	Slaving Accessory
071-01242-0007	Slaving Accessory
071-01242-0008	Slaving Accessory
071-01242-0009	Slaving Accessory
071-01242-0010	Slaving Accessory
071-01242-0011	Slaving Accessory
071-01242-0012	Slaving Accessory
071-01242-0013	Slaving Accessory
071-01242-0014	Slaving Accessory
071-01242-0099	Slaving Accessory
071-01276-0008	Vor Control Unit
071-01282-0065	Vhf Communications Control
071-01282-0080	Vhf Communications Control
071-01283-0026	Control Unit
071-01283-0027	Navigation Control
071-01284-0009	Navigation Control
071-01284-0017	Control Unit
071-01546-0101	Uhfcommunication Control
071-05068-0000	TEST SET
071-1012-13	Vhf Communication Control
071-1041-00	Voltage Converter
071-1041-01	Voltage Converter
071-1043-00	Transponder Control
071-1043-02	Atc Transponder
071-1043-04	Transponder Control
071-1052-00	Flux Valve
071-1053-00	Slaving Accessory
071-1053-01	Slaving Accessory
071-1053-02	Slaving Accessory
071-1053-03	Slaving Accessory
071-1053-04	Slaving Accessory
071-1053-05	Slaving Accessory
071-1054-00	Navigation Control
071-1054-01	Navigation Control
071-1054-02	Navigation Control
071-1054-04	Navigation Control
071-1054-05	Navigation Control
071-1054-06	Navigation Control
071-1054-08	Navigation Control
071-1066-00	Adf Control
071-1066-01	Adf Control
071-1066-02	Adf Control
071-1066-03	Adf Control
071-1066-04	Adf Control
071-1076-00	Rmi Converter
071-1192-00	Atc Transponder

071-1192-01	Atc Transponder
071-1192-02	Atc Transponder
071-1192-03	Atc Transponder
071-1192-04	Atc Transponder
071-1192-05	Atc Transponder
071-1192-06	Atc Transponder
071-1192-07	Atc Transponder
071-1192-08	Atc Transponder
071-1192-09	Atc Transponder
071-1192-10	Atc Transponder
071-1192-11	Atc Transponder
071-1192-13	Atc Transponder
071-1192-14	Atc Transponder
071-1192-15	Atc Transponder
071-1192-16	Atc Transponder
071-1192-18	Atc Transponder
071-1192-22	Atc Transponder
071-1192-26	Atc Transponder
071-1210-00	Adf Control
071-1210-01	Adf Control
071-1210-02	Adf Control
071-1210-03	Adf Control
071-1210-04	Adf Control
071-1210-05	Adf Control
071-1210-06	Adf Control
071-1210-07	Adf Control
071-1210-08	Adf Control
071-1210-09	Adf Control
071-1210-10	Adf Control
071-1210-11	Adf Control
071-1210-12	Adf Control
071-1210-13	Adf Control
071-1210-14	Adf Control
071-1210-15	Adf Control
071-1210-16	Adf Control
071-1210-17	Adf Control
071-1215-00	Comm Control Unit
071-1215-01	Comm Control Unit
071-1215-02	Comm Control Unit
071-1215-03	Comm Control Unit
071-1215-04	Comm Control Unit
071-1215-05	Comm Control Unit
071-1215-06	Comm Control Unit
071-1215-07	Comm Control Unit
071-1215-08	Comm Control Unit
071-1215-09	Comm Control Unit
071-1215-10	Comm Control Unit
071-1215-11	Comm Control Unit
071-1215-12	Comm Control Unit

071-1215-13	Comm Control Unit
071-1215-14	Comm Control Unit
071-1215-15	Comm Control Unit
071-1215-16	Comm Control Unit
071-1215-17	Comm Control Unit
071-1215-18	Comm Control Unit
071-1215-19	Comm Control Unit
071-1215-20	Comm Control Unit
071-1215-21	Comm Control Unit
071-1215-22	Comm Control Unit
071-1215-23	Comm Control Unit
071-1215-24	Vhf Communications Transceiver
071-1215-25	Vhf Communications Transceiver
071-1215-26	Vhf Communications Transceiver
071-1215-27	Vhf Communications Transceiver
071-1215-29	Vhf Communications Transceiver
071-1215-30	Vhf Communications Transceiver
071-1215-31	Vhf Communications Transceiver
071-1215-32	Vhf Communications Transceiver
071-1215-34	Vhf Communications Transceiver
071-1215-35	Vhf Communications Transceiver
071-1215-36	Vhf Communications Transceiver
071-1215-37	Vhf Communications Transceiver
071-1215-38	Vhf Communications Transceiver
071-1215-39	Vhf Communications Transceiver
071-1215-40	Vhf Communications Transceiver
071-1215-41	Vhf Communications Transceiver
071-1215-42	Vhf Communications Transceiver
071-1215-43	Vhf Communications Transceiver
071-1215-44	Vhf Communications Transceiver
071-1215-45	Vhf Communications Transceiver
071-1215-54	Vhf Communications Transceiver
071-1215-55	Vhf Communications Transceiver
071-1215-56	Vhf Communications Transceiver
071-1215-57	Vhf Communications Transceiver
071-1215-59	Vhf Communications Transceiver
071-1215-60	Vhf Communications Transceiver
071-1215-61	Vhf Communications Transceiver
071-1215-62	Vhf Communications Transceiver
071-1215-64	Vhf Communications Transceiver
071-1215-65	Vhf Communications Transceiver
071-1215-66	Vhf Communications Transceiver
071-1215-67	Vhf Communications Transceiver
071-1215-70	Vhf Communications Transceiver
071-1215-71	Vhf Communications Transceiver
071-1216-12	Navigation Control
071-1216-13	Navigation Control
071-1216-15	Navigation Control
071-1216-16	Navigation Control

071-1216-17	Navigation Control
071-1216-18	Navigation Control
071-1216-20	Navigation Control
071-1216-21	Navigation Control
071-1216-22	Navigation Control
071-1216-23	Navigation Control
071-1216-25	Navigation Control
071-1216-26	Navigation Control
071-1216-27	Navigation Control
071-1242-00	Slaving Accessory
071-1242-01	Slaving Accessory
071-1242-02	Slaving Accessory
071-1242-03	Slaving Accessory
071-1242-04	Slaving Accessory
071-1242-05	Slaving Accessory
071-1242-06	Slaving Accessory
071-1242-07	Slaving Accessory
071-1242-08	Slaving Accessory
071-1242-09	Slaving Accessory
071-1242-10	Slaving Accessory
071-1242-11	Slaving Accessory
071-1242-12	Slaving Accessory
071-1242-13	Slaving Accessory
071-1242-14	Slaving Accessory
071-1242-99	Slaving Accessory
071-1276-08	Atc Transponder
071-1276-09	Atc Transponder
071-1276-10	Atc Transponder
071-1276-11	Atc Transponder
071-1276-13	Atc Transponder
071-1276-14	Atc Transponder
071-1276-15	Atc Transponder
071-1276-16	Atc Transponder
071-1276-18	Atc Transponder
071-1276-19	Atc Transponder
071-1276-20	Atc Transponder
071-1276-21	Atc Transponder
071-1276-22	Atc Transponder
071-1276-23	Atc Transponder
071-1276-24	Atc Transponder
071-1276-25	Atc Transponder
071-1276-26	Atc Transponder
071-1276-99	Atc Transponder Control
071-1282-24	Vhf Communications Transceiver
071-1282-25	Vhf Communications Transceiver
071-1282-26	Vhf Communications Transceiver
071-1282-27	Vhf Communications Transceiver
071-1282-29	Vhf Communications Transceiver
071-1282-30	Vhf Communications Transceiver

071-1282-96	Vhf Communications Transceiver
071-1283-12	Navigation Control
071-1283-13	Navigation Control
071-1283-15	Navigation Control
071-1283-16	Navigation Control
071-1283-17	Navigation Control
071-1283-18	Navigation Control
071-1283-20	Navigation Control
071-1283-21	Navigation Control
071-1283-22	Navigation Control
071-1283-23	Navigation Control
071-1283-25	Navigation Control
071-1283-26	Navigation Control
071-1283-27	Navigation Control
071-1283-28	Navigation Control
071-1283-29	Navigation Control
071-1283-30	Navigation Control
071-1283-31	Navigation Control
071-1283-32	Navigation Control
071-1283-33	Navigation Control
071-1283-38	Navigation Control
071-1283-39	Navigation Control
071-1283-40	Navigation Control
071-1283-41	Navigation Control
071-1283-42	Navigation Control
071-1283-43	Navigation Control
071-1283-99	Navigation Control
071-1284-04	Adf Control
071-1284-05	Adf Control
071-1284-06	Adf Control
071-1284-07	Adf Control
071-1284-08	Adf Control
071-1284-09	Adf Control
071-1284-10	Adf Control
071-1284-11	Adf Control
071-1284-12	Adf Control
071-1284-13	Adf Control
071-1284-14	Adf Control
071-1284-15	Adf Control
071-1284-16	Adf Control
071-1284-17	Adf Control
071-1284-19	Adf Control
071-1284-20	Adf Control
071-1284-21	Adf Control
071-1284-22	Adf Control
071-1284-23	Adf Control
071-1284-24	Adf Control
071-1284-29	Adf Control
071-1284-30	Adf Control

071-1284-31	Adf Control
071-1284-32	Adf Control
071-1284-33	Adf Control
071-1284-34	Adf Control
071-1284-35	Adf Control
071-2008-00	Isolation Amplifier
07148-11126-2	Heated Windshield Control Unit
07639-1829-3	Voltage Regulator
07639-CSV 1829-3	Voltage Regulator
07639-CSV 1829-7	Voltage Regulator
07639-CSV 1893-7	Voltage Regulator
07639-CSV1152-12A	Voltage Regulator
07639-CVS 1829-7	Voltage Regulator
081252-1-10	VHF/FM Digital Transceiver
081252-3-10	VHF/FM Digital Transceiver
086-14003-01	Dme Indicator
099-799-100	Searchlight
099-799-150	Searchlight
099-800-003	Searchlight
099-800-101	Searchlight
100-0027-01	Turn Rate Indicator
100-0027-02	Turn Rate Indicator
100-0027-05	Turn Rate Indicator
100-0030-01	Turn Rate Indicator
100-0030-02	Turn Rate Indicator
100-0034-01	Tachometer Indicator
100-0034-03	Tachometer Indicator
100-0034-05	Percent Rpm Indicator
100-0034-06	Tachometer Indicator
100-0034-16	Tachometer Indicator
100-0034-20	Tachometer Indicator
100-0034-22	Tachometer Indicator
100-0034-28	Tachometer Indicator
100-0034-29	Tachometer Indicator
100-0034-57	Tachometer Indicator
100-0034-58	Tachometer Indicator
100-0043-01	Tachometer Indicator
100-0043-02	Tachometer Indicator
100-0043-03	Tachometer Indicator
100-0043-04	Tachometer Indicator
100-0043-05	Tachometer Indicator
100-0051-002	Tachometer Indicator
100-0051-01	Tachometer Indicator
100-0051-02	Prop Tachometer Indicator
100-0051-03	Tachometer Indicator
100-0051-04	Tachometer Indicator
100-0051-05	Tachometer Indicator
100-0051-06	Tachometer Indicator
1000-2001	Airspeed Indicator

10-0055-25	Emergency Exit Light
10010-0000-01	Fuel Quantity Indicator
10010-0000-02	Fuel Quantity Indicator
1-001-0102-0083	Static Inverter
1-001-0102-0084	Static Inverter
1-001-0102-0085	Static Inverter
1-001-0102-0086	Static Inverter
1-001-0102-0095	Static Inverter
1-001-0102-0129	Static Inverter
1-001-0102-0296	Static Inverter
1-001-0102-0597	Static Inverter
10014-0000-02	Fuel Quantity Indicator
1-002-0102-0434	Static Inverter
1-002-0102-0901	Static Inverter
1-002-0102-0912	Static Inverter
1-002-0102-1001	Static Inverter
1-002-0102-1033	Static Inverter
1-002-0102-1657	Static Inverter
1-002-0102-2044	Static Inverter
10026-0000-01	Fuel Quantity Master Indicator(Lbs.)
10026-0000-02	Fuel Quantity Master Indicator(Lbs.)
10027-0000-01	Fuel Quantity Repeater Indicator(Lbs.)
10028-101	Pressure Switch
10028-102	Pressure Switch
10028-103	Pressure Switch
10028-104	Pressure Switch
10028-105	Pressure Switch
10-03305	Clock
10035-11244	Altimeter
10035-11326	Altimeter
10035-11424	Altimeter
10035-2176	Altimeter
10035-81996	Altimeter
100-384042	Ammeter
100-384042-1	Ammeter
100-384048-1	Synchro Indicator
100-384048-15	Synchro Indicator
100-384048-17	Synchro Indicator
100-384048-3	Synchro Indicator
100-384048-5	Synchro Indicator
100-384050-1	Synchro Indicator
100-384050-3	Synchro Indicator
100-384050-5	Synchro Indicator
100-384058-3	Cockpit/Cabin Temperature Indicator
100-384116-5	Synchro Indicator
100-389007	Torque Transmitter
10044-0000-01	Fuel Quantity Indicator
10048-0000-01	Fuel Quantity Indicator
10049-0000-01	Fuel Quantity Repeater Indicator

10055-0000-01	Fuel Quantity Master Indicator(Kgs)
100-601607-001	Torque And Turbine Gas Temperature Indicator
1007KCA1	Compass
101025-11104	Altimeter
10-1098-1	Anti-Collision Light
1012297A01-00	Airspeed Indicator
10125-11104	Altimeter
101-380031-1	Turn & Slip Indicator
101-380031-3	Turn & Slip Indicator
101-384008-3	Synchro Indicator
101-384074-7	Airspeed Indicator
101-384-150-7	Fuel Quantity Indicator
101-384151-3	Fuel Quantity Indicator
101-384151-5	Fuel Quantity Indicator
101-384233-1	DC Voltmeter
101-384233-3	DC Voltmeter
101-389044-3	Torque Transmitter
101420-01205	Encoding Altimeter
101420-01206	Encoding Altimeter
101420-01223	Encoding Altimeter
101420-01224	Encoding Altimeter
101420-01249	Encoding Altimeter
101420-01250	Encoding Altimeter
101420-01255	Encoding Altimeter
101420-01256	Encoding Altimeter
101420-11207	Encoding Altimeter
101420-11225	Encoding Altimeter
101423-01229	Encoding Altimeter
101435-01211	Encoding Altimeter
101435-01212	Encoding Altimeter
101435-01229	Encoding Altimeter
101435-01230	Encoding Altimeter
101435-01261	Encoding Altimeter
101435-01262	Encoding Altimeter
101435-01267	Encoding Altimeter
101435-01268	Encoding Altimeter
101435-111104	Encoding Altimeter
101435-11719	Encoding Altimeter
101435-11720	Encoding Altimeter
101450-01217	Encoding Altimeter
101450-01218	Encoding Altimeter
101450-01235	Encoding Altimeter
101450-01236	Encoding Altimeter
101450-01273	Encoding Altimeter
101450-01274	Encoding Altimeter
101450-01279	Encoding Altimeter
101450-01280	Encoding Altimeter
101450-31243	Encoding Altimeter
101617-01339	Encoding Altimeter

101617-01340	Encoding Altimeter
101617-01349	Encoding Altimeter
101617-11372	Encoding Altimeter
101617-11373	Encoding Altimeter
101617-11374	Encoding Altimeter
101627-01343	Encoding Altimeter
101627-01344	Encoding Altimeter
101627-01375	Encoding Altimeter
101627-01696	Encoding Altimeter
101627-11376	Encoding Altimeter
101627-11377	Encoding Altimeter
101627-11378	Encoding Altimeter
101627-11705	Encoding Altimeter
101635-01358	Encoding Altimeter
101635-01359	Encoding Altimeter
101635-01379	Encoding Altimeter
101635-01380	Encoding Altimeter
101635-01381	Encoding Altimeter
101635-01382	Encoding Altimeter
101635-11380	Encoding Altimeter
101635-11381	Encoding Altimeter
101635-11382	Encoding Altimeter
101635-11839	Encoding Altimeter
10167N01W00	Engine Torque Indicator
10167N02W00	Engine Torque Indicator
10168N01T00	I.T.T. Indicator
10169N01R00	Rpm Indicator
10169N02R00	Prop Rpm Indicator
10169N03R00	Prop Rpm Indicator
10170N01R00	Nh % Rpm Indicator
10171N01F01	Fuel Flow Indicator
10171N03F02	Fuel Flow Indicator
101720-01354	Altimeter
101720-01355	Altimeter
101720-01356	Altimeter
101720-01357	Altimeter
101720-01383	Altimeter
101720-01387	Altimeter
101720-01393	Altimeter
101720-01461	Altimeter
101720-01545	Altimeter
101720-01546	Altimeter
101720-01547	Altimeter
101720-01562	Altimeter
101720-11384	Altimeter
101720-11385	Altimeter
101720-11386	Altimeter
101720-11397	Altimeter
101720-11564	Altimeter

101720-11810	Altimeter
101730-01356	Altimeter
101730-01357	Altimeter
101730-01387	Altimeter
101730-01388	Altimeter
101730-01419	Altimeter
101730-01455	Altimeter
101730-11387	Altimeter
101730-11388	Altimeter
101730-11389	Altimeter
101730-11390	Altimeter
101735-011002	Altimeter
101735-01455	Altimeter
101735-01456	Altimeter
101735-01495	Altimeter
101735-01500	Altimeter
101735-01563	Altimeter
101735-01695	Altimeter
101735-01723	Altimeter
101735-01727	Altimeter
101735-11726	Altimeter
101735-11728	Altimeter
101735-11799	Altimeter
101735-11807	Altimeter
101735-11940	Altimeter
10174N01W01	Engine Torque Indicator
10174N02W01	Engine Torque Indicator
10174N03W02	Engine Torque Indicator
10174N04W02	Engine Torque Indicator
101750-01710	Altimeter
10175N01T00	I.T.T. Indicator
10176N01R00	NI % Rpm Indicator
10176N02R00	NI % Rpm Indicator
10177N01R00	NI % Rpm Indicator
10178N01T01	Temperature Indicator
10178N02T01	Temperature Indicator
10180N01T00	Turbine Outlet Temperature Indicator
10189C01H00	Airspeed Indicator
101A100	Voltmeter
102-0001-01	Attitude Indicator
102-0002-01	Attitude Indicator
102-0003-01	Attitude Indicator
102-0006-01	Attitude Indicator
102-0007-01	Attitude Indicator
102-0009-01	Attitude Indicator
102-0017-01	Attitude Indicator
102-0020-01	Attitude Indicator
102-0025-01	Attitude Indicator
102-0026-01	Attitude Indicator

102-0029-01	Attitude Indicator
102-0031-01	Attitude Indicator
102-0042-01	Attitude Indicator
102-0045-01	Gyro Horizon
102-0045-02	Gyro Horizon
102-0047-01	Gyro Horizon
102-0047-02	Gyro Horizon
102-0047-03	Gyro Horizon
102-0048-01	Gyro Horizon
102-0049-01	Gyro Horizon
102-0050-01	Gyro Horizon
102-0050-02	Gyro Horizon
102-0051-01	Gyro Horizon
102-0051-02	Gyro Horizon
102-0051-04	Gyro Horizon
102-0052-01	Gyro Horizon
102-0052-02	Gyro Horizon
102-0053-01	Gyro Horizon
102-0053-02	Gyro Horizon
102-0053-03	Gyro Horizon
102-0054-01	Gyro Horizon
102-0054-02	Gyro Horizon
102-0054-03	Gyro Horizon
102-0054-04	Gyro Horizon
102-0054-05	Gyro Horizon
102-0054-06	Gyro Horizon
102-0054-07	Gyro Horizon
102-0057-01	Gyro Horizon
102-0057-02	Gyro Horizon
102-0057-03	Gyro Horizon
102-0057-04	Gyro Horizon
102-0059-01	Gyro Horizon
102-0059-02	Gyro Horizon
102-0060-01	Gyro Horizon
102-0060-02	Gyro Horizon
102-0060-03	Gyro Horizon
102-0060-04	Gyro Horizon
102-0061-01	Gyro Horizon
102-0061-02	Gyro Horizon
102-0064-01	Gyro Horizon
102-0064-02	Gyro Horizon
102-0065-01	Gyro Horizon
102-0066-01	Gyro Horizon
102-0066-02	Gyro Horizon
102-0067-02	Gyro Horizon
102-0070-02	Gyro Horizon
102-0072-01	Gyro Horizon
102-0072-02	Gyro Horizon
102-0074-03	Gyro Horizon

102-0075 D	Transmitter
102-0076-01	Gyro Horizon
102-0076-02	Gyro Horizon
102-0079-01	Gyro Horizon
102200-01818	Altimeter
102200-111116	Encoding Altimeter
102200-11815	Altimeter
102200-11829	Encoding Altimeter
102200-11850	Altimeter
102200-81997	Altimeter
102220-11886	Altimeter
10223N01R00	Propeller Speed Indicator
10224N01R00	Gas Generator Speed Indicator
10225N01W00	Torque Indicator
10226N01W00	Torque Indicator
10227N01T00	Temperature Indicator
10251N01T00	Temperature Indicator
10252N01W00	Torque Indicator
10253N01W00	Torque Indicator
10261G01W00	Torque Indicator
10280N01T00	Inter Turbine Temperature Indicator
10299N01W00	Torque Indicator
102A100	Ammeter
103-0001-01	Directional Gyro
103-0002-01	Directional Gyro
103-0022-01	Directional Gyro
103-0022-02	Directional Gyro
103-0023-01	Directional Gyro
103-0026-01	Directional Gyro
103-0030-01	Directional Gyro
103-0030-02	Directional Gyro
10312N01T00	T5 Temperature Indicator
10313N01R00	Triple Tachometer Indicator
10355N01T00	Inter Turbine Temperature Indicator
10355N02T00	Inter Turbine Temperature Indicator
10355N04T00	Inter Turbine Temperature Indicator
10355N05T00	Inter Turbine Temperature Indicator
10355N06T00	Inter Turbine Temperature Indicator
10355N07T00	Inter Turbine Temperature Indicator
10355N08T00	Inter Turbine Temperature Indicator
10388N01C00	Cabin Pressurization Indicator
10388N02C00	Cabin Pressurization Indicator
10420-01224	Altimeter
10420-11968E	Altimeter
104-384012-3	Synchro Indicator
104-38401-5	Synchro Indicator
104-384059-1	Temperature & Pressure Indicator
104435-111104	Altimeter
10446N01W00	Torque Indicator

10446N02W00	Torque Indicator
10447N01T00	Turbine Outlet Temperature Indicator
10450-11110	Altimeter
10450-11139	Altimeter
10450-11150	Altimeter
10450-31105	Altimeter
10450-31327	Altimeter
10450-3190	Altimeter
10460-11110	Altimeter
105020-6501	Altimeter
10-51002-3	Mach Airspeed Indicator
10541N03R02	Tachometer Indicator
10541N06R02	Tachometer Indicator
10571N01W00	Torque Indicator
105-90726	Ammeter
105-90845	Tachometer Indicator
105-90863	Triple Tachometer Indicator
105-90864	Triple Tachometer Indicator
105-90871	Fuel Pressure Indicator
105-90872	Oil Temperature Indicator
105-90873	Triple Oil Pressure Indicator
105-90880	Airspeed Indicator
105-90882	Temperature Indicator
105-90941	Dual Torque Indicator
105-90942	Turbine Outlet Temperature Indicator
105-90943	Turbine Outlet Temperature Indicator
105-90946	Torque Indicator
105-90947	Turbine Outlet Temperature Indicator
105-90948	Gas Producer Tachometer Indicator
105-90950	Dual Torque Indicator
105-90951	Torque Indicator
105-93921	Anti-Ice Linear Actuator
105-956851	Tachometer Indicator
105-956871	Turbine Outlet Temperature Indicator
105-956891	Torque Indicator
105-956911	Oil Temperature Indicator
105-957051	Tachometer Indicator
105-957161A	Temperature Indicator
105-957201	Triple Tachometer Indicator
105-957411	Dual Torque Indicator
105-98213	Handgrip
10-60722-11	Liquid Quantity Engine Oil Transmitter
10-60755-6	Rate Of Climb Indicator
10-60757-28	Temperature Indicator
10611T01Y00	Fuel Probe
10611T02Y00	Fuel Probe
10611T03Y00	Fuel Probe
10-61255-1	Hydraulic Pressure Transmitter
10-61255-24	Hydraulic Pressure Transmitter

10-61255-32	Hydraulic Pressure Transmitter
10-61255-33	Hydraulic Pressure Transmitter
10612B02Y02	Fuel Signal Conditioner
10612B03Y01	Fuel Signal Conditioner
10612B03Y03	Fuel Signal Conditioner
10-61991-1	Tachometer Indicator
10-61991-2	Tachometer Indicator
10-62028-2	Tachometer Indicator
10-62028-3	Tachometer Indicator
10-62031-1	Tachometer Indicator
10-62032-2	Temperature Indicator
10-62032-3	Temperature Indicator
10-62032-5	Temperature Indicator
10-62067-1	Vibration Monitor Indicator
10623/18	Turbine Outlet Temperature Indicator
10635-111129	Altimeter
109-0020-66-1	Handgrip
109-0020-66-3	Handgrip
109-0729-01-1	Voltmeter
109-0729-02-1	Voltmeter
109-0729-08-3	Tachometer Indicator
109-0729-13-1	Turbine Outlet Temperature Indicator
109-0729-27-1	Temperature & Pressure Indicator
109-0729-30-1	Torque Indicator
109-0729-30-3	Torque Indicator
109-0729-32-1	Turbine Outlet Temperature Indicator
109-0729-32-3	Turbine Outlet Temperature Indicator
109-0729-34-1	Altimeter
109-0729-38-3	Voltmeter
109-0729-39-1	Dual Ammeter
109-0730-16-1	Triple Tachometer Indicator
109-0730-16-113	Triple Tachometer Indicator
1092T100-MBB	Linear Actuator
10ZZ210M	Master Alarm And Indication Panel
1100-14(0)	Gyro Horizon
1100-14(11)	Gyro Horizon
1100-14(12)	Gyro Horizon
1100-14(14)	Gyro Horizon
1100-14(5)	Gyro Horizon
1100-14(5)DIA	Gyro Horizon
1100-14(8)	Gyro Horizon
1100-14L(0D)	Gyro Horizon
1100-14L(11D)	Gyro Horizon
1100-14L(12D)	Gyro Horizon
1100-14L(14D)	Gyro Horizon
1100-14L(5D)	Gyro Horizon
1100-14L(8D)	Gyro Horizon
1100-14LS(0D)	Gyro Horizon
1100-14LS(12D)	Gyro Horizon

1100-14LS(14D)	Gyro Horizon
1100-14S(0)	Gyro Horizon
1100-14S(11)	Gyro Horizon
1100-14S(12)	Gyro Horizon
1100-14S(14)	Gyro Horizon
1100-14S(5)	Gyro Horizon
1100-14S(5D)	Gyro Horizon
110014S(8)	Gyro Horizon
1100-14S(8D)	Gyro Horizon
1100-28(0)	Gyro Horizon
1100-28(0)CES	Gyro Horizon
1100-28(11)	Gyro Horizon
1100-28(12)	Gyro Horizon
1100-28(5)	Gyro Horizon
1100-28(8)	Gyro Horizon
1100-28K(10)	Gyro Horizon
1100-28L	Gyro Horizon
1100-28L(0F)	Gyro Horizon
1100-28L(0F)DIA	Gyro Horizon
1100-28L(10F)	Gyro Horizon
1100-28L(11F)	Gyro Horizon
1100-28L(12F)	Gyro Horizon
1100-28L(14F)	Gyro Horizon
1100-28L(15B)	Gyro Horizon
1100-28L(15F)	Gyro Horizon
1100-28L(16F)	Gyro Horizon
1100-28L(20B)	Gyro Horizon
1100-28L(6F)	Gyro Horizon
1100-28L(7F)	Gyro Horizon
1100-28L(8F)	Gyro Horizon
1100-28LK(0F)DIA	Gyro Horizon
1100-28LK(2F)	Gyro Horizon
1100-28LK(5F)	Gyro Horizon
1100-28LK(8E)	Gyro Horizon
1100-28LS	Gyro Horizon
1100-28LS(0F)	Gyro Horizon
1100-28LS(11B)	Gyro Horizon
1100-28LS(11F)	Gyro Horizon
1100-28LS(12F)	Gyro Horizon
1100-28LS(14E)	Gyro Horizon
1100-28LS(14F)	Gyro Horizon
1100-28LS(15F)	Gyro Horizon
1100-28LS(16F)	Gyro Horizon
1100-28LS(4F)	Gyro Horizon
1100-28LS(5F)	Gyro Horizon
1100-28LS(7F)	Gyro Horizon
1100-28LS(8F)	Gyro Horizon
1100-28LSK(0F)	Gyro Horizon
1100-28S(0)	Gyro Horizon

1100-28S(11)	Gyro Horizon
1100-28S(12)	Gyro Horizon
1100-28S(14)	Gyro Horizon
1100-28S(5)	Gyro Horizon
1100-28S(8)	Gyro Horizon
1100-28SL(15F)	Gyro Horizon
110-137-1	Relay
1101KRA1	Vertical Speed Indicator
1101KRA2	Vertical Speed Indicator
1102KRA	Vertical Speed Indicator
1102KRA1	Vertical Speed Indicator
1103KRA1	Vertical Speed Indicator
110-406 NAV	Emergency Locator Transmitter
110-406HM NAV	Emergency Locator Transmitter
1-1041-12	Fuel Quantity Transmitter
1-1041-14	Fuel Quantity Transmitter
1-1090ZD	Pressure Transmitter
1-1118ZH	Pressure Transmitter
111302-5	Horizontal Situation Indicator
111302-8	Horizontal Situation Indicator
111303-4	Attitude Director Indicator
1-1152-06	Temperature & Pressure Indicator
1-1152SM	Temperature & Pressure Indicator
1-1152SP	Temperature & Pressure Indicator
1-1152SZ	Temperature & Pressure Indicator
1-1152TA	Temperature & Pressure Indicator
1-1152TC	Temperature & Pressure Indicator
1-1166-09	Dual Fuel Quantity Indicator
1-1189-03	Pressure Indicator
1-1189-09	Voltage Regulator
111G	Indicator
11223-03	Fuel Quantity Indicator
1-1223-03	Indicator
112234-1	Altimeter
112234-2	Altimeter
112234-3	Altimeter
1-1224-91	Pressure Transmitter
1-1224-BK	Pressure Transmitter
1-1235-01	Dual Pressure Indicator
1-1235-02	Dual Pressure Indicator
1-1235SK	Dual Pressure Indicator
1-1235SL	Dual Pressure Indicator
1-1235SN	Dual Pressure Indicator
1-1235SP	Dual Pressure Indicator
1-1235-SR	Dual Pressure Indicator
112790-1	Attitude Indicator
113540-3	Attitude Director Indicator
114-380004-5	I.T.T. Indicator
114-380004-7	I.T.T. Indicator

114-380004-9	I.T.T. Indicator
114-380005-5	Torque Indicator
114-380006-5	Prop Tachometer Indicator
114-380007-5	Turbine Tachometer Indicator
114-380008-1	Fuel Flow Indicator
114-380009-5	Oil Temperature & Pressure Indicator
114-380009-7	Oil Temperature & Pressure Indicator
114-380010-1	Turn & Bank Indicator
114-380011-3	Turn & Bank Indicator
114-380012-3	Airspeed Indicator
114-380014-1	Directional Gyro
114-380015-1	Prop Sync Indicator
114-380016-1	V.S.I.
114-380016-3	V.S.I.
114-380017-3	Cabin Altitude Indicator
114-380017-5	Cabin Altitude Indicator
114-380018-1	Cabin Rate of Climb Indicator
114-380019-3	Flap Position Indicator
114-380020-1	Cabin Temperature Indicator
114-380021-1	Oxygen Quantity Indicator
114-380026-3	Gyro Suction Gage
114-380027-3	Pneumatic Pressure Indicator
114-380027-5	Pneumatic Pressure Indicator
114-380031-1	DC Load Indicator
114-380031-3	Turn & Bank Indicator
114-380033-1	AC Volt Frequency Meter
114-380035-1	I.V.S.I.
114-380035-3	I.V.S.I.
114-380048-1	Oxygen Pressure Indicator
114-380049-11	Prop Amps Indicator
114-380049-5	Prop Amps Indicator
114-380057-5	Gyro Horizon
114-380058-3	Gyro Horizon
114-380063-5	Turbine Tachometer Indicator
114-380064-5	Prop Tach Indicator
114-380065-3	Torque Indicator
114-380066-3	Prop Tach Indicator
11450-11139	Altimeter
114E2061-1	Alarm
114ES224-1	Liquid Quantity Indicator
114ES224-4	Fuel Quantity Switch
114ES235-4	Oil Pressure Switch
114ES235-5	Pressure Indicator
114ES236-3	Oil Temperature Indicator
114ES236-4	Oil Temperature Switch
114ES270-1	Torque Indicator
114ES270-3	Torque Indicator
114ES270-4	Torque Indicator
114VS805-3	Cruise Indicator

115.201-1	Power Module
115.201-3	Hydraulic Pressure Indicator
115.201-4	Hydraulic Signal Conditioner
115.201-5	Hydraulic Pressure Indicator
116595-01	Attitude Indicator
117-12654-01	Oil Pressure Switch
117-12656-01	Pressure Transducer
117-384019-3	Fuel Quantity Indicator
117-41115-51	Cyclic Grip
117-460381	Servo Motor
117-61312-03	Switch
117-61313-01	Pressure Transducer
117-64151-01	Fuel Boost Pump
117-64151-03	Fuel Boost Pump
117-64152-01	Fuel Quantity Transmitter
117-64152-03	Fuel Quantity Transmitter
117-64153-01	Low Level Switch
117-64569-03	Switch
117-69005-03	Dual Torque Indicator
117-69005-03(H5)	Dual Torque Indicator
117-89131-01	Fuel Quantity Transmitter
117-902011	Triple Tachometer Indicator
117-902031	Turbine Outlet Temperature Indicator
117-902041	Temperature & Pressure Indicator
117-902051	Rpm Warning Box
117-902061	Dual Ammeter
117-902101	N1 Tachometer Indicator
117-902111	Triple Tachometer Indicator
117-902121	Torque Indicator
117-902121B	Torque Indicator
117-9039-03	Power Supply
117-92031-01	Light Control Unit
117-92031-03	Light Control Unit
117-92031-05	Light Control Unit
117-92031-07	Light Control Unit
117-92039-01	Emergency Lights Pws
117-92039-03	Emergency Lights Pws
117-92049-01	Power Supply
117-94032-01	Tachometer Indicator
117-94033-01	Turbine Outlet Temperature Indicator
117-94034-01	Engine Oil Temperature Indicator
117-94035-01	Temperature Indicator
117-94035-03	Temperature Indicator
117-94035-05	Temperature Indicator
117-94036-01	Transmission Oil Pressure Indicator
117-94036-03	Transmission Oil Pressure Indicator
117-94036-05	Transmission Oil Pressure Indicator
117-94040-01	Dc Ammeter
117-94040-03	Dc Ammeter

117-94040-05	Dc Ammeter
117-94040-07	Dc Ammeter
117-94042-03	Airspeed Indicator
117-94042-05	Airspeed Indicator
117-94047-01	Rpm Warning Box
117-940471	Airspeed Indicator
117-94047-201	Rpm Warning Box
117-94048-03	Master Light
117-94049-03	Dc Ammeter
117-94049-05	Dc Ammeter
117-94049-07	Dc Ammeter
117-94051-01	Turbine Outlet Temperature Indicator
117-94051-03	Turbine Outlet Temperature Indicator
117-94051-05	Turbine Outlet Temperature Indicator
117-94051-07	Turbine Outlet Temperature Indicator
117-94052-01	Annunciator Panel
117-94052-03	Annunciator Panel
117-94052-05	Annunciator Panel
117-94052-07	Annunciator Panel
117-94052-09	Annunciator Panel
117-940521	Airspeed Indicator
117-94052-11	Annunciator Panel
117-94052-13	Annunciator Panel
117-94053-03	Triple Tachometer Indicator
117-94054-01	Fuel Quantity Indicator
117-94054-03	Fuel Quantity Indicator
117-94055-01	Voltmeter
117-94056-01	Tachometer Indicator
117-94056-03	Gas Producer Tachometer Indicator
117-940571-01	Turbine Outlet Temperature Indicator
117-94058-01	Engine Oil Temperature Indicator
117-94058-03	Engine Oil Temperature Indicator
117-94058-05	Engine Oil Temperature Indicator
117-94058-07	Engine Oil Temperature Indicator
117-94059-01	Dc Ammeter
117-94059-03	Dual Ammeter
117-94059-05	Dual Ammeter
117-94059-07	Ammeter
117-94061-01	Rpm Warning Box
117-94062-01	Hydraulic Pressure Indicator
117-940691	Dual Torque Indicator
117-94133	Clock
117-96135	Anti-Collision Light
118-380000-1	Fuel Quantity Indicator
118769-01	Attitude Indicator
118930-01	Attitude Indicator
118930-02-01	Attitude Indicator
119-32-07-002	Turbine Outlet Temperature Indicator
119-3207-005	Temperature & Pressure Indicator

119538-01	Gyro
119538-02	Gyro
11B303	Airspeed Indicator
11B303-3	Airspeed Indicator
11B303-5	Airspeed Indicator
11DB06-1066	Ammeter/Voltmeter Indicator
1200-1F(0D)	Gyro Horizon
1200-1FK(20B)	Gyro Horizon
1200-1R(0B)	Gyro Horizon
1200-1R(0D)	Gyro Horizon
1200-1R(10D)	Gyro Horizon
1200-1R(11D)	Gyro Horizon
1200-1R(12B)	Gyro Horizon
1200-1R(12D)	Gyro Horizon
1200-1R(14D)	Gyro Horizon
1200-1R(15A)	Gyro Horizon
1200-1R(15B)	Gyro Horizon
1200-1R(15D)	Gyro Horizon
1200-1R(17D)	Gyro Horizon
1200-1R(18D)	Gyro Horizon
1200-1R(20D)	Gyro Horizon
1200-1R(5D)	Gyro Horizon
1200-1R(7A)	Gyro Horizon
1200-1R(8D)	Gyro Horizon
1200-1RK(10D)	Gyro Horizon
1200-1RS(11D)	Gyro Horizon
1200-1RS(12D)	Gyro Horizon
1200-1RS(14D)	Gyro Horizon
1200-1RS(15D)	Gyro Horizon
1200-1RS(18D)	Gyro Horizon
1200-1RS(5D)	Gyro Horizon
1200-1RS(8D)	Gyro Horizon
1200-1RSK(10D)	Gyro Horizon
12002-0105	Altimeter
12002-0106	Altimeter
1200-2F(0C)	Gyro Horizon
1200-2F(10C)	Gyro Horizon
1200-2F(15D)	Gyro Horizon
1200-2F(8D)	Gyro Horizon
1200-2FS(0D)	Gyro Horizon
1200-2FS(15D)	Gyro Horizon
1200-2R(0C)	Gyro Horizon
1200-2R(0D)	Gyro Horizon
1200-2R(20B)	Gyro Horizon
1200-2R(20D)	Gyro Horizon
1200-2R(8F)	Gyro Horizon
1200-2RS(0D)	Gyro Horizon
1200-2RS(12D)	Gyro Horizon
1200-2RS(15D)	Gyro Horizon

1200-2RS(19C)	Gyro Horizon
1200-2RS(22B)	Gyro Horizon
1200-2RS(22D)	Gyro Horizon
1200-2RS(22E)	Gyro Horizon
1200-2RS(7D)	Gyro Horizon
12003M	Altimeter
1200-5R(15B)	Gyro Horizon
1200-6R(10B)	Gyro Horizon
1200-6R(5B)	Gyro Horizon
1200-7R(6D)	Gyro Horizon
1200-7RS(0D)	Gyro Horizon
12008-13	Altimeter
12008-9	Altimeter
1200-8R(0B)	Gyro Horizon
12009-1000	Altimeter
12009-2000	Altimeter
1200-9F(10B)	Gyro Horizon
1201617-11373-5	Altimeter
1201F2A1A1A	Transducer
120B25-3	Pressure Transmitter
120-IN-0041	T6 Temperature Indicator
120-IN-0042	Torque Pressure Indicator
120-IN-0044	Nh/Nl Percent Rpm Indicator
120-IN-0046	Oil Pressure/Temperature Indicator
120-IN-0047	Np Percent Rpm Indicator
120-IN-0048	Oat Indicator
120-IN-0056	Cockpit/Cabin Temperature Indicator
120-IN-0067	T4 Temperature Indicator
120-IN-0068	Torque Pressure Indicator
12-1100-1	Ammeter
12-1100-2	Ammeter
12-1100-3	Ammeter
12-1100-4	Ammeter
12-1200-09L	Ammeter
12-1200-1	Ammeter
12-1200-2	Ammeter
12-1200-3	Ammeter
12-1200-4	Ammeter
12-1200-5	Ammeter
121273-1	Remote Control Head
121273-2	Remote Control Head
121672-01	Displacement Gyro
121672-01-15	Displacement Gyro
121672-01-16	Displacement Gyro
121672-01-17	Displacement Gyro
121F4502	Solenoid Valve
122.444-10	Turbine Outlet Control Indicator
12-2004-1	Volt/Ammeter
12-2004-10	Volt/Ammeter

12-2004-11	Volt/Ammeter
12-2004-13	Volt/Ammeter
12-2004-14	Volt/Ammeter
12-2004-15	Volt/Ammeter
12-2004-16	Volt/Ammeter
12-2004-17	Volt/Ammeter
12-2004-18	Volt/Ammeter
12-2004-19	Volt/Ammeter
12-2004-2	Volt/Ammeter
12-2004-20	Volt/Ammeter
12-2004-21	Volt/Ammeter
12-2004-24	Volt/Ammeter
12-2004-3	Volt/Ammeter
12-2004-4	Volt/Ammeter
12-2004-5	Volt/Ammeter
12-2004-6	Volt/Ammeter
12-2004-7	Volt/Ammeter
12-2004-8	Volt/Ammeter
12-2004-9	Volt/Ammeter
12-2006-01	Volt/Ammeter
1221L1	Airspeed Transducer
122PN01	Torque Indicator
122Y025	Oil Temperature & Pressure Indicator
122Y026	Oil Temperature & Pressure Indicator
1234T100	Turn & Bank Indicator
1234T100-1	Turn & Bank Indicator
1234T100-1A	Turn & Bank Indicator
1234T100-1B	Turn & Bank Indicator
1234T100-1BE	Turn & Bank Indicator
1234T100-1BT	Turn & Bank Indicator
1234T100-1BTE	Turn & Bank Indicator
1234T100-1T	Turn & Bank Indicator
1234T100-1TE	Turn & Bank Indicator
1234T100-3	Turn & Bank Indicator
1234T100-3A	Turn & Bank Indicator
1234T100-3AT	Turn & Bank Indicator
1234T100-3ATE	Turn & Bank Indicator
1234T100-3ATY	Turn & Bank Indicator
1234T100-3ATZ	Turn & Bank Indicator
1234T100-3T	Turn & Bank Indicator
1234T100-3TE	Turn & Bank Indicator
1234T100-3TY	Turn & Bank Indicator
1234T100-3TZ	Turn & Bank Indicator
1234T100-5 (A)	Turn & Bank Indicator
1234T100-5 (L)	Turn & Bank Indicator
1234T100-5 (P)	Turn & Bank Indicator
1234T100-5 (T)	Turn & Bank Indicator
1234T100-5 AT	Turn & Bank Indicator
1234T100-5 ATE	Turn & Bank Indicator

1234T100-5 LT	Turn & Bank Indicator
1234T100-5 LTE	Turn & Bank Indicator
1234T100-5 PT	Turn & Bank Indicator
1234T100-5 PTE	Turn & Bank Indicator
1234T100-5 TE	Turn & Bank Indicator
1234T100-7ATZ	Turn & Bank Indicator
1234T100-7TZ	Turn & Bank Indicator
1234T100-8ATZ	Turn & Bank Indicator
1234T100-9TZ	Turn & Bank Indicator
1234T100-AT	Turn & Bank Indicator
1234T100-ATE	Turn & Bank Indicator
1234T100-BTY	Turn & Bank Indicator
1234T100-BTZ	Turn & Bank Indicator
1234T100-TY	Turn & Bank Indicator
123PN01	Torque Indicator
124.014-1	Fuel Pressure & Load Meter
124.014-111	Temperature & Pressure Indicator
124.014-121	Temperature & Pressure Indicator
124.014-13	Temperature & Pressure Indicator
124.014-15	Temperature & Pressure Indicator
124.014-17	Temperature & Pressure Indicator
124.014-19	Temperature & Pressure Indicator
124.014-2	Fuel Pressure & Load Meter
124.014-23	Temperature & Pressure Indicator
124.014-25	Temperature & Pressure Indicator
124.014-3	Fuel Pressure & Load Meter
124.014-4	Fuel Pressure & Load Meter
124.014-5	Fuel Pressure & Load Meter
124.039-3	Ammeter
124.039-6	Ammeter
124.040	Dual Voltmeter
124.040-1	Dual Voltage Indicator
124.041-1	Temperature & Pressure Indicator
124.041-12	Oil Temperature & Pressure Indicator
124.041-2	Oil Temperature & Pressure Indicator
124.041-3	Temperature & Pressure Indicator
124.043-1	Oil Temperature & Pressure Indicator
124.044-2	Fuel Pressure Indicator
124.044-3	Fuel Pressure Indicator
124.067-2	I.T.T. Indicator
124.1012.5	Oil Temperature & Pressure Indicator
124.1012.7	Oil Temperature & Pressure Indicator
124.1012-1	Temperature & Pressure Indicator
124.1012-3	Temperature & Pressure Indicator
124.1012-5	Temperature & Pressure Indicator
124.1012-7	Temperature & Pressure Indicator
124.1013-1	Temperature & Pressure Indicator
124.1013-2	Temperature & Pressure Indicator
124.1014-1	Fuel Pressure & Load Meter

124.1014-2	Fuel Pressure & Load Meter
124.1014-3	Fuel Pressure & Load Meter
124.1014-4	Fuel Pressure & Load Meter
124.1014-5	Fuel Pressure & Load Meter
124.102-2	TORQUE GAUGE INDICATOR
124.102-3	TORQUE GAUGE INDICATOR
124.102-4	TORQUE GAUGE INDICATOR
124.1128-1	Dual Ammeter
124.1128-2	Dual Ammeter
124.1129-1	Dual Ammeter
124.1129-3	Dual Ammeter
124.1130-1	Dc Voltmeter
124.1130-2	Voltmeter
124.115-1	Temperature & Pressure Indicator
124.115-3	Temperature & Pressure Indicator
124.115-5	Temperature & Pressure Indicator
124.120-3	Inter Turbine Temperature Indicator
124.210-1	Flap Position Indicator
124.210-2	Flap Position Indicator
124.243-11	Temperature & Pressure Indicator
124.244-1	Voltmeter
124.244-102	Voltmeter
124.244-11	Voltmeter
124.244-2	Voltmeter
124.272-1	Inter Turbine Temperature Indicator
124.273-5	Temperature & Pressure Indicator
124.324-5	Inter Turbine Temperature Indicator
124.331-3	Inter Turbine Temperature Indicator
124.412-2	Indicator
124.419-1	Pressure Indicator
124.442-1	T.O.T. Indicator
124.442-2	T.O.T. Indicator
124.442-3	T.O.T. Indicator
124.444-0	T.O.T. Indicator
124.444-10	T.O.T. Indicator
124.444-12	T.O.T. Indicator
124.444-14	T.O.T. Indicator
124.444-16	T.O.T. Indicator
124.444-18	T.O.T. Indicator
124.444-2	T.O.T. Indicator
124.444-20	T.O.T. Indicator
124.444-4	T.O.T. Indicator
124.444-6	T.O.T. Indicator
124.444-8	T.O.T. Indicator
124.463 (SERIES)	TORQUE GAUGE INDICATOR
124.480.3	Inter Turbine Temperature Indicator
124.480-1	Inter Turbine Temperature Indicator
124.480-3	Inter Turbine Temperature Indicator
124.498-	Engine Oil Temperature Indicator

124.498-1	Engine Oil Temperature Indicator
124.498-2	Engine Oil Temperature Indicator
124.498-3	Engine Oil Temperature Indicator
124.498-4	Engine Oil Temperature Indicator
124.498-5	Engine Oil Temperature Indicator
124.498-6	Engine Oil Temperature Indicator
124.499-	Turbine Outlet Temperature Indicator
124.499-0	Turbine Outlet Temperature Indicator
124.499-1	Turbine Outlet Temperature Indicator
124.499-10	Turbine Outlet Temperature Indicator
124.499-2	Turbine Outlet Temperature Indicator
124.499-4	Turbine Outlet Temperature Indicator
124.499-5	Turbine Outlet Temperature Indicator
124.499-6	Turbine Outlet Temperature Indicator
124.500-1	Temperature Indicator
124.500-2	Temperature Indicator
124.500-3	Temperature Indicator
124.500-4	Temperature Indicator
124.500-5	Temperature Indicator
124.500-6	Temperature Indicator
124.501-1	Voltmeter
124.501-2	Voltmeter
124.503-	Transmission Oil Pressure Indicator
124.503-1	Transmission Oil Pressure Indicator
124.503-2	Transmission Oil Pressure Indicator
124.503-3	Transmission Oil Pressure Indicator
124.507-	Dc Ammeter
124.507-1	Dc Ammeter
124.507-2	Dc Ammeter
124.507-3	Dc Ammeter
124.507-4	Dc Ammeter
124.507-5	Dc Ammeter
124.511-1	Torque Indicator
124.511-2	Torque Indicator
124.514-1	Egt Indicator
124.514-10	Egt Indicator
124.514-12	Egt Indicator
124.514-2	Egt Indicator
124.514-6	Egt Indicator
124.550-1	Engine Oil Temperature & Pressure Indicator
124.550-3	Engine Oil Temperature & Pressure Indicator
124.552-1	Engine Oil Temperature & Pressure Indicator
124.552-2	Engine Oil Temperature & Pressure Indicator
124.617.2	Elevator Position Indicator
124.617-1	Elevator Position Indicator
124.617-2	Elevator Postion Indicator
124.677-1	Temperature & Pressure Indicator
124.678-1	Hydraulic Temperature & Pressure Indicator
124.679-1	Hydraulic Temperature & Pressure Indicator

124.714-1	Temperature & Pressure Indicator
124.774-1	Temperature & Pressure Indicator
124.774-3	Temperature & Pressure Indicator
124.854-7	Oil Temperature Indicator
124.933A	Dual Ammeter
124.934A	Dual Voltmeter Indicator
124.972A	Temperature & Pressure Indicator
124-00005	Altimeter
124-014-23	Temperature & Pressure Indicator
124040-1	Voltmeter
124-043	Temperature & Pressure Indicator
124-044	Fuel Pressure Indicator
124-045	Temperature & Pressure Indicator
124-069	Fuel Pressure Indicator
124-1012-5	Temperature & Pressure Indicator
124-1012-7	Temperature & Pressure Indicator
124623-01	Displacement Gyro
124623-01-09	Displacement Gyro
124623-01-10	Displacement Gyro
124623-01-12	Displacement Gyro
124623-01-13	Displacement Gyro
124623-01-14	Displacement Gyro
124-933A	Dual Ammeter
124-935A	Oil Temperature & Pressure Indicator
124-972A	Oil Temperature & Pressure Indicator
124L039-6	Dual Ammeter
124L507-6	Dual Ammeter
124Q1348	Fuel Quantity Indicator
124Q1349	Fuel Quantity Indicator
124T1340	Inter Turbine Temperature Indicator
124T1345	Inter Turbine Temperature Indicator
124T499-7	Turbine Outlet Temperature Indicator
124Y498-7	Temperature & Pressure Indicator
12-5000-1	Voltmeter
12-5000-2	Voltmeter
12-5000-3	Voltmeter
12-5000-4	Voltmeter
12-5000-5	Voltmeter
12-5000-6L	Voltmeter
125810-11	Horizontal Situation Indicator
126.067-2	Inter Turbine Temperature Indicator
126.306-5	Fuel Quantity Indicator
126.306-7	Fuel Quantity Indicator
126.307-5	Fuel Quantity Indicator
126701-2	Fan
126PN01Y07	Torque Indicator
127123-01	Attitude Indicator
127-23006-01	Panel
127-23008-01	Panel

127-23009-01	Panel
127-23011-01	Panel
127-23012-01	Panel
127-23013-01	Panel
127-23031-01	Panel
127-23032-01	Panel
127-23033-01	Panel
129-380002-1	Flap Position Indicator
129-380004-3	Torque Indicator
129-380008-3	Vacuum Gage
129-381000-1	Navigation Light
129-381000-2	Strobe Light
129544-001	Selector Switch
1296-5-0193	Airspeed Indicator
1296U-4-0194	Airspeed Indicator
1296U-4-0207	Airspeed Indicator
12C220-13	Prop De-Ice Ammeter
12C220-9	Prop De-Ice Ammeter
1300-0001	Altimeter
130005C	Motor Driven Valve
1300-1001	Altimeter
1300-102	Altimeter
1300-2001	Altimeter
130-020-1	Fuel Pressure Transmitter
130-020-3	Fuel Pressure Transmitter
1301-0001	Altimeter
1301-1001	Altimeter
1301-1002	Altimeter
1301-102	Altimeter
1301-2001	Altimeter
130-380005-5	Airspeed Indicator
130-380005-7	Airspeed Indicator
130-380010-1	Fuel Flow Indicator
130-380041-13	I.T.T. Indicator
130-380041-5	I.T.T. Indicator
130-380044-7	Turbine Speed Indicator
130522-1	Cabin Pressure Controller
131080-01	Attitude Indicator
131281-1	Remote Control Head
131281-2	Remote Control Head
131348-3	Turbine Speed Indicator
131400-01	Attitude Indicator
131-9043-1003	Oil Pressure Indicator
133640-11	H.S.I.
13452-1100	Altimeter
1346-28-09	Panel
13502-0201	Altimeter
13502-0202	Altimeter
13503M	Altimeter

13508-1	Altimeter
13508-5	Altimeter
135-13503	Altimeter
135-13503M	Altimeter
13522-1000	Altimeter
13522-1100	Altimeter
135PN01	Torque Indicator
136600-01-03	Attitude Indicator
1372-1-101	Rpm Limit Detector
1372-1-5	Rpm Limit Detector
138094-01-02	Attitude Indicator
138474-01-01	Attitude Indicator
138740-15	Horizontal Situation Indicator
138740-17	Horizontal Situation Indicator
138740-19	Horizontal Situation Indicator
138740-23	Horizontal Situation Indicator
138740-25	Horizontal Situation Indicator
138740-5	Horizontal Situation Indicator
138740-9	Horizontal Situation Indicator
138AS	Airspeed Indicator
1391-041046	Pressure Indicator
1394T100-1	Turn & Slip Indicator
1394T100-10RA	Turn & Slip Indicator
1394T100-10RB	Turn & Slip Indicator
1394T100-11	Turn & Slip Indicator
1394T100-11E	Turn & Slip Indicator
1394T100-12RA	Turn & Slip Indicator
1394T100-12RB	Turn & Slip Indicator
1394T100-13	Turn & Slip Indicator
1394T100-13E	Turn & Slip Indicator
1394T100-13P	Turn & Slip Indicator
1394T100-13PE	Turn & Slip Indicator
1394T100-13PY	Turn & Slip Indicator
1394T100-13Y	Turn & Slip Indicator
1394T100-14RB	Turn & Slip Indicator
1394T100-15Z	Turn & Slip Indicator
1394T100-1E	Turn & Slip Indicator
1394T100-1W	Turn & Slip Indicator
1394T100-1WE	Turn & Slip Indicator
1394T100-1WV	Turn & Slip Indicator
1394T100-1WVE	Turn & Slip Indicator
1394T100-3	Turn & Slip Indicator
1394T100-313P	Turn & Slip Indicator
1394T100-313PE	Turn & Slip Indicator
1394T100-35	Turn & Slip Indicator
1394T100-35E	Turn & Slip Indicator
1394T100-35P	Turn & Slip Indicator
1394T100-35PE	Turn & Slip Indicator
1394T100-37	Turn & Slip Indicator

1394T100-37E	Turn & Slip Indicator
1394T100-39	Turn & Slip Indicator
1394T100-39E	Turn & Slip Indicator
1394T100-3A	Turn & Slip Indicator
1394T100-3AC	Turn & Slip Indicator
1394T100-3B	Turn & Slip Indicator
1394T100-3BC	Turn & Slip Indicator
1394T100-3E	Turn & Slip Indicator
1394T100-3W	Turn & Slip Indicator
1394T100-3Z	Turn & Slip Indicator
1394T100-5W	Turn & Slip Indicator
1394T100-5Y	Turn Coordinator
1394T100-7A	Turn & Slip Indicator
1394T100-7B	Turn & Slip Indicator
1394T100-7RB	Turn & Slip Indicator
1394T100-7Z	Turn & Slip Indicator
1394T100-8RA	Turn & Slip Indicator
1394T100-8RB	Turn & Slip Indicator
1394T100-VWY	Turn & Slip Indicator
1394T100-WVZ	Turn & Slip Indicator
1394T100-WY	Turn & Slip Indicator
1394T100-WZ	Turn & Slip Indicator
139602-01-01	Attitude Indicator
13DC02A	Torque Indicator
140100-01-01	Attitude Indicator
141-20339-001	Annunciator Panel
141400-01-01	Attitude Indicator
1426-1Z-A1	Airspeed Indicator
143100-01-02	Attitude Indicator
144700-01-01	Attitude Indicator
14550-729-2	Mach Airspeed Indicator
145974-01-03	Vertical Gyro
145C6100-1	Actuator
145C6100-3	Actuator
145CS100-6	Actuator
145CS100-7	Actuator
145E2167-2	Engine Trim Panel
145E2192-2	Signal Conditioner
145E2222-1	Panel
145E2312-1	Power Panel
145E2318-1	Power Panel
145E2321-2	Anti-Ice Panel
145E2334-1	Hoist Panel
145E2357-1	Engine Start Panel
145ES008-2	Tachometer Indicator
145ES009-3	Fault Function Panel
145ES009-7	Fault Function Panel
145ES024-1	Longitude Indicator
145ES024-2	Longitude Indicator

145ES025-1	Fuel Flow Indicator
145ES035-1	Fault Function Panel
14602-1J-A1	Attitude Indicator
14602-1J-B1	Attitude Indicator
14602-1J-C1	Attitude Indicator
14602-1J-D1	Attitude Indicator
14602-1J-E1	Attitude Indicator
14602-1J-F1	Attitude Indicator
14608-1AP-B1	Attitude Indicator
14608-1APB1-M	Attitude Indicator
14608-1AZ-B1	Gyro Horizon
14609-1AW-C1	Gyro Horizon
14609-1S-A1	Gyro Horizon
14609-1S-B1	Gyro Horizon
14609-1S-C1	Gyro Horizon
14613-1AK-A2	Attitude Indicator
14613-1AK-A3	Attitude Indicator
14613-1AK-A4	Attitude Indicator
14613-1AK-A5	Attitude Indicator
14613-1AK-A6	Attitude Indicator
14-73903-5	Handgrip
147B13	Temperature Indicator
147B13A	Temperature Indicator
147B18	Temperature Indicator
147B19	Temperature Indicator
147B20	Temperature Indicator
147B30	Temperature Indicator
147B30A	Temperature Indicator
147B30D	Temperature Indicator
147B31	Temperature Indicator
147B31A	Temperature Indicator
147B31A2	Temperature Indicator
147B31A3	Temperature Indicator
147B31A4	Temperature Indicator
147B31B	Temperature Indicator
147B31C	Temperature Indicator
147B31F	Temperature Indicator
147B31G	Temperature Indicator
147B35	Temperature Indicator
147B36	Temperature Indicator
147B7	Temperature Indicator
147B7A	Temperature Indicator
147B8	Temperature Indicator
148-13000-06	Searchlight
148700-01-01	A.D.I.
148700-03-01	A.D.I.
148957-01-01	Displacement Gyro
149190-01-02	Attitude Gyro
149AC2	Rpm Indicator

14DB05-1070	Oil Temperature & Pressure Indicator
15 DA01R-TYP 1557	Tachometer Indicator
15020-0175	Altimeter
15020-1182	Altimeter
15020-1188	Altimeter
15020-6501	Altimeter
15025-2105	Altimeter
15035-01102	Altimeter
15035-8181	Altimeter
151292-1	Intercom
151-906-001	Fuel Flow Transducer
152.201-2	Hydraulic Pressure Indicator
1523-20683-2	Inter Turbine Temperature Indicator
1528-20024	Temperature Indicator
1528-20026	Temperature Indicator
152B2	Temperature Indicator
152B204	Temperature Indicator
152B206	Temperature Indicator
152B208B	Temperature Indicator
152B208D	Temperature Indicator
152B208E	Temperature Indicator
152B208F	Temperature Indicator
152B210	Temperature Indicator
152B22	Temperature Indicator
152B228	Temperature Indicator
152B2A	Temperature Indicator
152B3	Temperature Indicator
152B4	Temperature Indicator
152B44	Temperature Indicator
152B44B	Temperature Indicator
152B45	Temperature Indicator
152B5	Temperature Indicator
152B8	Temperature Indicator
152BL2D	Temperature Indicator
152BL702	Temperature Indicator
152BL702A	Temperature Indicator
152BL702C	Temperature Indicator
152BL702D	Temperature Indicator
152BL702E	Temperature Indicator
152BL703	Temperature Indicator
152BL704	Temperature Indicator
152BL706	Temperature Indicator
152BL708	Temperature Indicator
152BL708A	Temperature Indicator
152BL708B	Temperature Indicator
152BL708H	Temperature Indicator
152BL709	Temperature Indicator
152BL709A	Temperature Indicator
152BL722	Temperature Indicator

152BL801	Temperature Indicator
152BL801A	Temperature Indicator
152BL801B	Temperature Indicator
152BL801C	Temperature Indicator
152BL801D	Temperature Indicator
152BL801E	Temperature Indicator
152BL802	Temperature Indicator
152BL802A	Temperature Indicator
152BL802B	Temperature Indicator
152BL802C	Temperature Indicator
152BL802D	Temperature Indicator
152BL803	Temperature Indicator
152BL803A	Temperature Indicator
152BL803B	Temperature Indicator
152BL803C	Temperature Indicator
152BUA34-2	Cruise Indicator
152C208E	Inter Turbine Temperature Indicator
152C208F	Inter Turbine Temperature Indicator
152C208L	Inter Turbine Temperature Indicator
152C208M	Inter Turbine Temperature Indicator
152C208N	Inter Turbine Temperature Indicator
152C208R	Inter Turbine Temperature Indicator
152C208T	Inter Turbine Temperature Indicator
152C208U	Inter Turbine Temperature Indicator
152C2D	Inter Turbine Temperature Indicator
152C304	Inter Turbine Temperature Indicator
152C305	Temperature Indicator
152C42	Temperature Indicator
152C42A	Temperature Indicator
152C42G	Temperature Indicator
152HL2	Temperature Indicator
152HL2W	Temperature Indicator
152HL2W3	Temperature Indicator
152HL3W	Temperature Indicator
152LC208H	Temperature Indicator
152LC208J	Temperature Indicator
15420-2166	Altimeter
155010-1	Encoding Altimeter
155010-1-LX	Encoding Altimeter
155010-2	Encoding Altimeter
155010-2-LX	Encoding Altimeter
155750-1	Altimeter
1560-0458-114-1	Landing Light
1560-CH47-1020	Switch Box
1560-OH58-114-1	Landing Light
1564T100-5	Actuator
1564T100-9	Linear Actuator
1570-041040	Pressure Indicator
1570B041040	Pressure Indicator

1588-2-F	Voltage Regulator
1588-3-B	Voltage Regulator
1589-1	Voltage Regulator
1589-1F	Voltage Regulator
1589-1-F	Voltage Regulator
1589-7-B	Voltage Regulator
15900-1410	Cabin Altitude, Rate & Differential Pressure Indicator
15900-410	Cabin Altitude, Rate & Differential Pressure Indicator
1592-00059	Oat Indicator
15DA01A-TYP1204	Tachometer Indicator
15DA03B	Triple Tachometer Indicator
15DA03-TYP1277	Triple Tachometer Indicator
15DB01-1072	Tachometer Indicator
15E-413	Ammeter
16007-11	Encoding Altimeter
16007-12	Encoding Altimeter
16007-13	Encoding Altimeter
16007-14	Encoding Altimeter
16007-15	Encoding Altimeter
16007-16	Encoding Altimeter
16007-348	Encoding Altimeter
162B2	Temperature Indicator
162B203	Oil Temperature Indicator
162B2A	Temperature Indicator
162B2D	Temperature Indicator
162B2G	Temperature Indicator
162B3	Temperature Indicator
162B3A	Temperature Indicator
162B3F	Temperature Indicator
162B4	Temperature Indicator
162B48	Temperature Indicator
162BCL81W	Temperature Indicator
162BL101A	Temperature Indicator
162LC607	Temperature Indicator
162LC612	Temperature Indicator
16340 / 475-1	Voltage Regulator
16340-473-1	Voltage Regulator
1634-1AL-C1-1	Vertical Speed Indicator
1636-6H-B1	Climb Gauge
163B103B	Temperature Indicator
164-1	Liquid Oxygen Indicator
165000-3	Light Dimmer
1652-6AJ-B6-1	Rate Of Climb Indicator
165ES100-4	Temperature Indicator
16650-1150	Altimeter
1680-00-181-4303	Protection Panel
1680-00-863-5741	Alarm
1680-00-871-8701	Actuator
1680-01-117-1331	Actuator

1680-01-117-1332	Actuator
1680-01-118-5605	Actuator
1680-01-118-5606	Actuator
1680-01-118-5607	Actuator
1680-01-120-7511	Magnetic Brake
1680-01-123-7643	Signal Processor Cruise Guide
1680-01-138-2685	Master Caution Panel
1680-01-198-3883	Afcs Panel
1680-01-224-2884	Hoist Panel
1680-01-261-2044	STABILATOR ELECTRO/MECHANICAL LINEAR ACTUATOR
1680-01-284-6418	Power Control Panel
1680-01-463-6576	Fault Function Panel
1680-01-463-6578	Master Caution Panel
1680-4U-A2	Cabin Rate Of Climb Indicator
1680-4U-A3	Cabin Rate Of Climb Indicator
169AU-909-1	Ammeter
169AU-909-1BWL	Ammeter
169AU-909-2	Ammeter
169AU-909-2BWL	Ammeter
169AU-909-3BWL	Ammeter
169AU-910-1	Temperature Indicator
169AU-910-1BWL	Temperature Indicator
169AU-910-2	Temperature Indicator
169AU-910-2BWL	Temperature Indicator
169AU-910-3	Temperature Indicator
169AU-910-3BWL	Temperature Indicator
169AU-910-4	Temperature Indicator
169AU-910-4BWL	Temperature Indicator
169AU-910-5	Temperature Indicator
169AU-910-5BWL	Temperature Indicator
169AU-910-6	Temperature Indicator
169AU-910-6BWL	Temperature Indicator
169AU-910-7BWL	Temperature Indicator
169AU-910-8BWL	Temperature Indicator
169AU-910-9BWL	Temperature Indicator
169AU-914-1	Oil Pressure Indicator
169AU-914-1BWL	Oil Pressure Indicator
169AU-914-2BWL	Oil Pressure Indicator
169AU-914-3BWL	Oil Pressure Indicator
169AU-914-4BWL	Oil Pressure Indicator
169BH-907-1-1LBW	Volt/Ammeter
169BH-907-1LBW	Volt/Ammeter
169BH-910-11LBW	Egt Indicator
169BH-910-1-1LBW	Oil Temperature Indicator
169BH-910-1-2LBW	Oil Temperature Indicator
169BH-910-1-3LBW	Oil Temperature Indicator
169BH-910-1LBW	Oil Temperature Indicator
169BH-910-3-1LBW	Fuel Quantity Indicator
169BH-910-3-2LBW	Fuel Quantity Indicator

169BH-910-3LBW	Fuel Quantity Indicator
169BH-910-4-1LBW	Fuel Quantity Indicator
169BH-910-4-2LBW	Fuel Quantity Indicator
169BH-910-4LBW	Fuel Quantity Indicator
169BH-910-5LBW	Oat Indicator
169BH-910-6-1LBW	Fuel Pressure Indicator
169BH-910-6-2LBW	Fuel Pressure Indicator
169BH-910-6LBW	Fuel Pressure Indicator
169BH-910-7-1LBW	Fuel Pressure Indicator
169BH-910-7-2LBW	Oil Pressure Indicator
169BH-910-7-3LBW	Oil Pressure Indicator
169BH-910-7LBW	Oil Pressure Indicator
169BH-910-8-1LBW	Egt Indicator
169BK-907-1LBW	Volt/Ammeter
169BK-908-1LBW	Voltmeter
169BK-909-1LBW	Loadmeter
169BK-909-2LBW	Loadmeter
169BK-909-3LBW	Loadmeter
169BK-910-1-1LBW	Oil Temperature Indicator
169BK-910-1LBW	Oil Temperature Indicator
169BK-910-3-1LBW	Fuel Quantity Indicator
169BK-910-3LBW	Fuel Quantity Indicator
169BK-910-4-1LBW	Fuel Quantity Indicator
169BK-910-4LBW	Fuel Quantity Indicator
169BK-910-5LBW	Oat Indicator
169BK-910-6-1LBW	Fuel Pressure Indicator
169BK-910-6LBW	Fuel Pressure Indicator
169BK-910-7-1LBW	Oil Pressure Indicator
169BK-910-7LBW	Oil Pressure Indicator
169BK-910-8LBW	Temperature Indicator
169BK-910-9LBW	Temperature Indicator
169BR-909-1BL	Ammeter
169BR-909-1LBW	Cluster Indicator
169BR-910-1-1LBW	Oil Temperature Indicator
169BR-910-1LBW	Oil Temperature Indicator
169BR-910-2-1LBW	Oil Temperature Indicator
169BR-910-2L	Oil Pressure Indicator
169BR-910-2LBW	Oil Pressure Indicator
169BR-910-3LBW	Fuel Pressure Indicator
169E-909-2L	Ammeter
169E-909-3L	Ammeter
169E-909-4L	Ammeter
169E-910-11-2L	Oil Temperature Indicator
169E-910-11-3L	Oil Temperature Indicator
169E-910-11L	Oil Temperature Indicator
169E-910-14-4L	Fuel Quantity Indicator
169E-910-14-5L	Fuel Quantity Indicator
169E-914-1L	Oil Pressure Indicator
169E-914-2L	Oil Pressure Indicator

169E-914-3L	Oil Pressure Indicator
169P909-1L	Loadmeter
169P909-1LBW	Loadmeter
169P910-22L	Fuel Quantity Indicator
169P910-22L-2BW	Fuel Quantity Indicator
169P910-5L	Oil Pressure Indicator
169P910-5L1	Oil Temperature & Pressure Indicator
169P-910-5L1BW5	Temperature Indicator
169P910-5L-2BW	Oil Pressure Indicator
169P910-5L-3BW	Oil Temperature & Pressure Indicator
169P914-5L	Oil Pressure Indicator
169P914-5L1	Oil Pressure Indicator
169P914-5L-2BW	Oil Pressure Indicator
169P914-5L-3BW	Oil Pressure Indicator
169P914-6L	Fuel Pressure Indicator
169P914-6L-1BW	Fuel Pressure Indicator
169P914-6L-2BW	Fuel Pressure Indicator
169V-908-1	Dc Voltmeter
169V-908-1-1	Dc Voltmeter
169V-908-1-2	Dc Voltmeter
169V-908-2	Ac Voltmeter
169V-908-2-1	Ac Voltmeter
169V-909-6	Ammeter
169V-909-6-1	Ammeter
169V-909-6-2	Ammeter
169V-909-6-6	Ammeter
169V-909-6-7	Ammeter
169V-910-29	Oil Temperature Indicator
169V-910-29-1	Oil Temperature Indicator
169V-910-29-2	Oil Temperature Indicator
169V-910-45-1	Oil Temperature Indicator
1701BX-8-010	Airspeed Indicator
1701BX-8-03	Airspeed Indicator
1701BX8-04	Airspeed Indicator
1701BX-8-04	Airspeed Indicator
1701CX-8-03	Airspeed Indicator
1701CX8-04	Airspeed Indicator
1701CX-8-04	Airspeed Indicator
1701CX-8-05	Airspeed Indicator
1701CX-8-10	Airspeed Indicator
1701DX10-04	Airspeed Indicator
1701DX-10-04	Airspeed Indicator
1701DX4-04	Airspeed Indicator
1701DX-4-04	Airspeed Indicator
1701DX8-04	Airspeed Indicator
1701DX-8-04	Airspeed Indicator
1704-1001-2	Rpm Limiit Detector
1704-1009-1	Rpm Limiit Detector
1704-1014-1A	Rpm Limiit Detector

171BS101-1	Power Supply
171BS101-2	Power Supply
171BS101-M	Power Supply
17343-771-310F	Detector
1783755-615	Compass
1784460-355	Rmi
1784460-525	Rmi
1784460-555	Rmi
1784460-653	Rmi
1784460-655	Rmi
1784460-656	Rmi
1784460-657	Rmi
1787335-615	Rmi
17AT10B	Temperature Indicator
17AT4BN	Temperature Indicator
17AT4P	Temperature Indicator
17B	Temperature Indicator
17B2A	Temperature Indicator
17B3	Temperature Indicator
17B502A	Temperature Indicator
17B506	Temperature Indicator
17B531	Temperature Indicator
18-1000-1	Engine Gauge
18-1000-2	Engine Gauge
18-1000-3	Engine Gauge
18-1000-4	Engine Gauge
18-1101	Hydraulic Pressure Indicator
18-1105	Hydraulic Pressure Indicator
1812-214LW	Cabin Duct Temp Indicator
1812-217LW	Rudder Trim Indicator
18-1278	Oil Pressure Indicator
18-1299	Flap Position Indicator
18-1299-2	Flap Position Indicator
18-1299-3	Flap Position Indicator
18-1299-3-2	Flap Position Indicator
18-1299-4	Flap Position Indicator
18-1299-4-2	Flap Position Indicator
18-1299-5	Flap Position Indicator
18-1299-5-2	Flap Position Indicator
18-1299-6	Flap Position Indicator
18-1299-6-2	Flap Position Indicator
18-1299-7-2	Flap Position Indicator
1815-3LW	Rotor Rpm Indicator
18-1672	Pressure Indicator
18-1672-3	OIL PRESSURE INDICATOR
18-1700	Pressure Indicator
18-1704	Pressure Transmitter
18-1732-1	Course Indicator
18-1838-11	Dual Torque Indicator

18-1838-15	Dual Torque Indicator
18-1838-17	Dual Torque Indicator
18-1838-21	Dual Torque Indicator
18-1838-22	Dual Torque Indicator
18-1842.7	Pressure Transmitter
18-1874	Course Indicator
18-1958-10	Flap Position Transmitter
18-1958-11	Flap Position Transmitter
18-1958-12	Flap Position Transmitter
18-1958-13	Flap Position Transmitter
18-1958-14	Flap Position Transmitter
18-1958-15	Flap Position Transmitter
18-1958-16	Flap Position Transmitter
18-1958-17	Flap Position Transmitter
18-1958-19	Flap Position Transmitter
18-1958-20	Flap Position Transmitter
18-1969-12	Flap Position Transmitter
18-1969-17	Flap Position Transmitter
18-1969-18	Flap Position Transmitter
18-2021	Pressure Indicator
1822-191	T.O.T. Indicator
1822-336LW	Cabin Air Temperature Indicator
1822-337LW	Hydraulic Quantity Level Indicator
1822-366LW	Propeller Speed Indicator
1822-367LW	Gas Generator Speed Indicator
1822-371LW	Torque Indicator
1822-377LW	Torque Indicator
1822-396LW	Cabin Air Temperature Indicator
1825-105LW	Engine Oil Pressure/Temperature Indicator
1825-106LW	Propeller Oil/Temperature Indicator
1825-107LW	Dual Hydraulic Pressure Indicator
1825-108LW	Dual Hydraulic Brake Pressure Indicator
1825-117LW	Engine Oil Temperature & Pressure Indicator
1825-118LW	Dual Flap Position Indicator
1825-130LW	Dual Hydraulic Pressure Indicator
1825-81LW	Dc Volt/Ammeter
1825-88LW	Dual De-Icing Pressure Indicator
1825-89LW	Dual Hydraulic Pressure Indicator
1826-1	D.C. Lamp Dimmer
1829-3	Voltage Regulator
1837-211LW	Trim Position Indicator
18-380021	Directional Gyro
1845X-4-03	Altimeter
18C100-1	Engine Gauge
18C452-1	Engine Gauge
18C454-03	Oil Temp/Pressure Indicator
18C454-04	Oil Temp/Pressure Indicator
18V100-1	Engine Gauge
19-0035	Ammeter

1913HT	Pressure Indicator
1914-04	Pressure Switch
19-20-279	Flap Position Indicator
19-20-290	Flap Position Indicator
19654-0	Flux Valve
19710-R10A	Actuator
1978191-1	Attitude Gyro
19A2178	Fan
19A2501	Fan Vaneaxial
19A2593	Fan Vaneaxial
19A827	Fan
1A125-1A	Static Inverter
1A125-1B-1	Static Inverter
1A125-1C-1	Static Inverter
1A250	Static Inverter
1A250(-ID)	Static Inverter
1A250-1D	Static Inverter
1A50-1A	Static Inverter
1A50-1B-1	Static Inverter
1A50-1C-1	Static Inverter
1B1000-1D-1	Static Inverter
1B1000-1G	Static Inverter
1B1000-1G-AM-912	Static Inverter
1B1000-1GJ-2044	Static Inverter
1B1000-1G-RR-1657	Static Inverter
1B1000-1G-RR-901	Static Inverter
1B1000-1GS	Static Inverter
1B250-1A	Static Inverter
1B250-1B-1	Static Inverter
1B250-1B-1/B1642	Static Inverter
1B250-1B1-DB	Static Inverter
1B250-1B-1PS	Static Inverter
1B250-1C	Static Inverter
1B250-1D-1	Static Inverter
1B250-1E-1	Static Inverter
1B250-1F-1	Static Inverter
1B250-B212-1661	Static Inverter
1B350-1A	Static Inverter
1B350-1B-1	Static Inverter
1B350-1B-1-3	Static Inverter
1B350-1B-2	Static Inverter
1B350-1B-FK-1008	Static Inverter
1B350-1C-1	Static Inverter
1B350-1D	Static Inverter
1B800-1D-1	Static Inverter
1B800-1G	Static Inverter
1B800-1GLN-1001	Static Inverter
1B800-1GN-1001	Static Inverter
1D250A/ARN	Course Indicator

1D851	Chip Detector
1K426-90090007-01	Oil Temperature & Pressure Indicator
1S640-101	Cluster Indicator
1S640-102	Cluster Indicator
1S640-103	Cluster Indicator
1S640-104	Cluster Indicator
1S640-105	Cluster Indicator
1S640-106	Cluster Indicator
1S640-107	Cluster Indicator
1S640-108	Cluster Indicator
1S640-201	Cluster Indicator
1S640-202	Cluster Indicator
1S640-203	Cluster Indicator
1S640-204	Cluster Indicator
1S640-205	Cluster Indicator
1S640-206	Cluster Indicator
1S640-207	Cluster Indicator
1S640-208	Cluster Indicator
1S640-302	Cluster Indicator
1S640-304	Cluster Indicator
1S640-306	Cluster Indicator
1S640-308	Cluster Indicator
1S640-402	Cluster Indicator
1S640-404	Cluster Indicator
1S640-406	Cluster Indicator
1S640-408	Cluster Indicator
1U149-001-1	Gyro Horizon
1U149-001-2	Gyro Horizon
1U149-001-3	Gyro Horizon
1U149-002	Gyro Horizon
1U149-002-1	Gyro Horizon
1U149-002-2	Gyro Horizon
1U149-002-3	Gyro Horizon
1U149-005	Gyro Horizon
1U149-010	Gyro Horizon
1U254-001-4	Directional Gyro
1U254-001-6	Directional Gyro
1U254-001-7	Directional Gyro
1U262-001-1	Directional Gyro
1U262-001-10	Directional Gyro
1U262-001-11	Directional Gyro
1U262-001-13	Directional Gyro
1U262-001-16	Directional Gyro
1U262-001-18	Directional Gyro
1U262-001-2	Directional Gyro
1U262-001-21	Directional Gyro
1U262-001-22	Directional Gyro
1U262-001-24	Directional Gyro
1U262-001-25	Directional Gyro

1U262-001-27	Directional Gyro
1U262-001-29	Directional Gyro
1U262-001-3	Directional Gyro
1U262-001-4	Directional Gyro
1U262-001-5	Directional Gyro
1U262-001-6	Directional Gyro
1U262-001-7	Directional Gyro
1U262-001-9	Directional Gyro
1U262-002-17	Directional Gyro
1U262-002-32	Directional Gyro
1U262-002-8	Directional Gyro
1U262-005-20	Directional Gyro
1U284-001-3	Gyro Horizon
1U295-010-11	Directional Gyro
1U305-001	Cluster Indicator
1U305-002	Cluster Indicator
1U305-003	Cluster Indicator
1U305-004	Cluster Indicator
1U305-005	Cluster Indicator
1U305-006	Cluster Indicator
1U305-007	Cluster Indicator
1U305-008	Cluster Indicator
1U305-009	Cluster Indicator
1U367-002-2	Gyro Horizon
1U367-221-3	Gyro Horizon
1U378	Engine Gauge
1U417-001-1	Engine Gauge
1U417-001-3	Engine Gauge
1U417-001-5	Engine Gauge
1U417-001-7	Engine Gauge
1U417-002-9	Engine Gauge
1U417-101-2	Engine Gauge
1U417-101-4	Engine Gauge
1U417-101-6	Engine Gauge
1U417-101-8	Engine Gauge
1U531-001	Cluster Indicator
1U531-002	Cluster Indicator
1U531-003	Cluster Indicator
1U531-004	Cluster Indicator
1U531-005	Cluster Indicator
1U540-001	Cluster Indicator
1U540-002	Cluster Indicator
1U540-003	Cluster Indicator
1U540-004	Cluster Indicator
1U540-005	Cluster Indicator
1U540-006	Cluster Indicator
1U569-001	Cluster Indicator
1U569-002	Cluster Indicator
1U569-1	Cluster Indicator

1ZL122M01	Master Alarm And Indication Panel
1ZZ205M	Power Supply
1ZZ210M	Master Alarm And Indication Panel
200-021-002	Dual Fuel Quantity Indicator
200-071-002	Fuel Pressure Indicator
200-071-003	Fuel Pressure Indicator
200-10	Directional Gyro
200-10BL	Directional Gyro
200-11	Directional Gyro
20015-11187	Airspeed Indicator
20015-11245	Airspeed Indicator
20015-11283	Airspeed Indicator
20015-21122	Airspeed Indicator
20016-11232	Airspeed Indicator
20016-11292	Airspeed Indicator
20018-01104	Airspeed Indicator
20018-11233	Airspeed Indicator
20018-11292	Airspeed Indicator
20018-11332	Airspeed Indicator
20020-11190	Airspeed Indicator
20020-11212	Airspeed Indicator
20020-11241	Airspeed Indicator
20020-11293	Airspeed Indicator
20020-11365	Airspeed Indicator
20020-11388	Airspeed Indicator
20020-11409	Airspeed Indicator
20022-0000-0101	Fuel Quantity Tank Unit
20022-0000-0102	Fuel Quantity Tank Unit
20022-0000-0103	Fuel Quantity Tank Unit
20022-0000-0104	Fuel Quantity Tank Unit
20022-0000-0105	Fuel Quantity Tank Unit
20022-0000-0106	Fuel Quantity Tank Unit
20022-0000-0107	Fuel Quantity Tank Unit
20022-0000-0108	Fuel Quantity Tank Unit
20-035008-300	Fire & Overheat Detection Control Unit
20036-0000-0101	Fuel Probe
20036-0000-0102	Fuel Quantity Transmitter
20036-0000-0103	Fuel Probe
20037-0000-01	Fuel Quantity Transmitter
20038-0000-01	Fuel Quantity Transmitter
20040-0113	Airspeed Indicator
20040-0145	Airspeed Indicator
20040-0186	Airspeed Indicator
20040-11171	Airspeed Indicator
20040-11172	Airspeed Indicator
20040-11173	Airspeed Indicator
20040-11223	Airspeed Indicator
20040-11224	Airspeed Indicator
20040-11229	Airspeed Indicator

20040-11230	Airspeed Indicator
20040-11231	Airspeed Indicator
20041-0000-03	Liquid Quantity Engine Oil Transmitter
20042-0000-01	Fuel Probe
200-6	Directional Gyro
20067-0000-0101	Fuel Quantity Tank Unit
20068-0000-0101	Fuel Quantity Tank Unit
200-914-001	Fuel Quantity Indicator
200-914-002	Fuel Quantity Indicator
20096-0203	Fuel Probe
200-9C	Directional Gyro
200-9C3	Directional Gyro
200-9M	Directional Gyro
200-9M3	Directional Gyro
200DC	Directional Gyro
200DC Bell	Directional Gyro
200DC(14)	Directional Gyro
200DC(28)	Directional Gyro
200DC(BELL)	Directional Gyro
200DC28	Directional Gyro
200DCBELL	Directional Gyro
200DCFM	Directional Gyro
200DCL	Directional Gyro
200DCL(28)	Directional Gyro
200E	Directional Gyro
200ED	Directional Gyro
200EDC	Directional Gyro
200H	Directional Gyro
201-0001	Torque Converter
201-004-001	Torque Indicator
20130-11225	Max Allowable Airspeed Indicator
20130-11236	Max Allowable Airspeed Indicator
20130-11274	Airspeed Indicator
20130-11294	Max Allowable Airspeed Indicator
20130-11412	Airspeed Indicator
20140-01210	Airspeed Indicator
201530-11373	Airspeed Indicator
20-2000	Turn & Bank Indicator
20-224-01	Fuel Quantity Indicator
20-226-01	Totalizer Fuel Quantity Indicator
20242005-104	Compass Control Indicator
203-021-001	Dual Oil Pressure Indicator
203-021-002	Dual Fuel Quantity Indicator
203-021-003	Fuel Quantity Indicator
203-022-003	Oil Temperature & Pressure Indicator
203-022-004	Oil Temperature & Pressure Indicator
203-022-005	Temperature & Pressure Indicator
203-022-008	Temperature & Pressure Indicator
203-022-009	Oil Pressure Indicator

203-022-016	Oil Temperature & Pressure Indicator
203-022-017	Oil Pressure Indicator
203-023-002	Dual Oil Pressure Indicator
203-023-003	Oil Pressure Indicator
203-023-016	Oil Temperature & Pressure Indicator
20-380	Turn & Slip Indicator
204-001-376-001	Magnetic Brake
204-001-376-003	Magnetic Brake
204-001-376-1	Magnetic Brake
204-001-376-103	Magnetic Brake
204-001-376-105	Magnetic Brake
204-001-376-3	Magnetic Brake
204-040-376-003	Transmission Oil Pressure Switch
204-040-376-3	Transmission Oil Pressure Switch
204-060-003	P.T.I.T. Indicator
204-060-004	P.T.I.T. Indicator
204-060-005	P.T.I.T. Indicator
204-060-006	Ptit Indicator
204-060-683-005	Fuel Quantity Indicator
204-060-683-5	Fuel Quantity Indicator
204-060-762-001	Actuator
204-060-762-005	Actuator
204-060-762-009	Actuator
204-060-762-011	Actuator
204-060-762-013	Actuator
204-060-762-1	Actuator
204-060-762-103	Actuator
204-060-762-11	Actuator
204-060-762-13	Actuator
204-060-762-5	Actuator
204-060-762-9	Actuator
204-061-606-001	Transmitter
204-061-606-1	Transmitter
204-062-520-003	Shut Off Valve
204-062-520-3	Shut Off Valve
204-070-155-001	Dual Tachometer Indicator
204-070-155-1	Dual Tachometer Indicator
204-070-482-001	Selector Switch
204-070-482-1	Selector Switch
204-070-907-001	Wiper Motor
204-070-907-002	Motor And Convertor Assy Lh
204-070-907-1	Motor Converter
204-070-907-101	Wiper Motor
204-070-907-102	Wiper Motor
204-070-907-103	Motor And Converter Assembly
204-070-907-104	Wiper Motor
204-070-907-2	Motor And Convertor
204-072-129-001	Dual Tachometer Indicator
204-072-129-003	Dual Tachometer Indicator

204-072-129-005	Dual Tachometer Indicator
204-072-129-1	Dual Tachometer Indicator
204-072-129-101	Dual Tachometer Indicator
204-072-129-3	Dual Tachometer Indicator
204-072-129-5	Dual Tachometer Indicator
204-072-166-001	Free Air Temperature
204-072-184-001	Torque Pressure Indicator
204-075-222-001	Hydraulic Control Panel
204-075-527-101	Light Assembly
204-075-705-003	Master Caution Paneil
204-075-705-045	Master Caution Paneil
204-075-705-047	Master Caution Paneil
204-075-705-073	Master Caution Paneil
204-075-705-101	Master Caution Paneil
204-075-705-103	Master Caution Paneil
204-075-705-3	Master Caution Paneil
204-075-705-45	Master Caution Paneil
205-001-042-001	Grip Assembly
205-001-042-1	Grip Assembly
205-001-046-001	Grip Assembly
205-001-046-003	Grip Assembly
205-001-046-1	Grip Assembly
205-001-046-101	Grip Assembly
205-001-046-103	Grip Assembly
205-001-046-105	Grip Assembly
205-001-046-115	Grip Assembly
205-001-046-121	Grip Assembly
205-001-046-3	Grip Assembly
205-001-406-101	Grip Assembly
205-016-001	Fuel Quantity Indicator
205-060-612-003	Motor Driven Valve
205-060-612-101	Motor Driven Valve
205-060-612-3	Motor Driven Valve
205-061-633-007	Fuel Quantity Indicator
205-061-633-009	Fuel Probe
205-061-633-011	Fuel Probe
205-061-633-013	Fuel Probe
205-061-633-11	Fuel Probe
205-061-633-13	Fuel Probe
205-061-633-7	Fuel Quantity Indicator
205-061-635-001	Fuel Flow Switch
205-061-635-003	Fuel Flow Switch
205-061-635-005	Fuel Flow Switch
205-061-635-1	Fuel Flow Switch
205-061-635-3	Fuel Flow Switch
205-061-635-5	Fuel Flow Switch
205-063-633-011	Fuel Probe
205-070-282-003	Loadmeter
205-070-283-001	Tachometer Indicator

205-070-283-003	Tachometer Indicator
205-070-283-1	Tachometer Indicator
205-070-283-3	Tachometer Indicator
205-070-284-003	Temperature Indicator
205-070-284-3	Temperature Indicator
205-072-277-009	Mixing Valve
205-074-001-001	Rpm Limiit Detector
205-074-001-1	Rpm Limiit Detector
205-074-026-001	Rpm Limiit Detector
205-074-026-1	Rpm Limiit Detector
205-074-033-103	Rpm Limiit Detector
205-075-158-001	Oil Pressure Indicator
205-075-158-1	Oil Pressure Indicator
205-075-170-001	Torque Pressure Indicator
205-075-170-1	Torque Pressure Indicator
205-075-259-001	Hydraulic Control Panel
205-075-315-001	Impedance Matching Network
205-075-388-001	Rpm Limiit Detector
205-075-388-003	Rpm Limiit Detector
205-075-388-005	Rpm Limiit Detector
205-075-388-007	Rpm Limiit Detector
205-075-388-009	Rpm Limiit Detector
205-075-388-011	Rpm Limiit Detector
205-075-388-013	Rpm Limiit Detector
205-075-388-015	Rpm Limiit Detector
205-075-388-017	Rpm Limiit Detector
205-075-388-1	Rpm Limiit Detector
205-075-388-11	Rpm Limiit Detector
205-075-388-13	Rpm Limiit Detector
205-075-388-15	Rpm Limiit Detector
205-075-388-17	Rpm Limiit Detector
205-075-388-3	Rpm Limiit Detector
205-075-388-5	Rpm Limiit Detector
205-075-388-7	Rpm Limiit Detector
205-075-388-9	Rpm Limiit Detector
205-075-625-003	Control Panel
205-075-625-005	Control Panel
205-075-626-001	Control Panel
205-075-626-101	Control Panel
205-075-631-005	Panel
205-075-631-5	Panel
205-075-636-003	Engine Control Panel
205-075-642-001	Relay
205-075-642-1	Relay
205-075-657-101	Torque Indicator
205-075-807-001	Fuel Pressure Indicator
205-1AL	Directional Gyro
205-1B	Directional Gyro
205-1BC	Directional Gyro

205-1BF	Directional Gyro
205-1BL	Directional Gyro
205-1BLF	Directional Gyro
205-1C	Directional Gyro
205-1CL	Directional Gyro
205-1D	Directional Gyro
2051VL	Directional Gyro
205-1VL	Directional Gyro
205-2A	Directional Gyro
205-2B	Directional Gyro
205-2BL	Directional Gyro
205-2C	Directional Gyro
205-2CL	Directional Gyro
205-375-002-101	Temperature Indicator
205-375-002-103	Inter Turbine Temperature Indicator
205-375-003-101	Torque Indicator
205-375-004-101	Temperature & Pressure Indicator
205-375-004-103	Temperature & Pressure Indicator
205-375-005-101	Temperature & Pressure Indicator
205-375-005-103	Oil Temperature & Pressure Indicator
205-6BL	Directional Gyro
205-7BL	Directional Gyro
206-001-026-001	Handgrip
206-001-026-1	Handgrip
206-001-359-01	Handgrip
206-001-365-003	Handgrip
206-001-365-3	Handgrip
206-003-002	Fuel Quantity Transmitter
206-061-634-001	Valve
206-061-634-002	Valve
206-061-634-003	Valve
206-061-634-1	Valve
206-061-634-2	Valve
206-061-634-3	Valve
206-062-502-101	Oil Cooler Blower
206-062-504-001	Motor Driven Valve
206-062-504-1	Motor Driven Valve
206-062-625-003	Actuator
206-062-625-3	Actuator
206-062-627-001	Tach Generator
206-062-627-003	Tach Generator
206-062-627-1	Tach Generator
206-062-627-3	Tach Generator
206-062-721-001	Linear Actuator
206-062-721-007	Linear Actuator
206-062-721-011	Linear Actuator
206-062-721-015	Linear Actuator
206-062-721-1	Linear Actuator
206-062-721-103	Linear Actuator

206-062-721-105	Linear Actuator
206-062-721-107	Linear Actuator
206-062-721-109	Linear Actuator
206-062-721-11	Linear Actuator
206-062-721-111	Linear Actuator
206-062-721-113	Linear Actuator
206-062-721-115	Linear Actuator
206-062-721-117	Linear Actuator
206-062-721-15	Linear Actuator
206-062-721-7	Linear Actuator
206-063-633-001	Fuel Quantity Indicator
206-063-633-003	Fuel Quantity Indicator
206-063-633-1	Fuel Quantity Indicator
206-063-633-101	Fuel Quantity Indicator
206-063-633-103	Fuel Quantity Indicator
206-063-633-106	Fuel Quantity Indicator
206-063-633-3	Fuel Quantity Indicator
206-063-640-001	Motor Driven Valve
206-063-640-003	Fuel Valve
206-063-640-1	Motor Driven Valve
206-063-640-101	Motor Driven Valve
206-063-640-103	Motor Driven Valve
206-063-640-105	Motor Driven Valve
206-063-640-107	Motor Driven Valve
206-063-640-109	Motor Driven Valve
206-063-656-001	Fuel Quantity Tank Unit
206-063-656-003	Fuel Quantity Tank Unit
206-063-656-005	Fuel Quantity Tank Unit
206-063-656-1	Fuel Quantity Tank Unit
206-063-656-3	Fuel Quantity Tank Unit
206-063-656-5	Fuel Quantity Tank Unit
206-063-657-001	Fuel Probe
206-063-657-003	Fuel Probe
206-063-657-005	Fuel Probe
206-063-657-1	Fuel Probe
206-063-657-101	Fuel Probe
206-063-657-3	Fuel Probe
206-063-657-5	Fuel Probe
206-063-658-001	Fuel Probe
206-063-658-003	Fuel Probe
206-063-658-005	Fuel Probe
206-063-658-1	Fuel Probe
206-063-658-3	Fuel Probe
206-063-658-5	Fuel Probe
206-064-618-001	Fuel Probe
206-064-618-1	Fuel Probe
206-064-635-101	Fuel Quantity Tank Unit
206-064-635-103	Fuel Quantity Tank Unit
206-064-636-101	Fuel Probe

206-064-636-103	Fuel Probe
206-064-637-101	Fuel Probe
206-064-637-103	Fuel Probe
206-070-185-001	Torque Indicator
206-070-185-003	Torque Indicator
206-070-185-005	Torque Indicator
206-070-185-007	Torque Indicator
206-070-185-1	Torque Indicator
206-070-185-101	Torque Indicator
206-070-185-103	Torque Indicator
206-070-185-105	Torque Indicator
206-070-185-3	Torque Indicator
206-070-185-5	Torque Indicator
206-070-185-7	Torque Indicator
206-070-241-001	Dual Tachometer Indicator
206-070-241-1	Dual Tachometer Indicator
206-070-242-001	Turbine Outlet Temperature Indicator
206-070-242-003	T.O.T. Indicator
206-070-242-1	Turbine Outlet Temperature Indicator
206-070-242-3	Turbine Outlet Temperature Indicator
206-070-243-001	Gas Producer Tachometer Indicator
206-070-243-003	Gas Producer Tachometer Indicator
206-070-243-1	Gas Producer Tachometer Indicator
206-070-243-3	Gas Producer Tachometer Indicator
206-070-263-001	Altimeter
206-070-263-003	Altimeter
206-070-263-005	Altimeter
206-070-263-007	Altimeter
206-070-263-009	Altimeter
206-070-263-1	Altimeter
206-070-263-101	Altimeter
206-070-263-105	Altimeter
206-070-263-3	Altimeter
206-070-263-5	Altimeter
206-070-263-7	Altimeter
206-070-263-9	Altimeter
206-070-264-001	Airspeed Indicator
206-070-264-003	Airspeed Indicator
206-070-264-005	Airspeed Indicator
206-070-264-007	Airspeed Indicator
206-070-264-1	Airspeed Indicator
206-070-264-3	Airspeed Indicator
206-070-264-5	Airspeed Indicator
206-070-264-7	Airspeed Indicator
206-070-265-001	Dual Tachometer Indicator
206-070-265-003	Dual Tachometer Indicator
206-070-265-005	Dual Tachometer Indicator
206-070-265-007	Dual Tachometer Indicator
206-070-265-009	Dual Tachometer Indicator

206-070-265-011	Dual Tachometer Indicator
206-070-265-1	Dual Tachometer Indicator
206-070-265-101	Dual Tachometer Indicator
206-070-265-103	Dual Tachometer Indicator
206-070-265-11	Dual Tachometer Indicator
206-070-265-3	Dual Tachometer Indicator
206-070-265-5	Dual Tachometer Indicator
206-070-265-7	Dual Tachometer Indicator
206-070-265-9	Dual Tachometer Indicator
206-070-266-001	Tachometer Indicator
206-070-266-003	Tachometer Indicator
206-070-266-005	Tachometer Indicator
206-070-266-007	Tachometer Indicator
206-070-266-009	Tachometer Indicator
206-070-266-011	Tachometer Indicator
206-070-266-013	Tachometer Indicator
206-070-266-1	Tachometer Indicator
206-070-266-11	Tachometer Indicator
206-070-266-13	Tachometer Indicator
206-070-266-3	Tachometer Indicator
206-070-266-5	Tachometer Indicator
206-070-266-7	Tachometer Indicator
206-070-266-9	Tachometer Indicator
206-070-267-001	Turbine Outlet Temperature Indicator
206-070-267-003	Turbine Outlet Temperature Indicator
206-070-267-005	Turbine Outlet Temperature Indicator
206-070-267-007	Turbine Outlet Temperature Indicator
206-070-267-009	Turbine Outlet Temperature Indicator
206-070-267-011	Turbine Outlet Temperature Indicator
206-070-267-013	Turbine Outlet Temperature Indicator
206-070-267-015	Turbine Outlet Temperature Indicator
206-070-267-1	Turbine Outlet Temperature Indicator
206-070-267-11	Turbine Outlet Temperature Indicator
206-070-267-13	Turbine Outlet Temperature Indicator
206-070-267-15	Turbine Outlet Temperature Indicator
206-070-267-3	Turbine Outlet Temperature Indicator
206-070-267-5	Turbine Outlet Temperature Indicator
206-070-267-7	Turbine Outlet Temperature Indicator
206-070-267-9	Turbine Outlet Temperature Indicator
206-070-268-001	Torque Indicator
206-070-268-003	Torque Indicator
206-070-268-005	Torque Indicator
206-070-268-007	Torque Indicator
206-070-268-009	Torque Indicator
206-070-268-011	Torque Indicator
206-070-268-013	Torque Indicator
206-070-268-1	Torque Indicator
206-070-268-11	Torque Indicator
206-070-268-13	Torque Indicator

206-070-268-3	Torque Indicator
206-070-268-5	Torque Indicator
206-070-268-7	Torque Indicator
206-070-268-9	Torque Indicator
206-070-269-009	Transmission Oil Temperature Indicator
206-070-269-9	Transmission Oil Temperature Indicator
206-070-274-001	Turn & Bank Indicator
206-070-274-005	Turn & Bank Indicator
206-070-274-1	Turn & Bank Indicator
206-070-274-101	Turn & Bank Indicator
206-070-274-5	Turn & Bank Indicator
206-070-275-001	Clock
206-070-275-003	Clock
206-070-275-005	Clock
206-070-275-1	Clock
206-070-275-3	Clock
206-070-275-5	Clock
206-070-278-001	Vertical Speed Indicator
206-070-278-005	Vertical Speed Indicator
206-070-278-1	Vertical Speed Indicator
206-070-278-5	Vertical Speed Indicator
206-070-307-1A	Oil Temperature Indicator
206-070-307-2A	Oil Pressure Indicator
206-070-307-3A	Dc Ammeter
206-070-307-4	Fuel Quantity Indicator
206-070-307-4A	Fuel Quantity Indicator
206-070-320-003	Attitude Gyro
206-070-320-3	Attitude Gyro
206-070-339-001	Torque Indicator
206-070-339-1	Torque Indicator
206-070-351-001	Instrument Cluster
206-070-351-003	Instrument Cluster
206-070-351-1	Instrument Cluster
206-070-351-3	Instrument Cluster
206-070-360-001	Torque Indicator
206-070-360-1	Torque Indicator
206-070-399-001	Torque Indicator
206-070-399-003	Torque Indicator
206-070-399-1	Torque Indicator
206-070-399-3	Torque Indicator
206-070-473-001	Instrument Cluster
206-070-473-003	Instrument Cluster
206-070-473-005	Instrument Cluster
206-070-473-007	Instrument Cluster
206-070-473-1	Instrument Cluster
206-070-473-3	Instrument Cluster
206-070-473-5	Instrument Cluster
206-070-473-7	Instrument Cluster
206-070-475-003	Fan

206-070-475-005	Blower Assembly
206-070-475-3	Fan
206-070-475-5	Fan Vaneaxial
206-070-988-001	Instrument Cluster
206-070-988-1	Instrument Cluster
206-070-989-001	Torque Indicator
206-070-989-1	Torque Indicator
206-070-990-001	Vertical Speed Indicator
206-070-990-1	Vertical Speed Indicator
206-070-998-001	Instrument Cluster
206-073-913-001	Vaneaxial Fan
206-073-913-1	Vaneaxial Fan
206-074-447-007	Voltage Regulator
206-074-447-7	Voltage Regulator
206-075-109-005	Turbine Outlet Temperature Indicator
206-075-109-5	Turbine Outlet Temperature Indicator
206-075-183-003	Fuel Pressure & Load Meter
206-075-183-3	Fuel Pressure & Load Meter
206-075-185-001	Torque Indicator
206-075-185-003	Torque Indicator
206-075-185-005	Torque Indicator
206-075-185-1	Torque Indicator
206-075-185-101	Torque Indicator
206-075-185-103	Torque Indicator
206-075-185-105	Torque Indicator
206-075-185-3	Torque Indicator
206-075-185-5	Torque Indicator
206-075-186-001	Fuel Pressure & Load Meter
206-075-186-003	Fuel Pressure & Load Meter
206-075-186-005	Fuel Pressure & Load Meter
206-075-186-1	Fuel Pressure & Load Meter
206-075-186-3	Fuel Pressure & Load Meter
206-075-186-5	Fuel Pressure & Load Meter
206-075-187-001	Temperature & Pressure Indicator
206-075-187-003	Temperature & Pressure Indicator
206-075-187-1	Temperature & Pressure Indicator
206-075-187-3	Temperature & Pressure Indicator
206-075-188-001	Temperature & Pressure Indicator
206-075-188-003	Temperature & Pressure Indicator
206-075-188-005	Temperature & Pressure Indicator
206-075-188-1	Temperature & Pressure Indicator
206-075-188-3	Temperature & Pressure Indicator
206-075-188-5	Temperature & Pressure Indicator
206-075-189-001	Fuel Quantity Indicator
206-075-189-003	Fuel Quantity Indicator
206-075-189-1	Fuel Quantity Indicator
206-075-189-101	Fuel Quantity Indicator
206-075-189-3	Fuel Quantity Indicator
206-075-190-001	Turbine Outlet Temperature Indicator

206-075-190-003	Turbine Outlet Temperature Indicator
206-075-190-005	Turbine Outlet Temperature Indicator
206-075-190-007	Turbine Outlet Temperature Indicator
206-075-190-1	Turbine Outlet Temperature Indicator
206-075-190-3	Turbine Outlet Temperature Indicator
206-075-190-5	Turbine Outlet Temperature Indicator
206-075-190-7	Turbine Outlet Temperature Indicator
206-075-234-001	Panel
206-075-234-1	Panel
206-075-364-005	Inverter
206-075-364-5	Inverter
206-075-440-009	Panel
206-075-440-9	Panel
206-075-447-001	Voltage Regulator
206-075-447-003	Voltage Regulator
206-075-447-007	Voltage Regulator
206-075-447-1	Voltage Regulator
206-075-447-101	Voltage Regulator
206-075-447-3	Voltage Regulator
206-075-447-7	Voltage Regulator
206-075-456-007	Annunciator Panel
206-075-456-101	Caution Annunciator Panel
206-075-456-7	Annunciator Panel
206-075-606-101	Directional Gyro
206-075-606-103	Directional Gyro
206-075-606-107	Directional Gyro
206-075-606-109	Directional Gyro
206-075-607-101	Gyro Horizon
206-075-607-103	Gyro Horizon
206-075-607-105	Gyro Horizon
206-075-607-107	Gyro Horizon
206-075-624-001	Thermostat
206-075-624-1	Oat Indicator
206-075-675-119	Pressure & Load Meter
206-075-676-001	Fuel Pressure/Load Meter
206-075-676-003	Fuel Pressure/Load Meter
206-075-676-1	Fuel Pressure/Load Meter
206-075-676-101	Fuel Pressure/Load Meter
206-075-676-103	Fuel Pressure/Load Meter
206-075-676-105	Fuel Pressure/Load Meter
206-075-676-107	Fuel Pressure/Load Meter
206-075-676-109	Fuel Pressure/Load Meter
206-075-676-111	Fuel Pressure/Load Meter
206-075-676-113	Fuel Pressure/Load Meter
206-075-676-115	Fuel Pressure/Load Meter
206-075-676-117	Fuel Pressure/Load Meter
206-075-676-119	Fuel Pressure/Load Meter
206-075-676-3	Fuel Pressure/Load Meter
206-075-677-101	Temperature & Pressure Indicator

206-075-677-103	Temperature & Pressure Indicator
206-075-677-105	Temperature & Pressure Indicator
206-075-678-101	Temperature & Pressure Indicator
206-075-678-103	Temperature & Pressure Indicator
206-075-678-105	Temperature & Pressure Indicator
206-075-678-107	Temperature & Pressure Indicator
206-075-680-101	Turbine Outlet Temperature Indicator
206-075-680-103	Turbine Outlet Temperature Indicator
206-075-680-105	Turbine Outlet Temperature Indicator
206-075-680-107	Turbine Outlet Temperature Indicator
206-075-681-001	Dual Tachometer Indicator
206-075-681-003	Dual Tachometer Indicator
206-075-681-013	Dual Tachometer Indicator
206-075-681-1	Dual Tachometer Indicator
206-075-681-101	Dual Tachometer Indicator
206-075-681-103	Dual Tachometer Indicator
206-075-681-105	Dual Tachometer Indicator
206-075-681-107	Dual Tachometer Indicator
206-075-681-109	Dual Tachometer Indicator
206-075-681-111	Dual Tachometer Indicator
206-075-681-113	Dual Tachometer Indicator
206-075-681-115	Dual Tachometer Indicator
206-075-681-117	Dual Tachometer Indicator
206-075-681-119	Dual Tachometer Indicator
206-075-681-121	Dual Tachometer Indicator
206-075-681-123	Dual Tachometer Indicator
206-075-681-3	Dual Tachometer Indicator
206-075-682-001	Tachometer Indicator
206-075-682-1	Tachometer Indicator
206-075-682-101	Tachometer Indicator
206-075-682-103	Tachometer Indicator
206-075-682-105	Tachometer Indicator
206-075-682-107	Tachometer Indicator
206-075-682-109	Tachometer Indicator
206-075-691-001	Panel
206-075-691-1	Panel
206-075-705-001	Oil Temperature & Pressure Indicator
206-075-705-1	Oil Temperature & Pressure Indicator
206-075-706-001	Transmission Oil Pressure Indicator
206-075-706-1	Transmission Oil Pressure Indicator
206-075-707-001	Fuel Quantity Indicator
206-075-707-1	Fuel Quantity Indicator
206-075-708-001	Turbine Outlet Temperature Indicator
206-075-708-003	Turbine Outlet Temperature Indicator
206-075-708-005	Turbine Outlet Temperature Indicator
206-075-708-1	Turbine Outlet Temperature Indicator
206-075-710-001	Dc Ammeter
206-075-710-1	Dc Ammeter
206-075-711-001	Torque Indicator

206-075-711-003	Torque Indicator
206-075-711-1	Torque Indicator
206-075-712-001	Airspeed Indicator
206-075-712-1	Airspeed Indicator
206-075-713-001	Tachometer Indicator
206-075-713-003	Tachometer Indicator
206-075-713-1	Tachometer Indicator
206-075-713-101	Tachometer Indicator
206-075-713-3	Tachometer Indicator
206-075-714-001	Gyro Horizon
206-075-714-1	Gyro Horizon
206-075-714-101	Gyro Horizon
206-075-715-001	Turbine Outlet Temperature Indicator
206-075-715-003	Turbine Outlet Temperature Indicator
206-075-715-1	Turbine Outlet Temperature Indicator
206-075-715-3	Turbine Outlet Temperature Indicator
206-075-721-001	Panel
206-075-721-1	Panel
206-075-725-001	Airspeed Indicator
206-075-725-1	Airspeed Indicator
206-075-725-101	Airspeed Indicator
206-075-725-103	Airspeed Indicator
206-075-725-105	Airspeed Indicator
206-075-725-107	Airspeed Indicator
206-075-725-109	Airspeed Indicator
206-075-725-111	Airspeed Indicator
206-075-739-101	Torque Indicator
206-075-739-103	Torque Indicator
206-075-739-105	Torque Indicator
206-075-739-107	Torque Indicator
206-075-739-109	Torque Indicator
206-075-739-111	Torque Indicator
206-075-739-113	Torque Indicator
206-075-739-115	Torque Indicator
206-075-739-117	Torque Indicator
206-075-739-119	Torque Indicator
206-075-739-121	Torque Indicator
206-075-739-123	Torque Indicator
206-075-739-125	Torque Indicator
206-075-739-127	Torque Indicator
206-075-739-129	Torque Indicator
206-075-739-131	Torque Indicator
206-075-739-133	Torque Indicator
206-075-739-135	Torque Indicator
206-075-739-137	Torque Indicator
206-075-740-101	Fuel Quantity Indicator
206-075-740-103	Fuel Quantity Indicator
206-075-740-105	Fuel Quantity Indicator
206-075-740-107	Fuel Quantity Indicator

206-075-740-109	Fuel Quantity Indicator
206-075-740-111	Fuel Quantity Indicator
206-075-740-113	Fuel Quantity Indicator
206-075-740-115	Fuel Quantity Indicator
206-075-753-107	Panel
206-075-770-103	Panel
206-075-770-107	Panel
206-076-373-001	Tach Generator
206-076-373-1	Tach Generator
206-301-052-103	Actuator
206-351-0001	Instrument Cluster
206-364-601-101	Fuel Quantity Transmitter
206-373-901-101	Valve
206-373-901-103	Shut Off Valve
206-375-005-101	Turbine Outlet Temperature Indicator
206-375-005-103	Turbine Outlet Temperature Indicator
206-375-006-101	Turbine Outlet Temperature Indicator
206-375-007-101	Turbine Outlet Temperature Indicator
206-375-007-103	Turbine Outlet Temperature Indicator
206-375-009-101	Turbine Outlet Temperature Indicator
206-375-010-101	Dual Tachometer Indicator
206-375-011-101	Gas Producer Tachometer Indicator
206-375-012-101	Temperature Indicator
206-375-013-101	Torque Indicator
206-375-051-105	Panel
206-375-200-103	Tach Generator
206-375-202-101	Tach Generator
206-961-129-011	Handgrip
206-961-129-11	Handgrip
208-906-001	Inter Turbine Temperature Indicator
209-001-010-001	Handgrip
209-001-010-003	Handgrip
209-001-010-1	Handgrip
209-001-010-3	Handgrip
209-001-059-001	Handgrip
209-001-059-1	Handgrip
209-062-002-001	Differential Pressure Indicator
209-062-002-1	Differential Pressure Indicator
209-062-003-001	Pressure Switch
209-062-214-001	Actuator
209-062-214-1	Actuator
209-062-214-101	Actuator
209-062-502-101	Blower Assembly
209-062-601-001	Motor Driven Valve
209-062-601-003	Motor Driven Valve
209-062-601-1	Motor Driven Valve
209-062-601-101	Motor Driven Valve
209-062-601-3	Motor Driven Valve
209-062-780-001	Linear Actuator

209-062-780-1	Linear Actuator
209-062-780-101	Linear Actuator
209-064-640-101	Motor Driven Valve
209-070-178-001	Airspeed Indicator
209-070-178-003	Airspeed Indicator
209-070-178-1	Airspeed Indicator
209-070-178-3	Airspeed Indicator
209-070-243-001	Tachometer Indicator
209-070-243-003	Tachometer Indicator
209-070-243-1	Tachometer Indicator
209-070-243-3	Tachometer Indicator
209-070-262-001	Oil Temperature & Pressure Indicator
209-070-262-003	Oil Temperature & Pressure Indicator
209-070-262-007	Oil Temperature & Pressure Indicator
209-070-262-009	Oil Temperature & Pressure Indicator
209-070-262-1	Oil Temperature & Pressure Indicator
209-070-262-101	Oil Temperature & Pressure Indicator
209-070-262-103	Oil Temperature & Pressure Indicator
209-070-262-105	Oil Temperature & Pressure Indicator
209-070-262-107	Oil Temperature & Pressure Indicator
209-070-262-109	Oil Temperature & Pressure Indicator
209-070-262-111	Oil Temperature & Pressure Indicator
209-070-262-113	Oil Temperature & Pressure Indicator
209-070-262-115	Oil Temperature & Pressure Indicator
209-070-262-3	Oil Temperature & Pressure Indicator
209-070-262-7	Oil Temperature & Pressure Indicator
209-070-262-9	Oil Temperature & Pressure Indicator
209-070-263-001	Voltmeter
209-070-263-003	Voltmeter
209-070-263-007	Voltmeter
209-070-263-009	Voltmeter
209-070-263-011	Voltmeter
209-070-263-1	Voltmeter
209-070-263-101	Voltmeter
209-070-263-103	Voltmeter
209-070-263-11	Voltmeter
209-070-263-3	Dual Voltmeter Indicator
209-070-263-7	Voltmeter
209-070-263-9	Voltmeter
209-070-264-001	Dual Ammeter
209-070-264-003	Dual Ammeter
209-070-264-1	Dual Ammeter
209-070-264-105	Dual Ammeter
209-070-264-109	Dual Ammeter
209-070-264-3	Ammeter
209-070-275-001	Fuel Pressure Indicator
209-070-278-001	Attitude Indicator
209-070-278-1	Attitude Indicator
209-070-280-005	Emergency Fire Control Switch

209-070-280-007	Emergency Fire Control Switch
209-070-280-101	Emergency Fire Control Switch
209-070-280-103	Emergency Fire Control Switch
209-075-228-001	Voltage Regulator
209-075-228-1	Voltage Regulator
209-075-325-009	Annunciator Caution Panel
209-075-325-011	Annunciator Caution Panel
209-075-325-015	Annunciator Caution Panel
209-075-325-033	Annunciator Caution Panel
209-075-325-045	Annunciator Caution Panel
209-075-325-063	Annunciator Caution Panel
209-075-325-071	Annunciator Caution Panel
209-075-325-101	Annunciator Caution Panel
209-075-325-107	Annunciator Caution Panel
209-075-325-109	Annunciator Caution Panel
209-075-325-11	Annunciator Caution Panel
209-075-325-111	Annunciator Caution Panel
209-075-325-113	Annunciator Caution Panel
209-075-325-145	Annunciator Caution Panel
209-075-325-155	Annunciator Caution Panel
209-075-325-161	Annunciator Caution Panel
209-075-325-165	Annunciator Caution Panel
209-075-325-33	Annunciator Caution Panel
209-075-325-45	Annunciator Caution Panel
209-075-325-63	Annunciator Caution Panel
209-075-325-71	Annunciator Caution Panel
209-075-325-9	Annunciator Caution Panel
209-075-326-001	Rpm Limiit Detector
209-075-326-005	Rpm Limiit Detector
209-075-326-1	Rpm Limiit Detector
209-075-326-101	Rpm Limiit Detector
209-075-326-5	Rpm Limiit Detector
209-075-365-001	Gyro Horizon
209-075-365-003	Gyro Horizon
209-075-365-1	Gyro Horizon
209-075-365-101	Gyro Horizon
209-075-365-3	Gyro Horizon
209-075-387-001	Power Supply
209-075-387-1	Power Supply
209-075-395-001	Fire Control Panel
209-075-395-1	Fire Control Panel
209-075-618-001	Dual Tachometer Indicator
209-075-618-1	Dual Tachometer Indicator
209-075-651-003	Gas Temperature Indicator
209-075-651-3	Gas Temperature Indicator
209-075-652-001	Tachometer Indicator
209-075-652-003	Tachometer Indicator
209-075-652-005	Tachometer Indicator
209-075-652-007	Tachometer Indicator

209-075-652-009	Tachometer Indicator
209-075-652-1	Tachometer Indicator
209-075-652-101	Tachometer Indicator
209-075-652-103	Tachometer Indicator
209-075-652-3	Tachometer Indicator
209-075-652-5	Tachometer Indicator
209-075-652-7	Tachometer Indicator
209-075-652-9	Tachometer Indicator
209-075-653-007	Torque Indicator
209-075-653-7	Torque Indicator
209-075-654-005	Torque Indicator
209-075-654-101	Torque Indicator
209-075-654-5	Torque Indicator
209-075-655-001	Dual Tachometer Indicator
209-075-655-003	Dual Tachometer Indicator
209-075-655-005	Dual Tachometer Indicator
209-075-655-1	Dual Tachometer Indicator
209-075-655-101	Dual Tachometer Indicator
209-075-655-103	Dual Tachometer Indicator
209-075-655-3	Dual Tachometer Indicator
209-075-655-5	Dual Tachometer Indicator
209-075-656-001	Temperature & Pressure Indicator
209-075-656-1	Temperature & Pressure Indicator
209-075-657-101	Temperature & Pressure Indicator
209-075-658-001	Temperature & Pressure Indicator
209-075-658-1	Temperature & Pressure Indicator
209-075-659-003	Volt/Ammeter
209-075-659-103	Voltmeter
209-075-659-3	Voltmeter
209-075-663-001	Vertical Speed Indicator
209-075-663-1	Vertical Speed Indicator
209-075-665-001	Airspeed Indicator
209-075-665-1	Indicator
209-075-666-003	Attitude Indicator
209-075-666-3	Attitude Indicator
209-075-698-001	Attitude gyro
209-075-722-001	Triple Tachometer Indicator
209-075-722-003	Triple Tachometer Indicator
209-075-722-1	Triple Tachometer Indicator
209-075-722-101	Triple Tachometer Indicator
209-075-722-3	Triple Tachometer Indicator
209-075-766-001	Panel
209-075-766-1	Panel
209-175-308-001	Power Supply
209-175-308-1	Power Supply
209-175-334-001	Panel
209-175-334-1	Panel
209-373-001-101	Motor Driven Valve
209-375-006-101	Turbine Outlet Temperature Indicator

209-375-007-101	Turbine Outlet Temperature Indicator
209-375-007-103	Turbine Outlet Temperature Indicator
209-375-009-101	Turbine Outlet Temperature Indicator
209-375-022-101	Oil Temperature & Pressure Indicator
209-375-028-101	Panel
209-375-045-101	Airspeed Indicator
209-375-046-103	Altimeter
209-375-047-101	Triple Tachometer Indicator
209-375-049-101	Panel
209-375-054-115	Panel
209-375-057-101	Panel
209-375-061-103	Panel
2100904-1	Blower Motor
210-095-00	Load Indicator
2101 I/O PLUS	RECEIVER DISPLAY UNIT
2101-5-C	Engine Gage Indicator
210-1A	Egt Indicator
210-5A	Directional Gyro
2105DB6	R.M.I.
21140-1134-1	Airspeed Indicator
21140-1134-2	Airspeed Indicator
21140-1150	Airspeed Indicator
2117804-1	CABIN AIR PRESSURE CONTROLLER
2117804-10	CABIN AIR PRESSURE CONTROLLER
2117804-3	CABIN AIR PRESSURE CONTROLLER
21-19132-1	Altitude Alerter
211C223-471	Pressure Switch
212-040-122-101	Chip Detector
212-040-122-103	Chip Detector
212-045-067-119	Inter Turbine Temperature Indicator
212-061-614-001	Motor Driven Valve
212-061-614-1	Motor Driven Valve
212-070-108-003	Triple Tachometer Indicator
212-070-108-005	Triple Tachometer Indicator
212-070-108-007	Triple Tachometer Indicator
212-070-108-009	Triple Tachometer Indicator
212-070-108-011	Triple Tachometer Indicator
212-070-108-101	Triple Tachometer Indicator
212-070-108-103	Triple Tachometer Indicator
212-070-108-107	Triple Tachometer Indicator
212-070-108-11	Triple Tachometer Indicator
212-070-108-3	Triple Tachometer Indicator
212-070-108-5	Triple Tachometer Indicator
212-070-108-7	Triple Tachometer Indicator
212-070-108-9	Triple Tachometer Indicator
212-070-116-001	Oil Temperature & Pressure Indicator
212-070-116-003	Oil Temperature & Pressure Indicator
212-070-116-005	Oil Temperature & Pressure Indicator
212-070-116-007	Oil Temperature & Pressure Indicator

212-070-116-009	Oil Temperature & Pressure Indicator
212-070-116-011	Oil Temperature & Pressure Indicator
212-070-116-013	Oil Temperature & Pressure Indicator
212-070-116-015	Oil Temperature & Pressure Indicator
212-070-116-017	Oil Temperature & Pressure Indicator
212-070-116-019	Oil Temperature & Pressure Indicator
212-070-116-021	Oil Temperature & Pressure Indicator
212-070-116-023	Oil Temperature & Pressure Indicator
212-070-116-025	Oil Temperature & Pressure Indicator
212-070-116-1	Oil Temperature & Pressure Indicator
212-070-116-101	Oil Temperature & Pressure Indicator
212-070-116-103	Oil Temperature & Pressure Indicator
212-070-116-105	Oil Temperature & Pressure Indicator
212-070-116-107	Oil Temperature & Pressure Indicator
212-070-116-11	Oil Temperature & Pressure Indicator
212-070-116-13	Oil Temperature & Pressure Indicator
212-070-116-15	Oil Temperature & Pressure Indicator
212-070-116-17	Oil Temperature & Pressure Indicator
212-070-116-19	Oil Temperature & Pressure Indicator
212-070-116-21	Oil Temperature & Pressure Indicator
212-070-116-23	Oil Temperature & Pressure Indicator
212-070-116-25	Oil Temperature & Pressure Indicator
212-070-116-3	Oil Temperature & Pressure Indicator
212-070-116-5	Oil Temperature & Pressure Indicator
212-070-116-7	Oil Temperature & Pressure Indicator
212-070-116-9	Temperature & Pressure Indicator
212-070-122	Airspeed Indicator
212-070-122-001	Airspeed Indicator
212-070-122-003	Airspeed Indicator
212-070-122-005	Airspeed Indicator
212-070-122-009	Airspeed Indicator
212-070-122-011	Airspeed Indicator
212-070-122-013	Airspeed Indicator
212-070-122-015	Airspeed Indicator
212-070-122-017	Airspeed Indicator
212-070-122-019	Airspeed Indicator
212-070-122-021	Airspeed Indicator
212-070-122-1	Airspeed Indicator
212-070-122-1009	Airspeed Indicator
212-070-122-101	Airspeed Indicator
212-070-122-105	Airspeed Indicator
212-070-122-11	Airspeed Indicator
212-070-122-13	Airspeed Indicator
212-070-122-15	Airspeed Indicator
212-070-122-17	Airspeed Indicator
212-070-122-19	Airspeed Indicator
212-070-122-21	Airspeed Indicator
212-070-122-3	Airspeed Indicator
212-070-122-5	Airspeed Indicator

212-070-122-9	Airspeed Indicator
212-070-129-009	Panel
212-070-160-001	Dual Torque Indicator
212-070-160-003	Dual Torque Indicator
212-070-160-005	Dual Torque Indicator
212-070-160-007	Dual Torque Indicator
212-070-160-011	Dual Torque Indicator
212-070-160-015	Dual Torque Indicator
212-070-160-017	Dual Torque Indicator
212-070-160-1	Dual Torque Indicator
212-070-160-101	Dual Torque Indicator
212-070-160-103	Dual Torque Indicator
212-070-160-105	Dual Torque Indicator
212-070-160-107	Dual Torque Indicator
212-070-160-109	Dual Torque Indicator
212-070-160-11	Dual Torque Indicator
212-070-160-111	Dual Torque Indicator
212-070-160-113	Dual Torque Indicator
212-070-160-115	Dual Torque Indicator
212-070-160-117	Dual Torque Indicator
212-070-160-119	Dual Torque Indicator
212-070-160-121	Dual Torque Indicator
212-070-160-123	Dual Torque Indicator
212-070-160-125	Dual Torque Indicator
212-070-160-127	Dual Torque Indicator
212-070-160-129	Dual Torque Indicator
212-070-160-131	Dual Torque Indicator
212-070-160-15	Dual Torque Indicator
212-070-160-17	Dual Torque Indicator
212-070-160-21	Dual Torque Indicator
212-070-160-3	Dual Torque Indicator
212-070-160-5	Dual Torque Indicator
212-070-160-7	Dual Torque Indicator
212-070-176-003	Panel
212-070-176-3	Panel
212-070-180-001	Course Indicator
212-070-180-003	Course Indicator
212-070-180-1	Course Indicator
212-070-180-3	Course Indicator
212-070-182-001	Hydraulic Pressure Indicator
212-070-182-1	Hydraulic Pressure Indicator
212-070-183-003	Panel
212-070-238-001	Altimeter
212-070-238-003	Altimeter
212-070-238-005	Altimeter
212-070-238-007	Altimeter
212-070-238-1	Altimeter
212-070-238-103	Altimeter
212-070-238-3	Altimeter

212-070-238-5	Altimeter
212-070-238-7	Altimeter
212-070-239-001	Vertical Speed Indicator
212-070-239-003	Vertical Speed Indicator
212-070-239-1	Vertical Speed Indicator
212-070-239-101	Vertical Speed Indicator
212-070-239-103	Vertical Speed Indicator
212-070-239-3	Vertical Speed Indicator
212-070-240-001	Temperature Indicator
212-070-240-1	Temperature Indicator
212-070-241-001	Temperature Indicator
212-070-241-1	Temperature Indicator
212-070-242-001	Tachometer Indicator
212-070-242-003	Tachometer Indicator
212-070-242-005	Tachometer Indicator
212-070-242-007	Tachometer Indicator
212-070-242-009	Tachometer Indicator
212-070-242-011	Tachometer Indicator
212-070-242-1	Tachometer Indicator
212-070-242-101	Tachometer Indicator
212-070-242-11	Tachometer Indicator
212-070-242-3	Tachometer Indicator
212-070-242-5	Tachometer Indicator
212-070-242-7	Tachometer Indicator
212-070-242-9	Tachometer Indicator
212-070-444-001	Sensor
212-070-714-001	Attitude Indicator
212-070-714-1	Attitude Indicator
212-073-927-001	Positioning Motor
212-073-927-003	Servo Control
212-073-927-1	Positioning Motor
212-073-927-3	Servo Control
212-075-036-101	Oil Temperature & Pressure Indicator
212-075-036-103	Oil Temperature & Pressure Indicator
212-075-036-105	Oil Temperature & Pressure Indicator
212-075-036-107	Oil Temperature & Pressure Indicator
212-075-036-109	Oil Temperature & Pressure Indicator
212-075-037-101	Tachometer Indicator
212-075-037-103	Tachometer Indicator
212-075-037-105	Tachometer Indicator
212-075-037-107	Tachometer Indicator
212-075-037-109	Tachometer Indicator
212-075-037-111	Tachometer Indicator
212-075-037-113	Tachometer Indicator
212-075-037-115	Tachometer Indicator
212-075-037-117	Tachometer Indicator
212-075-037-119	Tachometer Indicator
212-075-040-101	Panel
212-075-067-101	Inter Turbine Temperature Indicator

212-075-067-103	Inter Turbine Temperature Indicator
212-075-067-105	Inter Turbine Temperature Indicator
212-075-067-107	Inter Turbine Temperature Indicator
212-075-067-109	Inter Turbine Temperature Indicator
212-075-067-111	Inter Turbine Temperature Indicator
212-075-067-113	Inter Turbine Temperature Indicator
212-075-067-115	Inter Turbine Temperature Indicator
212-075-067-117	Inter Turbine Temperature Indicator
212-075-067-119	Inter Turbine Temperature Indicator
212-075-067-121	Inter Turbine Temperature Indicator
212-075-067-123	Inter Turbine Temperature Indicator
212-075-067-125	Inter Turbine Temperature Indicator
212-075-067-127	Inter Turbine Temperature Indicator
212-075-087-123	Inter Turbine Temperature Indicator
212-075-139-001	Landing Light
212-075-139-1	Landing Light
212-075-168-003	Panel
212-075-168-3	Panel
212-075-199-001	Start Relay
212-075-199-1	Start Relay
212-075-216-001	Panel
212-075-216-1	Panel
212-075-222-003	Panel
212-075-222-3	Panel
212-075-237-001	Phase Adapter
212-075-237-1	Phase Adapter
212-075-238-5	Altimeter
212-075-359-001	Panel
212-075-359-1	Panel
212-075-371-001	Hydraulic Control Panel
212-075-371-1	Hydraulic Control Panel
212-075-372-001	Panel
212-075-372-1	Panel
212-075-387-001	Panel
212-075-387-1	Panel
212-075-387-101	Panel
212-075-391-101	Panel
212-075-391-105	Panel
212-075-394-003	Panel
212-075-394-3	Panel
212-075-396-005	Panel
212-075-396-5	Panel
212-075-399-001	Panel
212-075-407-001	Panel
212-075-407-1	Panel
212-075-413-001	Panel
212-075-413-1	Panel
212-075-418-001	Actuator
212-075-418-003	Actuator

212-075-418-1	Actuator
212-075-418-101	Actuator
212-075-418-103	Actuator
212-075-418-105	Actuator
212-075-418-107	Actuator
212-075-418-3	Actuator
212-075-420-001	Inter Turbine Temperature Indicator
212-075-420-003	Inter Turbine Temperature Indicator
212-075-420-1	Inter Turbine Temperature Indicator
212-075-420-3	Inter Turbine Temperature Indicator
212-075-458-001	Panel
212-075-458-1	Panel
212-075-459-001	Panel
212-075-459-1	Panel
212-075-461-001	Panel
212-075-461-1	Panel
212-075-509-003	Panel
212-075-509-3	Panel
212-075-510-003	Panel
212-075-510-3	Panel
212-075-514-001	Clock
212-075-514-1	Clock
212-075-514-101	Clock
212-075-562-001	Inter Turbine Temperature Indicator
212-075-562-003	Inter Turbine Temperature Indicator
212-075-562-3	Inter Turbine Temperature Indicator
212-075-782-001	Relay
212-075-782-1	Relay
212-075-962-001	Light Dimmer
212-075-962-1	Light Dimmer
212-076-008-001	Valve
212-076-015-001	Check Valve
212-076-015-1	Check Valve
212-077-163-001	Compass Control Panel
212-077-163-1	Compass Control Panel
212-077-163-101	Compass Control Panel
212-077-163-103	Compass Control Panel
212-077-165-001	Panel
212-077-165-1	Panel
212-077-167-001	Navigation Control
212-077-169-001	Panel
212-077-169-1	Panel
212-077-200-001	Comm Control Unit
212-077-200-003	Comm Control Unit
212-077-200-1	Control Communication
212-077-200-101	Control Communication
212-077-200-105	Comm Control Unit
212-077-200-3	Comm Control Unit
212-175-278-101	Altimeter

21225-9	Grip Assembly
212-374-003-101	Acclerometer
212-830-018-001	Egt Indicator
212-830-019-001	Dual Torque Indicator
212-830-019-003	Dual Torque Indicator
212-830-019-1	Dual Torque Indicator
212-830-019-3	Dual Torque Indicator
212-899-245-001	Fuel Quantity Indicator
212-899-245-1	Fuel Quantity Indicator
212-899-268-147	Edge Lit Panel
212-899-473-105	Panel
2136-315-80-11	Ammeter Indicator
2136-430-80-11	De-Icing Monitoring Indicator
214-001-346-001	Handgrip
214-001-346-002	Handgrip
214-001-346-003	Handgrip
214-001-346-007	Handgrip
214-001-346-1	Handgrip
214-001-346-101	Handgrip
214-001-346-103	Handgrip
214-001-346-105	Handgrip
214-001-346-2	Handgrip
214-001-346-3	Handgrip
214-001-346-7	Handgrip
214-001-347-001	Actuator
214-001-347-005	Actuator
214-001-347-007	Actuator
214-001-347-1	Actuator
214-001-347-101	Actuator
214-001-347-103	Actuator
214-001-347-105	Actuator
214-001-347-107	Actuator
214-001-347-109	Actuator
214-001-347-5	Rotary Actuator
214-001-347-7	Actuator
214-001-370-101	Servo Motor
214-001-370-103	Servo Motor
214-001-423-109	Actuator
214-001-550-105	Servo Motor
214-001-970-111	Actuator
214-040-805-001	Thermo Switch
214-040-865-101	Fan Performance Monitor
214-060-056-001	Starter
214-060-056-1	Starter
214-060-056-103	Starter
214-060-056-107	Dc Starter
214-060-056-109	Starter
214-066-030-005	Fuel Quantity Indicator
214-066-030-007	Fuel Quantity Indicator

214-066-030-5	Fuel Quantity Indicator
214-066-030-7	Fuel Quantity Indicator
214-066-212-101	Fuel Probe
214-066-212-103	Fuel Probe
214-066-212-105	Fuel Probe
214-066-212-111	Fuel Probe
214-066-213-103	Fuel Signal Conditioner
214-066-226-103	Flow Switch
214-070-567-101	Panel
214-070-567-102	Panel
214-070-568-101	Panel
214-070-568-118	Panel
214-073-902-011	Motor Converter Assembly Lh Windshield Wiper
214-073-902-012	Motor Converter Assembly Rh Windshield Wiper
214-073-912-001	Fan Performance Monitor
214-073-935-101	Actuator
214-074-104-101	Dual Rate Sensor
214-074-108-101	Dual Element Transducer
214-074-149-101	Transducer
214-074-152-101	Airspeed Transducer
214-074-153-101	Transducer - Single Element
214-074-200-105	Chip Indicator
214-074-280-107	Detector Rpm
214-074-300-101	Afcs Annunciator Panel
214-074-300-105	Afcs Annunciator Panel
214-074-305-105	Amplifier
214-075-100-015	Caution Panel
214-075-139-001	Landing Light
214-075-139-1	Landing Light
214-075-150-001	Relay
214-075-150-1	Relay
214-075-186-001	Temperature Controller
214-075-186-1	Temperature Controller
214-075-187-001	Voltage Regulator
214-075-187-003	Voltage Regulator
214-075-187-1	Voltage Regulator
214-075-187-3	Voltage Regulator
214-075-215-001	Temperature Indicator
214-075-219-005	Egt Indicator
214-075-219-5	Egt Indicator
214-075-220-001	Course Indicator
214-075-220-1	Course Indicator
214-075-221-001	Dual Tachometer Indicator
214-075-221-003	Dual Tachometer Indicator
214-075-221-1	Dual Tachometer Indicator
214-075-221-3	Dual Tachometer Indicator
214-075-222-005	Temperature & Pressure Indicator
214-075-222-5	Temperature & Pressure Indicator
214-075-231-005	Course Deviation Indicator

214-075-231-007	Course Deviation Indicator
214-075-231-5	Course Deviation Indicator
214-075-234-003	Power Supply
214-075-234-3	Power Supply
214-075-239-011	Torque Indicator
214-075-239-11	Torque Indicator
214-075-242-001	Tachometer Indicator
214-075-242-003	Tachometer Indicator
214-075-242-005	Tachometer Indicator
214-075-242-1	Tachometer Indicator
214-075-242-3	Tachometer Indicator
214-075-242-5	Tachometer Indicator
214-075-243-003	Attitude Indicator
214-075-243-3	Attitude Indicator
214-075-244-001	Rate Gyro
214-075-244-1	Rate Gyro
214-075-244-101	Rate Gyro
214-075-244-103	Rate Gyro
214-075-252-001	Ammeter
214-075-252-1	Ammeter
214-075-253-001	Fuel Pressure Indicator
214-075-253-1	Fuel Pressure Indicator
214-075-261-001	Egt Indicator
214-075-261-1	Egt Indicator
214-075-261-101	Indicator
214-075-268-101	Attitude Indicator
214-075-268-102	Attitude Indicator
214-075-302-011	Temperature & Pressure Indicator
214-075-302-11	Temperature & Pressure Indicator
214-075-316-001	Standby Compass
214-075-332-003	Fuel Quantity Indicator
214-075-456-001	Anti-Collision Light
214-075-456-003	Anti-Collision Light
214-076-016-001	Pressure Transmitter
214-076-016-1	Fuel Quantity Indicator
214-175-104-101	Static Inverter
214-175-122-105	Master Caution Panel
214-175-122-107	Master Caution Panel
214-175-122-111	Master Caution Panel
214-175-122-113	Master Caution Panel
214-175-122-115	Master Caution Panel
214-175-122-117	Master Caution Panel
214-175-122-119	Master Caution Panel
214-175-122-121	Master Caution Panel
214-175-122-123	Master Caution Panel
214-175-122-125	Master Caution Panel
214-175-122-127	Master Caution Panel
214-175-122-131	Master Caution Panel
214-175-122-133	Master Caution Panel

214-175-126-101	Light
214-175-126-103	Anti-Collision Light
214-175-127-103	Power Supply
214-175-140-101	Rechargeable Battery Power Supply
214-175-140-103	Rechargeable Battery Power Supply
214-175-143-101	Nav/Afcs Panel
214-175-144-101	Relay
214-175-145-103	Annunciator Panel
214-175-150-105	Dc Generator
214-175-150-107	Generator
214-175-153-103	Voltage Regulator
214-175-153-105	Voltage Regulator
214-175-153-107	Voltage Regulator
214-175-155-103	Relay
214-175-167-103	Master Caution Panel
214-175-173-101	Temperature Control Panel
214-175-241-101	Displacement Gyro
214-175-248-103	Gas Temperature Indicator
214-175-248-105	Gas Temperature Indicator
214-175-248-107	Gas Temperature Indicator
214-175-248-109	Gas Temperature Indicator
214-175-248-111	Gas Temperature Indicator
214-175-249-101	Turbine Outlet Temperature Indicator
214-175-249-103	Gas Producer Tachometer Indicator
214-175-249-105	Gas Producer Tachometer Indicator
214-175-249-107	Gas Producer Tachometer Indicator
214-175-249-109	Gas Producer Tachometer Indicator
214-175-250-101	Dual Torque Indicator
214-175-250-103	Dual Torque Indicator
214-175-250-105	Dual Torque Indicator
214-175-251-101	Triple Tachometer Indicator
214-175-251-103	Triple Tachometer Indicator
214-175-251-105	Triple Tachometer Indicator
214-175-251-107	Triple Tachometer Indicator
214-175-251-109	Triple Tachometer Indicator
214-175-251-111	Triple Tachometer Indicator
214-175-251-111FM	Triple Tachometer Indicator
214-175-252-101	Hydraulic Temperature & Pressure Indicator
214-175-253-103	Hydraulic Temperature & Pressure Indicator
214-175-253-105	Hydraulic Temperature & Pressure Indicator
214-175-254-101	Dual Ammeter
214-175-254-103	Dual Ammeter
214-175-254-105	Dual Ammeter
214-175-254-107	Dual Ammeter
214-175-255-101	Hydraulic Temperature & Pressure Indicator
214-175-255-103	Hydraulic Temperature & Pressure Indicator
214-175-256-101	Hydraulic Temperature & Pressure Indicator
214-175-256-103	Gearbox Oil Temperature & Pressure Indicator
214-175-256-105	Hydraulic Temperature & Pressure Indicator

214-175-257-101	Fuel Quantity Indicator
214-175-257-103	Fuel Quantity Indicator
214-175-257-105	Fuel Quantity Indicator
214-175-257-107	Fuel Quantity Indicator
214-175-257-109	Fuel Quantity Indicator
214-175-258-101	Voltmeter
214-175-258-103	Voltmeter
214-175-258-105	Dc Voltmeter
214-175-258-107	Voltmeter
214-175-259-101	Elevator Position Indicator
214-175-259-103	Elevator Position Indicator
214-175-271-103	Airspeed Indicator
214-175-271-105	Airspeed Indicator
214-175-271-107	Airspeed Indicator
214-175-276-101	Panel
214-175-278-101	Altimeter
214-175-278-103	Altimeter
214-175-299-101	Airspeed Indicator
214-175-299-103	Airspeed Indicator
214-175-299-105	Airspeed Indicator
214-175-299-107	Airspeed Indicator
214-175-299-107 FM	Airspeed Indicator
214-175-352-101	Panel
214-175-382-101	Panel
214-175-384-103	Engine Govonor Panel
214-175-384-105	Panel
214-175-393-101	Panel Assy, anti-ice
214-175-421-101	Air Data Computer
214-375-214-103	Mgt Indicator
2-1443-1	SINGLE DISK BRAKE ASSEMBLY
214-899-811-101	Panel
21562/475-1	Voltage Regulator
2159P	Rate Gyro
217-00141	Pressure Indicator
217-00242	Pressure Indicator
217-01111	Pressure Indicator
217-01141	Pressure Indicator
217-01161	Pressure Indicator
217-02111	Pressure Indicator
217-03221	Pressure Indicator
217-08151	Pressure Indicator
217-09261	Pressure Indicator
217-100A	Pressure Indicator
217-21242	Pressure Indicator
217A100	Pressure Indicator
217A100A	Pressure Indicator
217A-100A	Pressure Indicator
218-008-001	Liquid Quantity Indicator
218-008-002	Liquid Quantity Indicator

21885-4	Grip Assembly
2200-3	Engine Power Warning Unit
22-111-02	Torque Indicator
22-166-04A	Instrument Cluster
22-166-09	Instrument Cluster
22-169-018LBW5	Instrument Cluster
22-169-024	Instrument Cluster
22-169-024-1	Instrument Cluster
22-169-024-2	Instrument Cluster
22-169-024-3	Instrument Cluster
22-169-024-4	Instrument Cluster
22-169-024-5	Instrument Cluster
22-169-024-6	Instrument Cluster
22-169-024-7	Instrument Cluster
22-169-024-8	Instrument Cluster
22-169-024-9	Instrument Cluster
22-169-09-1L	Instrument Cluster
22-169-09-2L	Instrument Cluster
22-169-09-3L	Instrument Cluster
22-169-09L	Instrument Cluster
222-005-030-101	Rpm Limit Detector
222-005-030-103	Rpm Sensor
222-005-030-107	Rpm Limit Detector
222-005-030-111	Rpm Limit Detector
22201T011400	Cabin Pressure Controller
22-202-01A	Vertical Speed Indicator
22-202-01D	Vertical Speed Indicator
222-075-139-101	Landing Gear Control Panel
222-075-139-103	Landing Gear Control Panel
222-075-139-105	Landing Gear Control Panel
222-075-139-109	Landing Gear Control Panel
222-075-139-111	Landing Gear Control Panel
222-078-003	Tachometer Indicator
222-305-003-101	Flight Director Mode Selector
222-305-005-101	Altitude Sensor
222-305-006-101	Airspeed Sensor
222-365-509-101	Oil Monitor
222-366-615-101	Motor Driven Valve
222-366-680-103	Motor Driven Valve
222-366-680-105	Motor Driven Valve
222-366-680-107	Motor Driven Valve
222-366-684-103	Probe, Lower
222-366-685-101	Fuel Signal Conditioner
222-370-086-101	Panel
222-375-007-101	Fire Control Panel
222-375-010-003	Annunciator Panel
222-375-010-043	Annunciator Panel
222-375-010-103	Annunciator Panel
222-375-010-105	Annunciator Panel

222-375-010-107	Annunciator Panel
222-375-010-115	Annunciator Panel
222-375-010-117	Annunciator Panel
222-375-010-119	Annunciator Panel
222-375-010-131	Annunciator Panel
222-375-010-139	Annunciator Panel
222-375-010-151FM	Annunciator Panel
222-375-010-153	Annunciator Panel
222-375-010-153FM	Annunciator Panel
222-375-010-163	Light Assembly
222-375-010-165	Light Assembly
222-375-012-101	Light Dimmer
222-375-016-101	Oil Temperature & Pressure Indicator
222-375-017-101	Oil Temperature & Pressure Indicator
222-375-018-101	Oil Temperature & Pressure Indicator
222-375-018-103	Oil Temperature & Pressure Indicator
222-375-018-105	Oil Temperature & Pressure Indicator
222-375-018-109	Oil Temperature & Pressure Indicator
222-375-019-005	Oil Pressure Transmitter
222-375-019-009	Pressure Transducer
222-375-019-013	Pressure Transmitter
222-375-019-105	Pressure Transmitter
222-375-020-003	Tachometer Indicator
222-375-020-005	Tachometer Indicator
222-375-020-103	Triple Torque Indicator
222-375-020-105	Triple Torque Indicator
222-375-020-3	Tachometer Indicator
222-375-020-5	Tachometer Indicator
222-375-021-101	Triple Tachometer Indicator
222-375-021-103	Triple Tachometer Indicator
222-375-021-105	Triple Tachometer Indicator
222-375-021-109	Triple Tachometer Indicator
222-375-021-111	Triple Tachometer Indicator
222-375-021-113	Triple Tachometer Indicator
222-375-022-101	Gas Producer Tachometer Indicator
222-375-022-103	Gas Producer Tachometer Indicator
222-375-022-105	Gas Producer Tachometer Indicator
222-375-022-109	Gas Producer Tachometer Indicator
222-375-022-111	Gas Producer Tachometer Indicator
222-375-023-101	Mgt Indicator
222-375-023-103	Mgt Indicator
222-375-023-105	Mgt Indicator
222-375-023-107	Mgt Indicator
222-375-023-111	Mgt Indicator
222-375-024-101	Dual Fuel Quantity Indicator
222-375-025-101	Dual Ammeter
222-375-025-103	Dual Ammeter
222-375-025-105	Dual Ammeter
222-375-025-107	Dual Ammeter

222-375-025-109	Dual Ammeter
222-375-025-111	Dual Ammeter
222-375-027-101	Airspeed Indicator
222-375-027-105	Airspeed Indicator
222-375-027-107	Airspeed Indicator
222-375-027-109	Airspeed Indicator
222-375-027-111	Airspeed Indicator
222-375-027-113	Airspeed Indicator
222-375-027-115	Airspeed Indicator
222-375-027-117	Airspeed Indicator
222-375-027-119	Airspeed Indicator
222-375-028-101	Turn & Bank Indicator
222-375-030-001	Vertical Speed Indicator
222-375-030-1	Vertical Speed Indicator
222-375-033-101	Attitude Gyro
222-375-033-103	Attitude Gyro
222-375-033-107	Attitude Gyro
222-375-034-101	Directional Gyro
222-375-038-101	Fuel Flow Indicator
222-375-041-001	Horizontal Situation Indicator
222-375-041-1	Horizontal Situation Indicator
222-375-048-105	Panel
222-375-060-103	Dc Generator Control Unit
222-375-060-105	Dc Generator Control Unit
222-375-060-109	Voltage Regulator
222-375-060-111	Voltage Regulator
222-375-060-113	Voltage Regulator
222-375-060-115	Voltage Regulator
222-375-060-119	Voltage Regulator
222-375-064-101	Fuel Quantity Indicator
222-375-064-103	Fuel Quantity Indicator
222-375-064-105	Fuel Quantity Indicator
222-375-064-107	Fuel Quantity Indicator
222-375-067-101	Rpm Limit Detector
222-375-071-101	Triple Torque Indicator
222-375-071-103	Triple Torque Indicator
222-375-071-105	Triple Torque Indicator
222-375-071-107	Triple Torque Indicator
222-375-071-109	Triple Torque Indicator
222-375-072-101	Turn & Slip Indicator
222-375-072-105	Turn & Slip Indicator
222-375-074-101	Panel
222-375-077-011	Oil Pressure Transmitter
222-375-077-103	Pressure Transmitter
222-375-077-105	Pressure Transmitter
222-375-077-107	Engine Oil Transmitter
222-375-077-109	Pressure Transmitter
222-375-077-11	Oil Pressure Transmitter
222-375-077-111	Pressure Transducer

222-375-077-113	Pressure Transmitter
222-375-077-115	Pressure Transmitter
222-375-077-117	Oil Pressure Transmitter
222-375-077-119	Pressure Switch
222-375-077-125	Transmitter
222-375-115-101	Panel
222-375-562-001	Attitude Director Indicator
222-375-562-101	Attitude Director Indicator
22-279	Tachometer Indicator
22-279-010-1A	Tachometer Indicator
22-279-010A	Tachometer Indicator
22-279-02	Tachometer Indicator
22-279-02A	N1 Gas Producer Indicator
22-279-02B	N1 Gas Producer Indicator
22-279-02C	N1 Gas Producer Indicator
22-279-03-1A	Tachometer Indicator
22-279-03-2	Tachometer Indicator
22-279-03-3	Tachometer Indicator
22-279-03A	Tachometer Indicator
22-279-05-1A	Tachometer Indicator
22-279-05-2A	Tachometer Indicator
22-279-05-3A	Tachometer Indicator
22-279-05A	Tachometer Indicator
22-279-06	Tachometer Indicator
22-280	Tachometer Indicator
22-281	Tachometer Indicator
22-281-023	Prop R.P.M. Indicator
22-284	Dual Tachometer Indicator
22-285	Dual Tachometer Indicator
22-285-01	Dual Tachometer Indicator
22-285-01-1A	Dual Tachometer Indicator
22-285-03	Dual Tachometer Indicator
22-285-03-1	Dual Tachometer Indicator
22-285-03-2	Dual Tachometer Indicator
22-285-04	Dual Tachometer Indicator
22-297-05	Fuel Quantity Indicator
22-304-04	Turbine Outlet Temperature Indicator
22-304-4	Turbine Outlet Temperature Indicator
22322SET12	Clock
22-373-01-1A	Altimeter
22-374B01	Altimeter
22-374B-01	Altimeter
22-374-B01-2	Altimeter
22-375-012-103	Power Supply
2260-1001-1	Rpm Limit Detector
22-694-()	Airspeed Indicator
22-695-()	Airspeed Indicator
22-696-()	Airspeed Indicator
22-697-()	Airspeed Indicator

22-697-05-1	Airspeed Indicator
22-697-06-1	Airspeed Indicator
22702-032	Encoding Altimeter
22702-501	Encoding Altimeter
22702-502	Encoding Altimeter
22702-503	Encoding Altimeter
22702-511	Encoding Altimeter
22702-513	Encoding Altimeter
22702-531	Encoding Altimeter
22702-532	Encoding Altimeter
22702-533	Encoding Altimeter
22702-541	Encoding Altimeter
22702-542	Encoding Altimeter
22702-543	Encoding Altimeter
22722-004	Altitude Alerter
22921-1	Grip Assembly
22982 M2	Wiper Motor
22A524	Tach Generator
22A554	Tach Generator
22A571	Tach Generator
22A580	Tach Generator
22A6000	Tach Generator
22A623	Tach Generator
22A623A	Tach Generator
22A649	Tach Generator
22A656	Tach Generator
22A658	Tach Generator
22A703	Tach Generator
22A731	Tach Generator
22A738	Tach Generator
22A769	Tach Generator
230-360-701-101	Actuator
230-360-701-103	Actuator
230-375-010-103	Panel
230-375-011-103	Panel
2306-556-00-10	Fuel Quantity Indicator
2306-557-00-10	Fuel Quantity Indicator
2306-559-20-10	Fuel Quantity Indicator
2306-559-20-11	Fuel Quantity Indicator
2306-560-20-10	Fuel Quantity Indicator
2306-560-20-11	Fuel Quantity Indicator
2306-561-20-11	Fuel Quantity Indicator
2306-562-20-10	Fuel Quantity Indicator
2306-562-20-11	Fuel Quantity Indicator
2309-155-00-10	Voltmeter
2309-158-20-10	Voltmeter
2309-255-00-10	Voltmeter
2309-256-20-10	Voltmeter
2309-355-00-11	Ammeter

2309-355-00-20	Ammeter
2309-357-00-11	Ammeter
2309-359-20-10	Ammeter
2309-361-20-10	Ammeter
2309-362-00-10	Ammeter
2310-130-00-12	Voltmeter
2310-230-00-12	Ammeter
23-1205-2A	Inverter
2312M-30-26	Actuator
2313M-20-2	Wiper Motor
23-324-01	Turn & Bank Indicator
23-324-02	Turn & Bank Indicator
23-324-03	Turn & Bank Indicator
23-325	Turn & Bank Indicator
23-328-04	Turn & Bank Indicator
23-330-01	Turn & Bank Indicator
23-330-02	Turn & Bank Indicator
23-330-03	Turn & Bank Indicator
23-330-04	Turn & Bank Indicator
23-330B-01	Turn & Bank Indicator
23-330B-02	Turn & Bank Indicator
23-330B-03	Turn & Bank Indicator
23-330B-04	Turn & Bank Indicator
23-374B-01	Altimeter
23-400-61-2	Directional Gyro
23-401-02-5	Directional Gyro
23-424-01	Turn & Bank Indicator
23-424-04	Turn & Bank Indicator
23-424-07A	Turn & Bank Indicator
23-424-15A	Turn & Bank Indicator
23-424-16A	Turn & Bank Indicator
23-477	Turn & Bank Indicator
23-477-001ANM	Turn & Bank Indicator
23-477-010	Turn & Bank Indicator
23-477-07	Turn & Bank Indicator
23-477-07A	Turn & Bank Indicator
23-477-08	Turn & Bank Indicator
234ES016-1	Handgrip
235-005	Voltmeter
2390-2	Rpm Limiit Detector
2393-111-1	Voltmeter
23932-981	Encoding Altimeter
2396-021-0	Fuel Quantity Indicator
2396-100	Voltmeter
2396-116-1	Voltmeter
2396-200	Voltmeter
2396-300	Ammeter
2396-400	Ammeter
242005-104	Compass Control Annunciator

242005-108	Galvanometer
24929-002	Encoding Altimeter
24929-412	Altimeter, Encoding
24929-951	Encoding Altimeter
24929-J2002	Encoding Altimeter
25005-001	Encoding Altimeter
25005-002	Encoding Altimeter
25005-011	Encoding Altimeter
25005-012	Encoding Altimeter
25005-021	Encoding Altimeter
25005-022	Encoding Altimeter
25005-031	Encoding Altimeter
25005-032	Encoding Altimeter
25005-041	Encoding Altimeter
25005-042	Encoding Altimeter
25005-051	Encoding Altimeter
25005-052	Encoding Altimeter
25005-101	Encoding Altimeter
25005-102	Encoding Altimeter
25005-111	Encoding Altimeter
25005-112	Encoding Altimeter
25005-121	Encoding Altimeter
25005-122	Encoding Altimeter
25005-201	Encoding Altimeter
25005-202	Encoding Altimeter
25005-211	Encoding Altimeter
25005-212	Encoding Altimeter
25005-221	Encoding Altimeter
25005-222	Encoding Altimeter
25005-301	Encoding Altimeter
25005-302	Encoding Altimeter
25005-311	Encoding Altimeter
25005-312	Encoding Altimeter
25005-321	Encoding Altimeter
25005-322	Encoding Altimeter
25005-501	Encoding Altimeter
25005-502	Encoding Altimeter
25020-0155	Airspeed Indicator
25020-0156	Airspeed Indicator
25020-1162	Airspeed Indicator
25020-2130	Airspeed Indicator
2502-1004	Fuel Probe
2502-1005	Fuel Probe
2502-2003	Fuel Probe
2502-2102	Airspeed Indicator
2502-3002	Fuel Probe
2502-7001	Fuel Quantity Transmitter
2503148-2	Annunciator
250F17-2	Fuel Flow Switch

25100A15A1B1	Pressure Indicator
25100A15A1B2	Pressure Indicator
2511-1	Voltmeter
2512-15-1	Voltmeter
25122-A10B-1-A1	Oil Pressure Indicator
25122A121C-2-B3	Torque Pressure Indicator
25122-A15A-1-A2	Synchro Indicator
25122-A15H-2-A2	Pressure Indicator
25122-A17F-2-A3	Synchro Indicator
25122-A1A-1-A2	Fuel Pressure Indicator
25122-A23F-2-A2	Synchro Indicator
25122-A27C-1-A1	Synchro Indicator
25122-A27E-2-A3	Synchro Indicator
25122-A29B-2-A2	Synchro Indicator
25122-A2C-1-A1	Synchro Indicator
25122-A2J-1-A2	Torque Pressure Indicator
25122-A30D-1-A2	Fuel Pressure Indicator
25122-A30E-1-A1	Synchro Indicator
25122-A37A-1-A1	Synchro Indicator
25122-A37B-1-A1	Synchro Indicator
25122-A37C-1-A1	Fuel Pressure Indicator
25122-A37M-2-A2	Synchro Indicator
25122-A37R-2-A2	Synchro Indicator
25122-A40A-1-A3	Oil Pressure Indicator
25122-A56A-1-A2	Pressure Indicator
25122-A73A-2-A1	Pressure Indicator
25122-B16A-1-A1	Synchro Indicator
25122-B16E-1-A2	Fuel Flow Indicator
25122-B22C-1-A1	Fuel Flow Indicator
25122-B25A-2-A2	Synchro Indicator
25122-B25B-2-A2	Synchro Indicator
25122-B3B-2-A2	Fuel Flow Indicator
25122-B3C-4-A2	Synchro Indicator
25122-B4A-1-A1	Fuel Flow Indicator
25122-B54A-2-A2	Fuel Flow Indicator
25122-B57A-1-A2	Synchro Indicator
25122-B5D-2-A2	Synchro Indicator
25122-B7A-1-A1	Fuel Flow Indicator
25122-C11A-1-A2	Rpm Indicator
25122-C72A-17-A3	Synchro Indicator
25122-C73A-18-A3	Fuel Quantity Indicator
25140/22A703	Tach Generator
25140/65A173	Linear Actuator
25140/65A192	Actuator
25140/65A237	Linear Actuator
25140-22A649	Tach Generator
25140-22A658	Tach Generator
25140-22A690	Tach Generator
25200A15A1-1A1	Pressure Indicator

25200A15B1-1A1	Pressure Indicator
25201A15B1-1A1	Pressure Indicator
25201A15B2-1A1	Pressure Indicator
25201A15B4-1A1	Pressure Indicator
25201A15B4-1C2	Pressure Indicator
25201A15C7-2B2	Pressure Indicator
25514-B25-3-A3	Fuel Flow Indicator
2562-633-03-12	Volt/Ammeter
2562-634-03-12	Volt/Ammeter
2562-635-03-10	Volt/Ammeter
2562-636-03-10	Volt/Ammeter
2562-638-00-10	Volt/Ammeter
2562-639-00-10	Volt/Ammeter
2579-116-1	Voltmeter
25850-213	Airspeed Indicator
2586333-1	Directional Gyro
2586333-2	Directional Gyro
2586333-3	Directional Gyro
2587193-1	Directional Gyro
2587193-143	Directional Gyro
2587193-2	Directional Gyro
2587193-23	Directional Gyro
2587193-3	Directional Gyro
2587193-33	Directional Gyro
2587193-4	Directional Gyro
2587193-41	Directional Gyro
2587193-42	Directional Gyro
2587193-43	Directional Gyro
2587193-44	Directional Gyro
2587193-45	Directional Gyro
2587193-46	Directional Gyro
2587193-47	Directional Gyro
2587193-5	Directional Gyro
2587193-6	Directional Gyro
2587317-355	Gyrosyn Compass Indicator
2587317-653	Gyrosyn Compass Indicator
2587317-655	Gyrosyn Compass Indicator
2587317-656	Gyrosyn Compass Indicator
2587317-657	Gyrosyn Compass Indicator
2587317-658	Gyrosyn Compass Indicator
2587451-2	Directional Gyro
2587451-3	Displacement Gyro
2587493-7	Directional Gyro
2588282-653	Gyrosyn Compass Indicator
2588282-655	Gyrosyn Compass Indicator
2588282-656	Gyrosyn Compass Indicator
2588282-657	Gyrosyn Compass Indicator
2588302-1	Directional Gyro
2591411-144	Attitude Director Indicator

2591411-244	Attitude Director Indicator
2591411-245	Attitude Director Indicator
2591411-264	Attitude Director Indicator
2591411-265	Attitude Director Indicator
2591411-444	Attitude Director Indicator
2591411-902	Attitude Director Indicator
2591411-903	Attitude Director Indicator
2591411-904	Attitude Director Indicator
2591411-906	Attitude Director Indicator
2591411-907	Attitude Director Indicator
2591411-908	Attitude Director Indicator
2591411-909	Attitude Director Indicator
2591411-910	Attitude Director Indicator
2593379-001	Dual Remote Compensator
2593379-1	Dual Remote Compensator
2593379-2	Dual Remote Compensator
2593691-901	Vertical Gyro
2593996-333	Tarsyn Three-Axis Reference Sensor
2593996-444	Tarsyn Three-Axis Reference Sensor
2593996-555	Tarsyn Three-Axis Reference Sensor
260-2350	Triple Tachometer Indicator
260-2350-1	Triple Tachometer Indicator
260-2357-5	Dual Torque Indicator
26055-204-060-006	Turbine Inlet Temperature Indicator
2606011-2	Torque Indicator
2606011-3	Torque Indicator
2606013-1	Percent Rpm Indicator
2606014-1	Prop Rpm Indicator
2606015-2	Oil Temp/Pressure Indicator
2606015-3	Oil Temp/Pressure Indicator
261-10015	Fuel Quantity Indicator
261-10021	Fuel Quantity Indicator
2612-0001	Engine Oil Temp Module
2612-1001	Engine Oil Temp Module
2612-2001	Oil Temperature Indicator
2612-2003	Engine Oil Temp Module
2612-4001	Engine Oil Temp Module
2612-4003	Engine Oil Temp Module
2612-5001	Engine Oil Temp Module
2612-5003	Engine Oil Temp Module
261-926-001	Oil Temperature & Pressure Indicator
2660-1655-52	Blower Assembly
26-66007-1	Prop R.P.M. Indicator
26-66304-1	T.I.T. Indicator
26-66305-1	Engine Gage Indicator
26-66306-1	Tachometer Indicator
26-66307-1	Torque Indicator
26-66309-1	Outside Air Temperature Indicator
26-66311-1	Fuel Flow Indicator

267-935-001	Fuel Quantity Indicator
267-960-001	Rpm Indicator
267-961-001	Torque Indicator
267-962-001	Rpm Indicator
267-978-001	Fuel Flow Indicator
2680003-2	Mach Airspeed Indicator
26-82207-1	Fuel Quantity Indicator
26-84049-1	Cabin Rate Of Climb Indicator
26-84051-3	Differential Pressure Indicator
26-86019-1	Suction Indicator
26-86024-1	Turn & Bank Indicator
26-87007-1	De-Ice Pressure Indicator
27-001-1	True Airspeed Indicator
27-001-2	True Airspeed Indicator
27-001-3	True Airspeed Indicator
271-001-001	Fuel switch
271-001-002	Fuel Switch
27-16138-1	Altimeter
27-19076-1	Flap Position Indicator
27-19116-3	Dc Ammeter
27-19116-5	Dc Ammeter
27-19117-1	Voltmeter
27-19118-11	Tri-Meter
27-19118-5	Tri-Meter
27-19118-7	Tri-Meter
27-19118-9	Tri-Meter
27-19119-3	Flap Position Indicator
27-19121-3	Hydraulic Pressure Gauge
27-19123-5	Oxygen Pressure Indicator
27-19123-7	Oxygen Pressure Indicator
27-19124-3	De-Ice Pressure Gauge
27-19126-1	Outside Air Temperature Indicator
27-19132-1	Cabin Altitude Indicator
27-19133-1	Pitch Trim Indicator
27-19133-5	Pitch Trim Indicator
27-19134-1	Turn & Bank Indicator
27-19135-1	Aircraft Clock
27-19136-1	Cabin Rate Of Climb Indicator
27-19137-1	Airspeed Indicator
27-19137-23	Airspeed Indicator
27-19137-27	Airspeed Indicator
27-19137-29	Airspeed Indicator
27-19137-31	Airspeed Indicator
27-19138-1	Altimeter
27-19138-3	Altimeter
27-19139-1	Vertical Speed Indicator
27-19144-5	Awj Qty Indicator
27-19145-3	Temperature Indicator
27-19149-3	E.G.T. Indicator

27-19157-1	Percent Tachometer Indicator
27-19157-3	Percent Tachometer Indicator
27-19158-5	Torque Indicator
27-19158-7	Torque Indicator
27-19160-1	Oil Temperature & Pressure Indicator
27-19161-1	Fuel Pressure Indicator
27-19163-1	Fuel Flow Indicator
27-19163-3	Fuel Flow Indicator
27-19167-1	Turn & Bank Indicator
27-19171-1	Angle Of Attack Indicator
27-19177-1	Fuel Pressure Indicator
27-19178-1	Oil Temperature & Pressure Indicator
27-19193-1	Max Allowable Airspeed Indicator
27-19193-23	Max Allowable Airspeed Indicator
27-19193-27	Max Allowable Airspeed Indicator
27-19193-5	Max Allowable Airspeed Indicator
27-19193-9	Max Allowable Airspeed Indicator
27500-224	Altimeter
27-66004-11	Inter Turbine Temperature Indicator
27-66004-13	Inter Turbine Temperature Indicator
27-66004-17	Inter Turbine Temperature Indicator
27-66004-19	Inter Turbine Temperature Indicator
27-66004-7	Inter Turbine Temperature Indicator
27-66004-9	Inter Turbine Temperature Indicator
27-66008-5	Oil Temperature Indicator
27-66101-5	Torque Indicator
27-66101-9	Torque Indicator
27-82168-7	Pitch Trim Warning
27-86022-15	Airspeed Indicator
2794-901-00-11	Power Generation Display Panel
2800-6845N1L	Turn & Slip Indicator
28007-017	Altimeter
28007-201	Altimeter
28007-202	Altimeter
28007-203	Altimeter
28007-204	Altimeter
28007-205	Altimeter
28007-206	Altimeter
28007-207	Altimeter
28007-208	Altimeter
28007-209	Altimeter
28007-210	Altimeter
28007-211	Altimeter
28007-212	Altimeter
28007-214	Altimeter
28007-216	Altimeter
28007-218	Altimeter
28007-221	Altimeter
28007-224	Altimeter

28007-227	Altimeter
28007-228	Altimeter
28007-232	Altimeter
28007-427	Altimeter
28007-429	Altimeter
28007-431	Altimeter
28007-433	Altimeter
28007-923	Altimeter
2800-7970	Turn & Slip Indicator
2800N12	Turn & Slip Indicator
284042-0001	Valve
284356-0001	Valve
2850-0017	Rpm Limiit Detector
2850-0019	Rpm Limiit Detector
28702-502	Encoding Altimeter
28702-552	Encoding Altimeter
28704-E2101	Encoding Altimeter
28704-F2101	Encoding Altimeter
28847-0	Airspeed Indicator
28847-1	Airspeed Indicator
28P61D2A	Turn & Slip Indicator
28W2D25P	Turn & Slip Indicator
29020-412	Altimeter
2915-01-137-5709	Liquid Level Transmitter
29287-002	Pressure Transmitter
29B216-1	Dual Temperature Indicator
29B217-2	Dual Temperature Indicator
29B218	Dual Temperature Indicator
29B218-1	Dual Temperature Indicator
29C4843	Voltage Regulator
29H2000	Temperature Indicator
2A1000-1AL	Static Inverter
2A1000-1G	Static Inverter
2A1000-1G-100	Static Inverter
2A1000-1G-RR-1657	Static Inverter
2A1000-AL	Static Inverter
2A125-1A	Static Inverter
2A125-1B-1	Static Inverter
2A125-1C	Static Inverter
2A250-1A	Static Inverter
2A250-1B-1	Static Inverter
2A250-1C-1	Static Inverter
2A350-1A	Static Inverter
2A350-1AS-1830	Static Inverter
2A350-1B-1	Static Inverter
2A350-1B-1-RR-1658	Static Inverter
2A50-1A	Static Inverter
2A800-1G	Static Inverter
2A800-1G-RR-1657	Static Inverter

2CM15AAB1	Tach Generator
2CM272B1	Starter
2CM73J2	Dc Starter
2CM9AAA6	Tach Generator
2CM9AAC6	Tach Generator
2CM9AAH4	Tach Generator
2CM9AAV6	Tach Generator
2CM9AAZ6	Tach Generator
2CM9ABE6	Tach Generator
2CM9ABH7	Tach Generator
2CM9ABK7	Tach Generator
2CM9ABY7	Tach Generator
2CM9ABZ7	Tach Generator
2CM9ACE7	Tach Generator
2CM9ACF8	Tach Generator
2CM9ACH7	Tach Generator
2CM9ADB9	Tach Generator
2CM9ADE8	Tach Generator
2CM9ADT6	Tach Generator
2D1200-2A-1033	Static Inverter
2D54050B700	Altimeter
2N3904	Npn Transmitter
2ZZ122M	Master Alarm And Indication Panel
30005-0000-18	TORQUE SIGNAL CONDITIONER
30005-0000-19	TORQUE SIGNAL CONDITIONER
30005-0000-20	TORQUE SIGNAL CONDITIONER
30005-0000-24	TORQUE SIGNAL CONDITIONER
30005-0000-25	TORQUE SIGNAL CONDITIONER
30005-0000-26	TORQUE SIGNAL CONDITIONER
30005-0000-34	Torque Signal Conditioner
30005-0000-35	TORQUE SIGNAL CONDITIONER
30005-0000-36	TORQUE SIGNAL CONDITIONER
30005-0000-37	TORQUE SIGNAL CONDITIONER
30005-0000-38	TORQUE SIGNAL CONDITIONER
30005-0000-39	TORQUE SIGNAL CONDITIONER
30005-0000-40	TORQUE SIGNAL CONDITIONER
30005-0000-41	TORQUE SIGNAL CONDITIONER
30005-0000-42	TORQUE SIGNAL CONDITIONER
30005-0000-43	TORQUE SIGNAL CONDITIONER
30005-0000-44	TORQUE SIGNAL CONDITIONER
30005-0000-45	TORQUE SIGNAL CONDITIONER
30005-0000-46	Signal Conditioner
30005-0000-47	TORQUE SIGNAL CONDITIONER
30005-0000-48	TORQUE SIGNAL CONDITIONER
30005-0000-49	TORQUE SIGNAL CONDITIONER
30005-0000-50	TORQUE SIGNAL CONDITIONER
30005-0000-51	TORQUE SIGNAL CONDITIONER
30005-0000-52	TORQUE SIGNAL CONDITIONER
30005-0000-53	TORQUE SIGNAL CONDITIONER

30005-0000-54	TORQUE SIGNAL CONDITIONER
30005-0000-55	TORQUE SIGNAL CONDITIONER
30005-0000-56	TORQUE SIGNAL CONDITIONER
30005-0000-57	TORQUE SIGNAL CONDITIONER
3001-01-111-2	Accelerometer
30012-0000-02	Fuel Qty Signal Conditioner
30012-0000-03	Fuel Qty Signal Conditioner
30012-0000-04	Fuel Qty Signal Conditioner
300-14L	Attitude Gyro
30-0504-1	Strobe Light
30-0504-11	Strobe Light
30-0504-13	Strobe Light
30-0504-15	Strobe Light
30-0504-17	Strobe Light
30-0504-19	Strobe Light
30-0504-21	Strobe Light
30-0504-23	Strobe Light
30-0504-25	Strobe Light
30-0504-27	Strobe Light
30-0504-29	Strobe Light
30-0504-3	Strobe Light
30-0504-31	Strobe Light
30-0504-33	Strobe Light
30-0504-35	Strobe Light
30-0504-39	Anti-Collision Light
30-0504-41	Strobe Light
30-0504-7	Strobe Light
30-0504-9	Strobe Light
30-0516-1	Strobe Light
30076-007	Dc Generator
30-0849-17	Strobe Light
30-0863-3	Wing Position Light
30-0863-4	Wing Position Light
301-001-019-001	Handgrip
30-1098-1	Anti-Collision Light
30-1098-3	Anti-Collision Light
30-1099-1	Anti-Collision Light
30-1099-1M	Anti-Collision Light
30-1099-3	Anti-Collision Light
30-1099-5	Anti-Collision Light
30-1099-7	Anti-Collision Light
30-1314-3	Anti-Collision Light
30-1314-5	Anti-Collision Light
30-1638-1	Anti-Collision Light
30-1712-1	Anti-Collision Strobe Light
30-1712-2	Anti-Collision Strobe Light
30-1712-4	Anti-Collision Strobe Light
30-1712-5	Anti-Collision Strobe Light
30-208A	BRAKE ASSEMBLY

30-2272-1	Navigation Light
30-2272-2	Navigation Light
30230-0160	Vertical Speed Indicator
30230-1165	Vertical Speed Indicator
30230-1174	Vertical Speed Indicator
30230-1180	Vertical Speed Indicator
30230-81110	Vertical Speed Indicator
30-231	Smoke Detector
30-231-31	Smoke Detector
30-231-9	Smoke Detector
30-231R-17	Smoke Detector
30260-0122	Vertical Speed Indicator
30260-1117	Vertical Speed Indicator
30260-1166	Vertical Speed Indicator
30260-3126	Vertical Speed Indicator
303-006-002	Dual Torque Indicator
303-006-003	Dual Torque Indicator
303-006-006	Dual Torque Indicator
303-006-303	Dual Torque Indicator
30-326 ET-1	Control Amplifier
303560-113MSN	Turn Coordinator
303770-113MSN	Turn Coordinator
303950-113MSN	Turn Coordinator
305-1A	Gyro Horizon
305-1AL	Gyro Horizon
305-1B	Gyro Horizon
305-1BL	Gyro Horizon
305-1C	Gyro Horizon
305-1CL	Gyro Horizon
305-2A	Gyro Horizon
305-2AL	Gyro Horizon
305-2B	Gyro Horizon
305-2BC	Gyro Horizon
305-2BL	Gyro Horizon
305-2BLS	Gyro Horizon
305-2C	Gyro Horizon
305-2CL	Gyro Horizon
3057-147	Torque Indicator
3057-148	Torque Indicator
3057-148-1	Torque Indicator
3057-148-2	Torque Indicator
3057-149	Torque Indicator
3057-149-1	Torque Indicator
3057-149-2	Torque Indicator
30-57-149-2	Torque Indicator
3057-149-3	Torque Indicator
30-57-149-3	Torque Indicator
3057-149-4	Torque Indicator
30-57-149-4	Torque Indicator

3057-149-5	Torque Indicator
30-57-149-5	Torque Indicator
3057-149-6	Torque Indicator
30-57-149-6	Torque Indicator
3057-149-7	Torque Indicator
30-57-149-7	Torque Indicator
3057-165-2	Oat Indicator
3057-165-3	Oat Indicator
3057-165-4	Oat Indicator
3057-169	Torque Indicator
3057-169-1	Torque Indicator
3057-169-2	Torque Indicator
3057-169-3	Torque Indicator
3057-169-4	Torque Indicator
3057-169-8	Torque Indicator
3057-182-1	Dual Torque Indicator
3057-191-1	Torque Indicator
3057-204-1	T4 Temperature Indicator
30-57-204-1	T4 Temperature Indicator
3057-3-131	Torque Indicator
3057-3-132	Torque Indicator
3057-3-133	Torque Indicator
3057-3-134	Torque Indicator
3057-3-135	Torque Indicator
3057-3-136	Torque Indicator
3057-3-136-1	Torque Indicator
30-57-3-136-1	Torque Indicator
30-57-3-136-2	Torque Indicator
3057-3-136-3	Torque Indicator
3057-3-136-4	Torque Indicator
3057-3-136-5	Torque Indicator
3057-3-136-6	Torque Indicator
3057-3-136A	Torque Indicator
3057-3-137	Torque Indicator
306999-1005	Flap Position Indicator
30757-1	Vertical Speed Indicator
30760-0	Airspeed Indicator
30760-1	Airspeed Indicator
3080-201-2	Dual Torque Indicator
3080-201-4	Dual Torque Indicator
30-80-201-4	Dual Torque Indicator
30DV-0575	Fan
30Y1000	Tachometer Indicator
30Y1001	Tachometer Indicator
3100-0001	Torque Indicator
31000-036	Turbine Outlet Temperature Indicator
310-007-002	Dual Torque Indicator
310-007-003	Dual Torque Indicator
3100-2003	Engine Oil Pressure Indicator

3101-0001	Torque Indicator
3101-0003	Torque Indicator
3101-3001	Torque Indicator
31-061	Position Light
31-063	Position Light
31-071	Position Light
31-073	Position Light
31101W	Directional Gyro
31130-1380	Chip Detector
31230-1120	Rate Of Climb Indicator
31230-1127	Rate Of Climb Indicator
3137LB3-1C	Radio Magnetic Indicator
31400-001	Altimeter
31400-002	Altimeter
31400-003	Altimeter
31400-004	Altimeter
31400-007	Altimeter
31400-011	Altimeter
31400-012	Altimeter
31400-013	Altimeter
31400-014	Altimeter
31400-017	Altimeter
31400-117	Altimeter
31-515-1	Rear Position Light
31-515-2	Rear Position Light
31-515-3	Searchlight
3160-73-47-909	Temperature Indicator
318-00040	Oil Pressure Transmitter
318-100	Oil Pressure Transmitter
31831-1	Airspeed Indicator
32005-000	Tach Generator
32005-0008	Tach Generator
32005-002	Tach Generator
32005-005	Tach Generator
32005-007	Tach Generator
32005-008	Tach Generator
32005-023	Tach Generator
32005-025	Tach Generator
32005-026	Tach Generator
32005-030	Tach Generator
32005-034	Tach Generator
32005-037	Tach Generator
3201-1001	Torque Indicator
3208-2002	Fuel Quantity Indicator
320AS1	Airspeed Indicator
321001-03002	OIL TEMPERATURE INDICATOR
321001-03019	OIL TEMPERATURE INDICATOR
32164-000	Tach Generator
32164-005	Tach Generator

32164-007	Tach Generator
32164-010	Tach Generator
32164-011	Tach Generator
32164-012	Tach Generator
32-19025-001	Power Supply (Dimmer)
323A-2G	Flux Valve
323A-3G	Flux Valve
3252010-0101	Altimeter
3252010-1101	Altimeter
3252011-0101	Encoding Altimeter
3252013-1101	Altimeter
3252013-1201	Altimeter
3252013-1401	Altimeter
3252013-1501	Altimeter
3265013-0601	Fuel Flow Indicator
32-742	Anti-Collision Light
327C2	Slaving Indicator
328A-3G	Slaving Accessory
32970-10	Differential Pressure Switch
329B7R	Flight Director Indicator
32D37-1	Differential Pressure Switch
331002-06015	OIL PRESSURE INDICATOR
331A-3F	Course Indicator
331A-3G	Course Indicator
331A-6P	Course Indicator
331A-6R	Course Indicator
331A9G	H.S.I.
332A61-5160-193	Vertical Speed Indicator
332C10	Radio Magnetic Indicator
332D-11A	Vertical Gyro
332D-11T	Vertical Gyro
332E-3G	Directional Gyro
332E-4	Directional Gyro
336-00006	Airspeed Indicator
336-D-113	Handgrip
339H3	Radar Altimeter
34090-402	Airspeed Indicator
34101CIT7-1B1	Tachometer Indicator
34102-C1C-4-1C	Tachometer Indicator
34102-C1C-4-1C1	Tachometer Indicator
34107C1AG13-1A3	Tachometer Indicator
34108C1AF13-1A3	Tachometer Indicator
34108C1AL13-1A3	Tachometer Indicator
34108-C1AL-13-1A3	Prop Rpm Indicator
34528-H-011	Strobe Light
34528-H-021	Power Supply
34528-H-022	Power Supply
345A-7	Rate Of Turn Sensor
345A-7A	Rate Of Turn Sensor

34670-101	Vertical Speed Indicator
34670-102	Vertical Speed Indicator
34670-112	Vertical Speed Indicator
34670-201	Vertical Speed Indicator
34670-202	Vertical Speed Indicator
34670-402	Vertical Speed Indicator
34670-601	Vertical Speed Indicator
34670-602	Vertical Speed Indicator
34670-A1300	Vertical Speed Indicator
34670-B1300	Vertical Speed Indicator
34670-C1300	Vertical Speed Indicator
35020-01105	Vertical Speed Indicator
35020-11111	Vertical Speed Indicator
35020-1174	Cabin Rate Of Climb Indicator
350-2751-2	Dual Tachometer Indicator
350-2753-1	T.O.T. Indicator
350-2753-2	T.O.T. Indicator
350-2754-1	Cluster Indicator
350-2760-1	Torque Indicator
350568-503	Turbine Outlet Temperature Indicator
35060-11106	Cabin Rate Of Climb Indicator
35060-1117	Vertical Speed Indicator
35060-1122	Vertical Speed Indicator
35060-1145	Vertical Speed Indicator
35060-1152	Vertical Speed Indicator
35060-1175	Vertical Speed Indicator
350-8332-1	Tachometer Indicator
350A76010601	Airspeed Indicator
350A76010701	Vertical Speed Indicator
350A76010801	Altimeter
350A76-1020-0052	Airspeed Indicator
350A76-1020-0152	Airspeed Indicator
350A76-1020-0252	Airspeed Indicator
350A76-1035-00	Altimeter
350A76-1035-02	Vertical Speed Indicator
350A76-1036-00	Vertical Speed Indicator
350A76103606	Altimeter
350A76103800	Vertical Speed Indicator
350A82126701	Dual Tachometer Indicator
350A82128302	T4 Temperature Indicator
350A82128303	T4 Temperature Indicator
350A82128304	T4 Temperature Indicator
350A821283SD	T4 Temperature Indicator
350A82139301	T4 Temperature Indicator
351-37609-117	Master Caution Panel
351-37609-123	Annunciator Panel
351-37609-125	Master Caution Panel
351-37609-127	Annunciator Panel
351-38128-203	Caution Panel

35-1595	Pressure Indicator
352010-1101	Altimeter
35260-0149	Vertical Speed Indicator
35260-1170	Vertical Speed Indicator
355A-61-5187-01	Pcb Board
355A72-3023-01	Sensor
355A72-3023-02	Sensor
355A75-3023-01	Sensor
3567401-3001	Pressure Transmitter
3567411-1501	Pressure Transmitter
3567411-1502	Pressure Transmitter
3567411-6001	Pressure Transmitter
3567411-6002	Pressure Transmitter
3567411-6003	Pressure Transmitter
3567411-6004	Pressure Transmitter
3567709-1501	Pressure Transmitter
3567709-1502	Pressure Transmitter
3567709-1504	Pressure Transmitter
3567742-1001	Pressure Transmitter
3567742-1501	Pressure Transmitter
3567742-1701	Pressure Transmitter
3567742-3001	Pressure Transmitter
3567742-4701	Pressure Transmitter
3567749-1501	Pressure Transmitter
3567749-4001	Pressure Transmitter
3567749-4003	Pressure Transmitter
3567749-6001	Pressure Transmitter
3567749-6505	Pressure Transmitter
3567749-7103	Pressure Transmitter
3567749-9401	Pressure Transmitter
3567749-9402	Pressure Transmitter
3567749-9502	Pressure Transmitter
3567749-9601	Pressure Transmitter
3567758-6501	Pressure Transmitter
3567758-6503	Pressure Transmitter
3569002-1003	Inverter
356H2801	Strobe Light
356H2802	Power Supply
35700-AD-M	Altimeter
3571211-0006	Synchro Indicator
3571211-0052	Synchro Indicator
3571211-0055	Synchro Indicator
3571211-9001	Fuel Flow Indicator
3571211-9009	Fuel Flow Indicator
3571211-9010	Fuel Flow Indicator
3571211-9011	Pressure Indicator
3571211-9012	Pressure Indicator
3571211-9014	Pressure Indicator
3571211-9015	Pressure Indicator

3571211-9016	Pressure Indicator
3571211-9019	Pressure Indicator
3571211-9020	Pressure Indicator
3571211-9021	Fuel Flow Indicator
3571211-9032	Fuel Flow Indicator
3571211-9035	Pressure Indicator
3571211-9039	Pressure Indicator
3571211-9040	Synchro Indicator
3571211-9041	Fuel Flow Indicator
3571211-9043	Fuel Flow Indicator
3571211-9054	Flap Position Indicator
3571212-0003	Pressure Indicator
3571212-0006	Fuel Flow Indicator
3571212-0010	Torque Indicator
3571212-0011	Torque Indicator
3571212-0052	Pressure Indicator
3571212-0055	Pressure Indicator
3571251-9001	Fuel Flow Indicator
3571251-9110	Tachometer Indicator
3571251-9111	Mgt Indicator
3571251-9115	Gas Producer Tachometer Indicator
3571251-9116	Gas Producer Tachometer Indicator
3571251-9119	Mgt Indicator
3571251-9120	Gas Producer Tachometer Indicator
3571251-9121	Mgt Indicator
3571251-9122	Gas Producer Tachometer Indicator
3571251-9123	Mgt Indicator
3571251-9127	T.O.T. Indicator
3571251-9129	T.O.T. Indicator
3571251-9131	Temperature Indicator
3571251-9202	Torque Indicator
3571251-9207	Torque Indicator
3571251-9209	Torque Indicator
3571251-9210	Fuel Pressure Indicator
3571251-9212	Torque Indicator
3571251-9212M	Torque Indicator
3571251-9215	Torque Indicator
3571251-9216	Torque Indicator
3571260-5009	Tachometer Indicator
3571260-7001	Tachometer Indicator
3571260-7001	Tachometer Indicator
3571260-7001	Gas Producer Tachometer
3571260-8001	Tachometer Indicator
3571260-8002	Tachometer Indicator
3571260-8003	Tachometer Indicator
3571261-2003	Tachometer Indicator
3571261-2004	Tachometer Indicator
3571261-8101	Tachometer Indicator
3571261-8102	Tachometer Indicator

3571261-8103	Tachometer Indicator
3571261-8104	Tachometer Indicator
3571261-81-04	Tachometer Indicator
3571262-5101	Tachometer Indicator
3571262-5108	Tachometer Indicator
3571262-5109	Tachometer Indicator
3571280-4002	Tachometer Indicator
3571281-8102	Tachometer Indicator
3571370-0001	Dual Tachometer Indicator
3571370-3002	Dual Tachometer Indicator
3571370-3003	Dual Tachometer Indicator
3571371-6001	Triple Tachometer Indicator
3571371-6002	Triple Tachometer Indicator
3571371-8001	Triple Tachometer Indicator
3571371-9001	Triple Tachometer Indicator
3571810-0003	Fuel Flow Indicator
3571810-0007	Oil Pressure Indicator
3571810-2001	Fuel Flow Indicator
3571810-2002	Fuel Flow Indicator
3581470-0001	Fan Speed Indicator
3581480-1001	I.T.T. Indicator
35890-01	Airspeed Indicator
35890-14	Airspeed Indicator
35890-15	Airspeed Indicator
35890-16	Airspeed Indicator
35890-18	Airspeed Indicator
35890-48	Airspeed Indicator
35890-AA-M	Airspeed Indicator
35890-AB-M	Airspeed Indicator
35890-AD-M	Airspeed Indicator
35890-AE-M	Airspeed Indicator
35890-AF-M	Airspeed Indicator
35-9	Altimeter
360-061-002	Liquid Transmitter
36101P	Gyro Horizon
36104-1H-8-A1	Radio Magnetic Indicator
36104-1L11-A1	Radio Magnetic Indicator
36104-1L-11-A1	Radio Magnetic Indicator
36104-1L11-A2	Radio Magnetic Indicator
36104-1L-11-A2	Radio Magnetic Indicator
36109-1L11A3	Radio Magnetic Indicator
361-11425-001	Voltage Regulator
36300-1154	Clock
369A4512	Torque Indicator
369A4512B	Torque Indicator
369A4514-3	Engine Power Out Control Unit
369A4515	Dual Tachometer Indicator
369A4516	Tachometer Indicator
369A4516-7	Tachometer Indicator

369A4517	Tach Generator
369A4521	T.O.T. Indicator
369A4521-3	T.O.T. Indicator
369A4521-5	T.O.T. Indicator
369A4521-7	T.O.T. Indicator
369A4522	Torque Indicator
369A4526	Torque Indicator
369D24135-3	Engine Oil Temperature Indicator
369D24135-5	Engine Oil Temperature Indicator
369D24135-BSC	Engine Oil Temperature Indicator
369D24136	Ammeter
369D24137	Fuel Quantity Indicator
369D24512	Ammeter
369D24512-1	Ammeter
369D24512-3	Ammeter
369D24512-BSC	Ammeter
369D24518	Dual Tachometer Indicator
369D-24518-3	Dual Tachometer Indicator
369D24518-5	Dual Tachometer Indicator
369D245-18-5	Dual Tachometer Indicator
369D296305-21	Cluster Indicator
369D296305-31	Cluster Indicator
369D4518	Dual Tachometer Indicator
369D4518-3	Dual Tachometer Indicator
369D4518-7	Dual Tachometer Indicator
369D4518-9	Dual Tachometer Indicator
369H4233	Tach Generator
369H4508-3	Compass
369H4512	Torque Indicator
369H45126	Torque Indicator
369H45126-7	Torque Indicator
369H4512B	Torque Indicator
369H4516	Dual Tachometer Indicator
369H4518	Dual Tachometer Indicator
369H4518-3	Dual Tachometer Indicator
369H4518-7	Dual Tachometer Indicator
369H4522	Torque Indicator
369H4526	Torque Indicator
369H4526-21	Torque Indicator
369H4526-3	Torque Indicator
369H4526-5	Torque Indicator
369H4526-7	Torque Indicator
369H4551	Tach Generator
369H6418	Oil Pressure Indicator
369H6425-5	Dimmer Control
369H90153	Handgrip
369H92518	Attitude Gyro
369H92831	Attitude Gyro
369H92832	Directional Gyro

36D831518G1	Starter
36D831711G2	Dc Starter
36D831711G4	Dc Starter
3706-2001	Dc Ammeter
371-005-004	Torque Pressure Indicator
371-005-006	Oil Temperature & Pressure Indicator
37-113-7	Handlight
37-113-8	Handlight
37-115	Handlight
37-117-7	Handlight
37-120-7	Handlight
371GC01Y02	Master Electrical Box
371GC01Y021	Master Electrical Box
371GC01Y02	Master Electrical Box
371K-010	Altimeter
371K-05	Altimeter
371P1-01	Altimeter
371P-1-01	Altimeter
372G01Y	Master Electrical Box
372GC01Y	Master Electrical Box
372GC01Y001	Master Electrical Box
373GC01Y	Master Electrical Box
373GC01Y001	Master Electrical Box
37480-20	Vertical Speed Indicator
37480-24	Vertical Speed Indicator
37480-28	Vertical Speed Indicator
37480-40	Vertical Speed Indicator
37480-50	Vertical Speed Indicator
37480-58	Vertical Speed Indicator
37480-AA-M	Vertical Speed Indicator
37480-AD-M	Vertical Speed Indicator
374GC01Y	Master Electrical Box
37500-000	Altimeter
37500-080	Altimeter
37500-084	Altimeter
37500-0840	Altimeter
37500-0841	Altimeter
37500-0847	Altimeter
37500-0848	Altimeter
37500-220	Altimeter
37500-224	Altimeter
37500-2241	Altimeter
37500-280	Altimeter
37500-284	Altimeter
37500-5847	Altimeter
37500-AB-M	Altimeter
37501ABM	Altimeter
37501ACM	Altimeter
37501CAM	Altimeter

37501CBM	Altimeter
37501CCM	Altimeter
3751251-9123	Mgt Indicator
37570-1011	Gyro Horizon
375GC01Y00	Master Electrical Box
380807-001	Fuel Quantity Indicator
380807-002	Fuel Quantity Indicator
380807-003	Fuel Quantity Indicator
380807-004	Fuel Quantity Indicator
380807-005	Fuel Quantity Indicator
3809310-3	Temperature Indicator
3809311-3	Tachometer Indicator
3809311-4	Tachometer Indicator
3809312-6	Torque Indicator
3809313-5	Torque Indicator
3809314-4	Dual Tachometer Indicator
3809314-5	Dual Tachometer Indicator
3809357-2	T.O.T. Indicator
3809358-2	Tachometer Indicator
3809400-2	Tachometer Indicator
3809431-1	Torque Indicator
381058-08007	Transmitter
381065-009	Fuel Probe
38210-000	Vertical Speed Indicator
38210-010	Vertical Speed Indicator
38210-020	Vertical Speed Indicator
38210-300	Vertical Speed Indicator
38210-310	Vertical Speed Indicator
38210-320	Vertical Speed Indicator
38210-3641	Vertical Speed Indicator
38210-380	Vertical Speed Indicator
38210-3841	Vertical Speed Indicator
38210-390	Vertical Speed Indicator
38210-393	Vertical Speed Indicator
38210-3940	Vertical Speed Indicator
38210-3941	Vertical Speed Indicator
38210-3948	Vertical Speed Indicator
38210-397	Vertical Speed Indicator
38210-480	Vertical Speed Indicator
38210-490	Vertical Speed Indicator
38210-AC-M	Vertical Speed Indicator
38221-01-250	Gyro Horizon
38221-07-254	Gyro Horizon
38221-AA-M	Gyro Horizon
38221-AB-M	Gyro Horizon
38222-100	Directional Gyro
38222-101	Directional Gyro
38222-102	Directional Gyro
38222-103	Directional Gyro

38222-104	Directional Gyro
38222-105	Directional Gyro
38222-110	Directional Gyro
38222-111	Directional Gyro
38222-112	Directional Gyro
38222-113	Directional Gyro
38222-114	Directional Gyro
38222-115	Directional Gyro
38222-150	Directional Gyro
38222-151	Directional Gyro
38222-152	Directional Gyro
38222-153	Directional Gyro
38222-154	Directional Gyro
38222-155	Directional Gyro
38222-200	Directional Gyro
38222-201	Directional Gyro
38222-202	Directional Gyro
38222-203	Directional Gyro
38222-204	Directional Gyro
38222-205	Directional Gyro
38222-210	Directional Gyro
38222-211	Directional Gyro
38222-212	Directional Gyro
38222-213	Directional Gyro
38222-214	Directional Gyro
38222-215	Directional Gyro
38222-220	Directional Gyro
38222-250	Directional Gyro
38222-251	Directional Gyro
38222-252	Directional Gyro
38222-253	Directional Gyro
38222-254	Directional Gyro
38222-255	Directional Gyro
38314A	Gyro Horizon
38314B	Gyro Horizon
38399-330	Airspeed Indicator
38399-330-02	Airspeed Indicator
38399-480	Airspeed Indicator
38399-480-02	Airspeed Indicator
38399-490	Airspeed Indicator
38399-490-02	Airspeed Indicator
38399-AB-M	Airspeed Indicator
38399-AC-M	Airspeed Indicator
38399-AD-M	Airspeed Indicator
384178-091	Fuel Selector Switch
384178-103	Fuel Quantity Selector
384332-015	Oil Temperature Switch
384332-016	Oil Temperature Switch
389-00340	PRESSURE TRANSMITTER TEST INDICATOR

389-1	Indicator
391001-395	Fuel Probe
391001-396	Fuel Probe
391001-410	Fuel Probe
391037-03160	Tank Unit
391043-03001	Tank Unit
391046-197	Fuel Probe
391046-199	Fuel Probe
391046-200	Transmitter
3911212-5002	Gas Temperature Indicator
3911212-9001	Gas Temperature Indicator
3911212-9002	Gas Temperature Indicator
3911213-5002	Gas Temperature Indicator
3911213-9002	Gas Temperature Indicator
3911213-9002 MOD	Gas Temperature Indicator
3911213-9005	Gas Temperature Indicator
3911213-9008	Gas Temperature Indicator
3911213-9009	Gas Temperature Indicator
3911213-9016	Gas Temperature Indicator
393004-01491	Fuel Quantity Indicator
393004-01970	Gas Temperature Indicator
393004-051	Fuel Quantity Indicator
393004-060	Fuel Quantity Indicator
393004-061	Fuel Quantity Indicator
393004-075	Fuel Quantity Indicator
393004-34750	Fuel Quantity Indicator
393007-07869	Fuel Quantity Indicator
393008-036	Fuel Quantity Indicator
393008-037	Fuel Quantity Indicator
393008-039	Fuel Quantity Indicator
393008-040	Fuel Quantity Indicator
393008-042	Fuel Quantity Indicator
393008-046	Fuel Quantity Indicator
393008-047	Fuel Quantity Indicator
393008-056	Fuel Quantity Indicator
393008-064	Fuel Quantity Indicator
393008-074	Fuel Quantity Indicator
393008-077	Fuel Quantity Indicator
393008-078	Fuel Quantity Indicator
393008-079	Fuel Quantity Indicator
393008-080	Fuel Quantity Indicator
393008-082	Fuel Quantity Indicator
3930291-9001	Fuel Flow Indicator
393084-11358	Liquid Oxygen Indicator
393085-43708	Fuel Quantity Indicator
393090-101	Fuel Quantity Indicator
393090-103	Fuel Quantity Indicator
393090-109	Fuel Quantity Indicator
393090-111	Fuel Quantity Indicator

393090-113	Fuel Quantity Indicator
393090-115	Fuel Quantity Indicator
393090-117	Fuel Quantity Indicator
3932241-9001	Dual Fuel Quantity Indicator
3932241-9002	Dual Fuel Quantity Indicator
3932241-9003	Dual Fuel Quantity Indicator
3932241-9008	Dual Fuel Quantity Indicator
3935-1	Turn & Slip Indicator
3935-2	Turn & Slip Indicator
3940230-9002	Tachometer Indicator
3940230-9003	Tachometer Indicator
3940231-9001	Tachometer Indicator
3940231-9002	Tachometer Indicator
3940233-9002	Tachometer Indicator
3940233-9003	Tachometer Indicator
3940233-9006	Tachometer Indicator
3940233-9007	Tachometer Indicator
3941212-9001	Gas Producer Tachometer Indicator
3941213-9003	Tachometer Indicator
3941213-9009	Tachometer Indicator
3941213-9014	Gas Producer Tachometer Indicator
3941231-9002	Tachometer Indicator
3941231-9003	Tachometer Indicator
3941231-9004	Tachometer Indicator
3941231-9005	Tachometer Indicator
3941231-9006	Tachometer Indicator
3942330-9003	Dual Tachometer Indicator
3942333-9001	Dual Tachometer Indicator
3942333-9002	Dual Tachometer Indicator
3942333-9003	Dual Tachometer Indicator
3943331-9002	Triple Tachometer Indicator
3943333-9001	Triple Tachometer Indicator
3943333-9002	Triple Tachometer Indicator
39600-000	Encoding Altimeter
39600-001	Encoding Altimeter
39600-002	Encoding Altimeter
39600-080	Encoding Altimeter
39600-083	Encoding Altimeter
39600-100	Encoding Altimeter
39600-101	Encoding Altimeter
39600-102	Encoding Altimeter
39600-120	Encoding Altimeter
39600-164	Encoding Altimeter
39600-180	Encoding Altimeter
39600-183	Encoding Altimeter
39600-200	Encoding Altimeter
39600-5241	Encoding Altimeter
39600-584	Encoding Altimeter
39600-5840	Encoding Altimeter

39600-5841	Encoding Altimeter
39600-5847	Encoding Altimeter
39600-5848	Encoding Altimeter
39600-586	Encoding Altimeter
39600-684	Encoding Altimeter
39600-686	Encoding Altimeter
39600-900	Encoding Altimeter
39601ABM	Encoding Altimeter
39601-AB-M	Encoding Altimeter
39601-AC-M	Encoding Altimeter
39601-AD-M	Encoding Altimeter
39648-3	Tachometer Indicator
39948-E2803	Airspeed Indicator
39948-E2903	Airspeed Indicator
3995-1213	Rotor Rpm Indicator
399A65-3	Fuel Dump Valve
399A65-31	Fuel Dump Valve
3A1000-1G	Static Inverter
3A125-1B-1	Static Inverter
3A250-1B-1	Static Inverter
3A50-1B-1	Static Inverter
3A60	Altimeter
3A61	Altimeter
3A64	Altimeter
3A65	Altimeter
3D2485-12	Pneumatic De-Icer Timer
3D2485-13	Pneumatic De-Icer Timer
3E1150-10	Prop De-Icer Timer
3E1150-11	Prop De-Icer Timer
3E1150-12	Prop De-Icer Timer
3E2311-6	Timer/Monitor
3E2Y8/475-1	Voltage Regulator
3G2592V00551	Load Indicator
3S2060DR149A1A	Voltage Regulator
3S2060DR149C1	Voltage Regulator
3ZZ210M	Master Alarm And Indication Panel
4.110AD	Tach Generator
400-0098-000	Flexcomm Fm Communications Transceiver
400-0098-001	Flexcomm Fm Communications Transceiver
400-0098-002	Flexcomm Fm Communications Transceiver
400-0099-000	Flexcomm Fm Communications Transceiver
400-0099-001	Flexcomm Fm Communications Transceiver
4000-10	Emergency Locator Transmitter
4000-1002	Clock
400-0102-000	Flexcomm Fm Communications Transceiver
400-0102-0003	Flexcomm Fm Communications Transceiver
400-0102-001	Flexcomm Fm Communications Transceiver
400-0102-002	Flexcomm Fm Communications Transceiver
400-0102-003	Flexcomm Fm Communications Transceiver

400-0103-000	Flexcomm Fm Communications Transceiver
400-0103-001	Flexcomm Fm Communications Transceiver
400-0103-002	Flexcomm Fm Communications Transceiver
400-0103-003	Flexcomm Fm Communications Transceiver
400-0106-000	C-1000 Control Unit
400-0106-010	C-1000 Control Head
400-0106-011	C-1000 Control Unit
4000-10F	Emergency Locator Transmitter
400-0127-85	Uhf Fm Transceiver
400-012785-00	Transceiver
400-012785-01	Flexcomm Fm Communications Transceiver
400-012785-02	Flexcomm Fm Communications Transceiver
400-012785-03	Flexcomm Fm Communications Transceiver
400-012785-50	Flexcomm Fm Communications Transceiver
400-012785-51	Flexcomm Fm Communications Transceiver
400-012785-52	Flexcomm Fm Communications Transceiver
400-012785-53	Flexcomm Fm Communications Transceiver
400-014525-00	Flexcomm Fm Communications Transceiver
400-014525-01	Flexcomm Fm Communications Transceiver
400-014525-02	Flexcomm Fm Communications Transceiver
400-014525-03	Flexcomm Fm Communications Transceiver
400-014525-50	Flexcomm Fm Communications Transceiver
400-014525-51	Flexcomm Fm Communications Transceiver
400-014525-52	Flexcomm Fm Communications Transceiver
400-014525-53	Flexcomm Fm Communications Transceiver
400-075-826	Airspeed Indicator
4000784-8502	Turn & Bank Indicator
4000784-8503	Turn & Bank Indicator
4000937-6201	Navigation Receiver
4000B-12	Directional Gyro
4000B-20	Directional Gyro
4000B-6	Directional Gyro
4000B-9	Directional Gyro
4000C	Directional Gyro
4000D	Directional Gyro
4000D-1	Directional Gyro
40-0100-1	Rotating Beacon
400100-105	Magnetic Compass
40-0100-11	Rotating Beacon
40-0100-13	Rotating Beacon
40-0100-17	Rotating Beacon
40-0100-19	Rotating Beacon
40-0100-21	Rotating Beacon
40-0100-23	Rotating Beacon
40-0100-25	Rotating Beacon
40-0100-27	Rotating Beacon
40-0100-29	Rotating Beacon
40-0100-3	Rotating Beacon
40-0100-31	Rotating Beacon

40-0100-5	Rotating Beacon
40-0100-7	Rotating Beacon
40-0100-9	Rotating Beacon
40-0103-29	Anti-Collision Light
40-0103-31	Beacon Assembly
40-01117	Searchlight
40-0117-1	Light Assembly Beacon
40-0127-1	Tandem Oscillating Light
40-0127-3	Tandem Oscillating Light
40-0127-5	Tandem Oscillating Light
40-0127-7	Tandem Oscillating Light
40-0127-8	Tandem Oscillating Light
40-0127-9	Tandem Oscillating Light
4001808-901	Vertical Gyro
400201TYPEA13A1	Clock
400260-3	Temperature Control
400260-4	Temperature Control
4002963-901	Radio Magnetic Indicator
400-366-010-101	Motor Driven Valve
400-375-017	Airspeed Indicator
400-375-017-101	Airspeed Indicator
4005A	Attitude Indicator
4007977-7	Light
400GL	Voltmeter
4012-1003	Voltmeter
4013-2001	Voltmeter
4013-3001	Voltmeter
4014267-901	Radar Altimeter Indicator
4014267-902	Altimeter
4014267-904	Radar Altimeter
4016-1020	Ammeter
4016341-905	Altimeter
4019190-1	Directional Gyro
4019190-13	Directional Gyro
4019190-16	Directional Gyro
4019190-18	Directional Gyro
4019190-2	Directional Gyro
4019190-3	Directional Gyro
4019190-4	Directional Gyro
4019190-5	Directional Gyro
4019190-6	Directional Gyro
4019190-7	Directional Gyro
4019286-901	Vertical Gyro
4019286-902	Vertical Gyro
4019286-903	Vertical Gyro
4019759-1	Directional Gyro
4019759-901	Directional Gyro
4019759-902	Directional Gyro
401EED1-1	Standby Engine Indicator

4020531-100	Gyro Horizon
4020531-102	Gyro Horizon
4020531-130	Gyro Horizon
4020531-150	Gyro Horizon
4020531-170	Gyro Horizon
4020531-330	Gyro Horizon
4020531-332	Gyro Horizon
4020531-360	Gyro Horizon
4020531-394	Gyro Horizon
4020531-504	Gyro Horizon
4020531-505	Gyro Horizon
4020531-509	Gyro Horizon
4020531-531	Gyro Horizon
4020531-534	Gyro Horizon
4020531-561	Gyro Horizon
4020531-574	Gyro Horizon
4020531-594	Gyro Horizon
4020550-904	A.D.I.
4020577-3	Directional Gyro
4020577-6	Directional Gyro
4020577-8	Directional Gyro
4020936-901	Tarsyn Three-Axis Reference Sensor
4020936-902	Tarsyn Three-Axis Reference Sensor
4020936-903	Tarsyn Three-Axis Reference Sensor
4020936-904	Tarsyn Three-Axis Reference Sensor
4021541-131	Gyro Horizon
4021541-171	Gyro Horizon
4021541-191	Gyro Horizon
4021541-193	Gyro Horizon
4021541-300	Gyro Horizon
4021541-330	Gyro Horizon
4021541-331	Gyro Horizon
4021541-360	Gyro Horizon
4021541-371	Gyro Horizon
4021541-390	Gyro Horizon
4021541-391	Gyro Horizon
4021541-560	Gyro Horizon
4021541-580	Gyro Horizon
4021541-590	Gyro Horizon
4021541-594	Gyro Horizon
4021541-595	Gyro Horizon
4021541-671	Gyro Horizon
4021541-691	Gyro Horizon
4021541-771	Gyro Horizon
4021541-772	Gyro Horizon
4021541-791	Gyro Horizon
4021979-901	Directional Gyro
4022211-100	Gyro Horizon
40-250	Airspeed Indicator

4027170-904	Horizontal Situation Indicator
402-90-1	Airspeed Switch
4029529-901	Horizontal Situation Indicator
4030182-901	Altimeter Sensor
4030567-191	Attitude Indicator
4030567-191 (GH-14C)	Attitude Indicator
4030567-291	Attitude Indicator
4030567-291 (GH-14C)	Attitude Indicator
4031609-901	Airspeed/Temperature Indicator
4031609-902	Airspeed/Temperature Indicator
4031609-903	Airspeed/Temperature Indicator
4031609-904	Airspeed/Temperature Indicator
4031609-905	Airspeed/Temperature Indicator
4031609-906	Airspeed/Temperature Indicator
4031609-907	Airspeed/Temperature Indicator
4031609-908	Airspeed/Temperature Indicator
406-001-303-101	Handgrip
406-074-013-103	Panel
406-075-819-101	Panel
406-075-826-101	Airspeed Indicator
406-075-826-103	Airspeed Indicator
406-075-831-101	Panel
406-075-832-103	Panel
406-075-833-105	Panel
406-075-840-103	Panel
406-077-814-101	Panel
40-619-3	Hydraulic Pressure Indicator
406-375-200-103	Panel
406-375-200-105	Panel
406-375-205-101	Turbine Outlet Temperature Indicator
406-375-205-103	Turbine Outlet Temperature Indicator
406-375-206-101	Gas Producer Tachometer Indicator
406-375-207-101	Dual Torque Indicator
406-375-208-101	Dual Tachometer Indicator
406-375-213-105	Rpm Sensor
406-375-217-103	Panel
406-375-220-101	Attitude Indicator
406-375-220-103	Attitude Gyro
406-375-221-101	Panel
406-375-221-105	Panel
406-375-222-105	Panel
406-375-223-109	Panel
406-375-223-119	Panel
406-375-223-121	Panel
406-375-224-101	Panel
406-375-225-105	Panel
406-375-231-105	Torque And Turbine Gas Temperature Indicator
406EED1-1	Standby Engine Indicator
407-075-015	Airspeed Indicator

407-075-015-103	Airspeed Indicator
407-075-024-103	Fuel Pressure/Ammeter Indicator
407-075-024-105	Fuel Pressure/Ammeter Indicator
407-075-024-107	Fuel Pressure/Ammeter Indicator
407-375-001-101	Mgt Indicator
407-375-001-103	Mgt Indicator
407-375-001-105	Mgt Indicator
407-375-001-107	Mgt Indicator
407-375-002-101	Ng Tachometer Indicator
407-375-002-103	Ng Tachometer Indicator
407-375-002-105	Ng Tachometer Indicator
407-375-003-101	Engine Torque Indicator
407-375-003-105	Engine Torque Indicator
407-375-003-107	Torque Indicator
407-375-003-109	Torque Indicator
407-375-004-101	Oil Temperature & Pressure Indicator
407-375-004-103	Engine Oil Temperature & Pressure Indicator
407-375-005-101	Transmission Oil Temperature & Pressure Indicator
407-375-005-103	Transmission Oil Temperature & Pressure Indicator
407-375-006-101	Fuel Quantity Indicator
407-375-006-103	Fuel Quantity Indicator
407-375-007-101	Fuel Pressure/Ammeter Indicator
407-375-007-103	Fuel Pressure/Ammeter Indicator
407-375-007-105	Fuel Pressure/Ammeter Indicator
407-375-007-107	Fuel Pressure/Ammeter Indicator
407-375-007-109	Fuel Pressure/Ammeter Indicator
407-375-008-101	Dual Tachometer Indicator
407-375-008-103	Dual Tachometer Indicator
407-375-008-105	Dual Tachometer Indicator
407-375-008-107	Dual Tachometer Indicator
407-375-008-109	Dual Tachometer Indicator
407-375-008-111	Dual Tachometer Indicator
407-375-008-113	Dual Tachometer Indicator
407-375-009-101	Fuel Probe
407-375-010-101	Fuel Probe
407-375-011-101	Fuel Probe
407-375-015-101	Caution Panel
407-375-015-103	Caution Panel
407-375-015-105	Caution Panel
407-375-015-107	Caution Panel
407-375-015-109	Caution Panel
407-375-015-111	Caution Panel
407-375-016-101	Fuel Signal Conditioner
407-375-016-103	Fuel Signal Conditioner
407-375-021-107	Rpm Sensor
40760-0114	Directional Gyro
4099B	Turn & Bank Indicator
4101-1003	Loadmeter
4101-1006	Loadmeter

4101-1009	Loadmeter
4101-3002	Loadmeter
4106-1015	Dc Ammeter
4106-1016	Dc Ammeter
41105-C5A-4-B3	Dual Tachometer Indicator
41105C5A4E3	Dual Tachometer Indicator
41105-C5A-4E3	Dual Tachometer Indicator
41105-C5A-4-E3	Dual Tachometer Indicator
412-001-370-101	Actuator
41-201-1	Torque Indicator
412-074-030-101	Isolation Amplifier
412-074-101-101	Transmitter
412-074-101-103	Transducer - Dual Element
412-075-008-101	Dual Torque Indicator
412-075-008-109	Dual Torque Indicator
412-075-008-111	Dual Torque Indicator
412-075-008-113	Dual Torque Indicator
412-075-008-115	Dual Torque Indicator
412-075-009-105	Airspeed Indicator
412-075-009-107	Airspeed Indicator
412-075-009-109	Airspeed Indicator
412-075-010-105	Triple Tachometer Indicator
412-075-010-107	Triple Tachometer Indicator
412-075-010-109	Triple Tachometer Indicator
412-075-010-111	Triple Tachometer Indicator
412-075-010-113	Triple Tachometer Indicator
412-075-010-115	Triple Tachometer Indicator
412-075-101-101	Static Inverter
412-075-101-103	Static Inverter
412-075-205-101	Torque/Pressure Transmitter
412-075-206-101	Panel
412-075-502-105	Afcs Actuator Position Panel
412-075-513-103	Fuel Control Panel
412-075-564-101	Panel Assembly
412-075-564-103	Panel Assembly
412-075-700-111	Panel
412-075-701-113	Panel
412-075-704-103	Panel
412-075-706-103	Panel
412-075-706-105	Panel
412-075-710-101	Panel
412-075-711-101	Panel
412-375-001-101	Dual Fuel Quantity Indicator
412-375-001-105	Dual Fuel Quantity Indicator
412-375-003-107	Signal Conditioner
412-375-006-101	Pressure Transducer
412-375-006-103	Pressure Transducer
412-375-007-101	Triple Torque Indicator
412-375-007-103	Triple Torque Indicator

412-375-007-105	Triple Torque Indicator
412-375-007-107	Triple Torque Indicator
412-375-007-109	Triple Torque Indicator
412-375-007-111	Triple Torque Indicator
412-375-007-113	Triple Torque Indicator
412-375-007-115	Triple Torque Indicator
412-375-007-117	Triple Torque Indicator
412-375-008-101	Dual Tachometer Indicator
412-375-010-101	Encoding Altimeter
412-375-010-103	Encoding Altimeter
412-375-023-101	Panel
412-375-023-103	Panel
412-375-023-105	Panel
412-375-024-101	Panel
412-375-027-101	Panel
412-375-035-101	Fuel Pressure Indicator
412-375-036-101	Oil Temperature & Pressure Indicator
412-375-079-101	Static Inverter
412-375-084-101	Panel
412-375-085-101	Panel
412-375-086-101	Panel
412-375-087-101	Panel
412-375-234-101	Panel
412-375-400-101	Panel
412-375-401-101	Panel
412-375-401-103	Panel
412-375-402-103	Panel
412-375-402-105	Panel
412-375-403-105	Panel
412-375-404-101	Panel
412-375-405-101	Panel
412-375-405-103	Panel
412-375-405-105	Panel
412-375-700-105	Panel
412-375-701-101	Panel
412-375-702-103	Panel
412-375-702-105	Panel
412-375-702-107	Panel
412-375-703-101	Panel
412-375-704-101	Panel
412-375-704-105	Panel
412-375-710-103	Panel
412-375-711-105	Panel
412-375-711-107	Panel
412-375-711-113	Panel
412-375-712-101	Panel
412-375-712-107	Panel
412-375-712-109	Panel
412-375-712-115	Panel

412-375-712-123	Panel
412-375-712-129	Panel
412-375-713-103	Panel
412-375-714-101	Panel
412-375-714-103	Panel
412-375-714-105	Panel
4128-00141	Oil Pressure Transmitter
412-899-126-119	Master Caution Panel
412-899-701-107	Panel
41-308-1	Prop Tach Indicator
4140-00-944-2557	Fan
41-401-1	I.T.T. Indicator
41-421-1	I.T.T. Indicator
414ES209-11	Tachometer Indicator
414ES209-5	Gas Producer Tachometer Indicator
414ES210-4	Power Control Panel
414ES270-16	Torque Indicator
414ES273-1	Handgrip
414ES2883	Triple Tachometer Indicator
415039983-00	Fuel Signal Conditioner
418-00011	Oil Pressure Transmitter
418-00014	Oil Pressure Transmitter
418-00041	Oil Pressure Transmitter
418-00044	Oil Pressure Transmitter
418-00064	Oil Pressure Transmitter
418-00081	Oil Pressure Tansmitter
418-00084	Oil Pressure Transmitter
418-00181	Oil Pressure Transmitter
418-00475-000	ANEMO-BAROMETRIC MODULE
418-00475-001	ANEMO-BAROMETRIC MODULE
418-00475-300	ANEMO-BAROMETRIC MODULE
418-00475-301	ANEMO-BAROMETRIC MODULE
418-00475-302	ANEMO-BAROMETRIC MODULE
418-00475-400	ANEMO-BAROMETRIC MODULE
418-00475-401	ANEMO-BAROMETRIC MODULE
418-00475-450	ANEMO-BAROMETRIC MODULE
418-00475-500	ANEMO-BAROMETRIC MODULE
418-00475-550	ANEMO-BAROMETRIC MODULE
418-00475-560	ANEMO-BAROMETRIC MODULE
418-00475-600	ANEMO-BAROMETRIC MODULE
418-00475-700	ANEMO-BAROMETRIC MODULE
418-01064	Torque Pressure Transmitter
418-01081	Oil Pressure Transmitter
418-01084	Oil Pressure Transmitter
41850A	Landing And Search Light
41850A14-4580	Landing And Search Light
41850A17-4580	Landing And Search Light
420-208	Differential Pressure Switch
420MV	Turbine Outlet Temperature Indicator

421722-8	Searchlight
424-2ED	Indicator
424-2ES	Indicator
42540-3128	Altimeter
42540-3228	Encoding Altimeter Mb
427-301-002-103	Linear Actuator
427-366-102-101	Tank Unit
427-366-103-101	Motor Driven Valve
427-375-005-109	Panel
427-375-012-101	Grcu
427-375-014-105	Panel
427-375-015-107	Panel
427-375-018	PEDAL RESTRICTION CONTROL UNIT (PRCU)
427-375-018-101	PEDAL RESTRICTION CONTROL UNIT (PRCU)
427-876-168-101	Panel
427-876-169-101	Panel
429-375-005-101	Panel
429-375-005-105	Panel
42D107A1	Differential Pressure Switch
42D185	Gage Pressure Switch
42D208	Differential Pressure Switch
42D218	Differential Pressure Switch
42D362	Differential Pressure Switch
42D394	Differential Pressure Switch
42D395	Differential Pressure Switch
4300-311	Attitude Indicator
4300-411	Attitude Indicator
4300-412	Attitude Indicator
4300-413	Attitude Indicator
4300-6980C	Attitude Indicator
4300-7975	Attitude Indicator
4300-8170-1L	Gyro Horizon
4300-8220L	Gyro Horizon
4300-8765-1L	Gyro Horizon
4300-8765-3L	Gyro Horizon
4300-8765-IL	Attitude Gyro
43010-E2300	Vertical Speed Indicator
4301-3003	Engine Oil Pressure Indicator
4301-3004	Transmission Oil Pressure Indicator
430-375-074-113	Panel
430-375-076-113	Panel
4305-7150L	Directional Gyro
4305-8175-1L	Directional Gyro
4306-1002	Transmission Oil Pressure Indicator
4306-1003	Fuel Pressure Indicator
4306-1008	Engine Oil Pressure Indicator
4306-1009	Transmission Oil Pressure Indicator
4306-1010	Fuel Pressure Indicator
4306-1011	Transmission Oil Pressure Indicator

4306-1012	Engine Oil Pressure Indicator
4306-1013	Fuel Pressure Indicator
4306-1015	Engine Oil Pressure Indicator
4306-1017	Fuel Pressure Indicator
4308-1002	Torque Indicator
4308-1003	Torque Indicator
4308-1004	Torque Indicator
4308-1005	Torque Indicator
4308-1006	Torque Indicator
4308-1007	Torque Indicator
4308-1009	Torque Indicator
4308-1014	Torque Indicator
4308-1020	Torque Indicator
4308-1024	Torque Indicator
4308-1025	Torque Indicator
4308-1026	Torque Indicator
4308-1033	Torque Indicator
4308-1034	Torque Indicator
4308-1046	Torque Indicator
4308-1050	Torque Indicator
4308-1052	Torque Indicator
4308-1071	Torque Indicator
4308-1124	Torque Indicator
4308-3001	Torque Indicator
4308-3002	Torque Indicator
4308-3008	Torque Indicator
4308-3013	Torque Indicator
4308-3018	Torque Indicator
4308-3021	Torque Indicator
4308-3022	Torque Indicator
4308-3035	Torque Indicator
4308-3037	Torque Indicator
4308-3038	Torque Indicator
4308-3051	Torque Indicator
4308-3055	Torque Indicator
4308-3056	Torque Indicator
4308-3058	Torque Indicator
4308-3062	Torque Indicator
4308-3063	Torque Indicator
4308-3064	Torque Indicator
4308-3065	Torque Indicator
4308-3066	Torque Indicator
4308-3074	Torque Indicator
4308-3075	Torque Indicator
4308-3096	Torque Indicator
4309-2001	Torque Indicator
4309-3003	Torque Indicator
4309-3004	Torque Indicator
4310-3005	Torque Indicator

43300-6128	Encoding Altimeter In Hg
43300-6228	Encoding Altimeter Mb
4332-3003	Fuel Pressure Indicator
4332-8005	Fuel Pressure Indicator
4337-3021	Dual Torque Indicator
4344-3113	Torque Indicator
4349-150-80-10	Rudder Trim Indicator
4350-150-80-10	Aileron Trim Position Indicator
4351-1103	Torque Indicator
4351-1107	Torque Indicator
4351-1109	Torque Indicator
4351-1112	Torque Indicator
4351-1203	Torque Indicator
4351-1205	Torque Indicator
4351-1207	Torque Indicator
4351-1209	Torque Indicator
4351-1212	Torque Indicator
4351-1214	Torque Indicator
4351-1215	Torque Indicator
4351-1303	Torque Indicator
4351-1307	Torque Indicator
4351-1309	Torque Indicator
4351-1312	Torque Indicator
4351-1403	Torque Indicator
4351-1407	Torque Indicator
4351-1409	Torque Indicator
4351-1412	Torque Indicator
4351-1413	Torque Indicator
43550-2	Displacement Gyro
4355-3001	Torque Indicator
4355-3010	Torque Indicator
4355-30-3001	Torque Indicator
437-001	Audio Amplifier
437-003	Audio Amplifier
43932-052	Altimeter
44090-084	Airspeed Indicator
44090-0841-01	Airspeed Indicator
44090-0941-01	Airspeed Indicator
44090-0941-02	Airspeed Indicator
44090-1841-01	Airspeed Indicator
44090-1841-02	Airspeed Indicator
44090-1941-01	Airspeed Indicator
44090-1941-02	Airspeed Indicator
44090-1941-03	Airspeed Indicator
44090-2941	Airspeed Indicator
44090-2941-03	Airspeed Indicator
44090-2941-04	Airspeed Indicator
44090-2941-05	Airspeed Indicator
44090-2948	Airspeed Indicator

44090-2948-01	Airspeed Indicator
44090-3941-03	Airspeed Indicator
44090-3941-04	Airspeed Indicator
44090-6841	Airspeed Indicator
44090-6941	Airspeed Indicator
44090-6941-01	Airspeed Indicator
44090-6948	Airspeed Indicator
44090-6948-01	Airspeed Indicator
44090-AA-M	Airspeed Indicator
44090-AB-M	Airspeed Indicator
44090-AC-M	Airspeed Indicator
44090-AD-M	Airspeed Indicator
44090AEM	Airspeed Indicator
44090-AE-M	Airspeed Indicator
44090-AF-M	Airspeed Indicator
44090AGM	Airspeed Indicator
44090-AGM	Airspeed Indicator
44090-AG-M	Airspeed Indicator
44090-AH-M	Airspeed Indicator
4428-150-80-10	Flap Position Indicator
443147-2	Torque Indicator
44410-2-24	Strobe Light
446000458-00	Vertical Speed Indicator
446001240-00	Fuel Quantity Indicator
446003533-00	Fuel Quantity Indicator
446003587-00	Fuel Quantity Indicator
4460-2	Turn & Slip Indicator
446-10013	Torque Indicator
446-10127	Torque Indicator
446-10135	Torque Indicator
44670-0000	Gyro Horizon
44690-0000	Horizontal Situation Indicator
449-2	Power Supply
44929-412	Altimeter, Encoding
449-2A	Power Supply
449-2B	Power Supply
449-2C	Power Supply
449-2D	Power Supply
449-3	Power Supply
449-375-012-103	Panel
44960-0841	Altimeter
45-0122-1	Searchlight
45-0128	Searchlight
45-0128-1	Searchlight
45-0128-3	Searchlight
45-0128-9	Searchlight
45-0148-10	Landing Light
45-0148-3	Landing Light
45-0148-4	Landing Light

45-0148-7	Landing Light
45-0148-8	Landing Light
45-0148-9	Landing Light
45-0182-1	Searchlight
45-0182-3	Searchlight
45-0182-5	Searchlight
45-0182-7	Searchlight
45-0182-7M	Searchlight
45-0182-9	Searchlight
45-0239-1	Searchlight
45-0339-11	Searchlight
45-0339-13	Searchlight
45-0339-5	Searchlight
45-0339-7	Searchlight
45-0339-9	Searchlight
450-375-001-101	Panel
450-375-004-103	Panel
450-375-011-105	Panel
45100-E2111	Altitude Alerter
452-0115	Transmitter Module
4520115S	Transmitter Module
453-0422-366	Emergency Locator Transmitter
453-5000	Emergency Locator Transmitter
453-5000-(622)	Emergency Locator Transmitter
453-5000-(999)	Emergency Locator Transmitter
453-5001	Emergency Locator Transmitter
453-5001-(232)	Emergency Locator Transmitter
453-5001-(247)	Emergency Locator Transmitter
453-5001-(366)	Emergency Locator Transmitter
453-5001-(419)	Emergency Locator Transmitter
453-5001-(466)	Emergency Locator Transmitter
453-5001-(999)	Emergency Locator Transmitter
453-5001-247	Emergency Locator Transmitter
453-5001-999	Emergency Locator Transmitter
453-5003-(999)	Emergency Locator Transmitter
454-00158-000	Vertical Gyro
454-00162-000	Vertical Gyro
457-1	Voltage Regulator
458-01400	Hydraulic Pressure Indicator
45D16-1	Differential Pressure Switch
45D31-2	Differential Pressure Switch
45D32	Differential Pressure Switch
45D34	Differential Pressure Switch
46700-00	Vertical Speed Indicator
46700-01	Vertical Speed Indicator
46700-13	Vertical Speed Indicator
46700-AB-M	Vertical Speed Indicator
4679-750-80-11	Flap Position Indicator
4679-751-80-11	Flap Position Indicator

4679-752-80-10	Flap Position Indicator
4679-753-80-10	Flap Position Indicator
4679-754-80-10	Flap Position Indicator
4679-764-80-10	Flap Position Indicator
46B	Temperature Indicator
46B2	Temperature Indicator
46B3	Temperature Indicator
46B40	Temperature Indicator
472580-011	Liquid Level Transmitter
4730-01-419-4750	Transmitter Module
473-2	Voltage Regulator
473203-001	Signal Conditioner
473203-003	Fuel Signal Conditioner
473215-001	Fuel Signal Conditioner
47-375-013-101	Panel
475-1	Voltage Regulator
475-2	Voltage Regulator
47-711-020	Airspeed Indicator
47-711-021-1	Dual Tachometer Indicator
47-711-027-1	Tachometer Indicator
47-711-027-3	Tachometer Indicator
47-711-028	Airspeed Indicator
47-711-030-1	Altimeter
47B	Temperature Indicator
47B502	Temperature Indicator
47B503	Temperature Indicator
47B52	Temperature Indicator
480GC01Y02	Electrical Box
48313-94066-103	Rpm Sensor
48313-94214A	Voltage Regulator
483C01AY	Electrical Master Box (Rh)
483GC01Y	Electrical Master Box (Rh)
4863-501-80-11	Trim Indicator
4863-502-80-10	Trim Indicator
4863-503-80-10	Trim Indicator
4863-504-80-11	Trim Indicator
48750-00	Vertical Speed Indicator
48750-01	Vertical Speed Indicator
48750-07	Vertical Speed Indicator
48750-11	Vertical Speed Indicator
48750-1148	Vertical Speed Indicator
48750-1149	Vertical Speed Indicator
48845-2	Airspeed Indicator
490017-1	Blower Assembly
490GC01AY03	Electrical Master Box Left
490GC01Y02	Electrical Box
490GC01Y04	Lh Generator Control Unit
490GC01Y06	Lh Generator Control Unit
49310-31	Pressurization Indicator

495269986-00	Fuel Probe
497-075-015	Airspeed Indicator
49B10	Temperature Indicator
49B11	Temperature Indicator
49B12	Temperature Indicator
49B503	Temperature Indicator
49B522A	Temperature Indicator
49B525	Temperature Indicator
49C4357	Grip Assembly
4D2037-01	Timer For Pneumatic De-Icing System
50003-1	Displacement Gyro
50003-4	Attitude Gyro
5000B-11	Gyro Horizon
5000B-25	Gyro Horizon
5000B-28	Gyro Horizon
5000B-5	Gyro Horizon
5000E	Gyro Horizon
5000F	Gyro Horizon
5000F-10	Gyro Horizon
5000F-11	Gyro Horizon
5000F-5	Gyro Horizon
5000F-7	Gyro Horizon
5000L	Attitude Gyro
5000L-4	Attitude Gyro
5000L-8	Attitude Gyro
5001-3008	Oat Indicator
5002-1009	Transmission Oil Temperature Indicator
5002-1010	Engine Oil Temperature Indicator
5002-1016	Engine Oil Temperature Indicator
5002-1017	Transmission Oil Temperature Indicator
5002-1020	Engine Oil Temperature Indicator
5002-1021	Transmission Oil Temperature Indicator
5002-3002	Engine Oil Temperature Indicator
5002-3003	Transmission Oil Temperature Indicator
500-32-2	MULTI FUNCTION PERSONAL BEACON (PLB)
5006-1004	Turbine Outlet Temperature Indicator
5006-1020	Turbine Outlet Temperature Indicator
5006-1023	Turbine Outlet Temperature Indicator
5006-1027	Turbine Outlet Temperature Indicator
5006-1031	Turbine Outlet Temperature Indicator
5006-1036	Turbine Outlet Temperature Indicator
5006-1038	Turbine Outlet Temperature Indicator
5006-1039	Turbine Outlet Temperature Indicator
5006-1041	Turbine Outlet Temperature Indicator
5006-1045	Turbine Outlet Temperature Indicator
5006-1051	Turbine Outlet Temperature Indicator
5006-1064	Turbine Outlet Temperature Indicator
5006-3011	Turbine Outlet Temperature Indicator
500702-5310	Fan

5008-3001	Turbine Outlet Temperature Indicator
50099-4-2	Airspeed Indicator
500CF	Gyro Horizon
500DCF	Attitude Gyro
500ECF	Gyro Horizon
5010-600-00-10	Failure Indicator
501-1027-01	Attitude Indicator
501-1036-01	Attitude Indicator
501-1036-02	Attitude Indicator
501-1036-03	Attitude Indicator
501-1036-04	Attitude Indicator
501-1036-05	Attitude Indicator
501-1036-06	Attitude Indicator
501-1036-07	Attitude Indicator
501-1063-01	Attitude Indicator
501-1063-02	Attitude Indicator
501-1063-03	Attitude Indicator
501-1063-04	Attitude Indicator
501-1063-05	Attitude Indicator
501-1063-06	Attitude Indicator
501-1063-07	Attitude Indicator
501-1063-08	Attitude Indicator
501-1078-01	Attitude Indicator
501-1078-02	Attitude Indicator
501-1078-03	Attitude Indicator
501-1078-04	Attitude Indicator
501-1078-05	Attitude Indicator
501-1078-06	Attitude Indicator
501-1078-07	Attitude Indicator
501-1078-08	Attitude Indicator
501-1078-09	Attitude Indicator
501-1078-10	Attitude Indicator
501-1078-11	Attitude Indicator
501-1078-12	Attitude Indicator
501-1078-13	Attitude Indicator
501-1099-02	Attitude Indicator
501-1105-01	Attitude Indicator
501-1105-02	Attitude Indicator
501-1105-03	Attitude Indicator
501-1105-04	Attitude Indicator
501-1105-05	Attitude Indicator
501-1105-06	Attitude Indicator
501-1105-07	Attitude Indicator
501-1105-08	Attitude Indicator
501-1105-09	Attitude Indicator
501-1105-10	Attitude Indicator
501-1105-11	Attitude Indicator
501-1113-01	Attitude Indicator
501-1114-01	Attitude Indicator

501-1114-02	Attitude Indicator
501-1116-01	Attitude Indicator
501-1131-01	Attitude Indicator
501-1131-02	Attitude Indicator
501-1150-01	Attitude Indicator
501-1170-01	Attitude Indicator
501-1170-02	Attitude Indicator
501-1170-03	Attitude Indicator
501-1170-04	Attitude Indicator
501-1170-05	Attitude Indicator
501-1170-06	Attitude Indicator
501-1170-07	Attitude Indicator
501-1170-08	Attitude Indicator
501-1170-09	Attitude Indicator
501-1170-10	Attitude Indicator
501-1170-11	Attitude Indicator
501-1170-12	Attitude Indicator
501-1170-13	Attitude Indicator
501-1170-14	Attitude Indicator
501-1170-15	Attitude Indicator
501-1170-16	Attitude Indicator
501-1170-17	Attitude Indicator
501-1170-18	Attitude Indicator
501-1170-19	Attitude Indicator
501-1170-20	Attitude Indicator
501-1170-21	Attitude Indicator
501-1170-22	Attitude Indicator
501-1170-23	Attitude Indicator
501-1170-24	Attitude Indicator
501-1170-25	Attitude Indicator
501-1170-26	Attitude Indicator
501-1170-27	Attitude Indicator
501-1195-01	Attitude Indicator
501-1195-02	Attitude Indicator
501-1197-01	Attitude Indicator
501-1197-02	Attitude Indicator
501-1197-03	Attitude Indicator
501-1197-04	Attitude Indicator
501-1197-05	Attitude Indicator
501-1197-06	Attitude Indicator
501-1197-07	Attitude Indicator
501-1197-08	Attitude Indicator
501-1197-09	Attitude Indicator
501-1197-10	Attitude Indicator
501-1197-11	Attitude Indicator
501-1197-12	Attitude Indicator
501-1197-14	Attitude Indicator
501-1197-15	Attitude Indicator
501-1197-16	Attitude Indicator

501-1197-17	Attitude Indicator
501-1197-18	Attitude Indicator
501-1197-19	Attitude Indicator
501-1197-20	Attitude Indicator
501-1197-21	Attitude Indicator
501-1197-22	Attitude Indicator
501-1197-23	Attitude Indicator
501-1197-24	Attitude Indicator
501-1197-25	Attitude Indicator
501-1197-26	Attitude Indicator
501-1197-27	Attitude Indicator
501-1197-28	Attitude Indicator
501-1197-29	Attitude Indicator
501-1197-31	Attitude Indicator
501-1197-32	Attitude Indicator
501-1197-33	Attitude Indicator
501-1210-01	Vertical Gyro
501-1224-01	Gyro Horizon
501-1224-02	Vertical Gyro
501-1225-01	Displacement Gyro
501-1228-01	Power Supply
501-1228-02	Power Supply
501-1228-03	Power Supply
501-1228-04	Power Supply
501-1228-05	Power Supply
501-1228-06	Power Supply
501-1228-07	Power Supply
501-1228-08	Power Supply
501-1228-09	Power Supply
501-1228-10	Power Supply
501-1228-11	Power Supply
501-1228-12	Power Supply
501-1228-13	Power Supply
501-1228-14	Power Supply
501-1228-15	Power Supply
501-1255-01	Displacement Gyro
501-1277-01	Attitude Indicator
501-1278-01	Attitude Indicator
501-1278-02	Attitude Indicator
501-1295-01	Attitude Indicator
501-1296-01	Attitude Indicator
501-1296-02	Attitude Indicator
501-1296-03	Attitude Indicator
501-1296-04	Attitude Indicator
501-1296-05	Attitude Indicator
501-1296-06	Attitude Indicator
501-1296-07	Attitude Indicator
501-1296-08	Attitude Indicator
501-1296-09	Attitude Indicator

501-1297-01	Attitude Indicator
501-1318-01	Static Converter
501-1412-01	Attitude Indicator
501-1412-02	Attitude Indicator
501-1412-03	Attitude Indicator
501-1412-04	Attitude Indicator
501-1412-05	Attitude Indicator
501-1412-06	Attitude Indicator
501-1412-07	Attitude Indicator
501-1453-01	Attitude Indicator
501-1455-01	Attitude Indicator
501-1492-01	Attitude Indicator
501-1492-02	Attitude Indicator
501-1617-01	Attitude Indicator
501-1648-01	Attitude Indicator
501-1648-02	Attitude Indicator
501-1664-01	Attitude Indicator
501-1665-01	Attitude Indicator
501-1709-01	Attitude Indicator
501-1712-02	Emergency Power Supply
501-1748-01	Attitude Indicator
501-1753-04	Attitude Indicator
501-1798-01	Attitude Indicator
501-1811-01	Attitude Indicator
501-1812-01	Attitude Indicator
501-1813-01	Attitude Indicator
501-1818-01	Attitude Indicator
501-1828-01	Attitude Indicator
501-1838-01	Attitude Indicator
501-1844-01	Attitude Indicator
501-1848-01	Attitude Indicator
501-1849-01	Attitude Indicator
501-1850-01	Attitude Indicator
501-1874-06	Attitude Indicator
501-1874-08	Attitude Indicator
501-1874-09	Attitude Indicator
501-1874-10	Attitude Indicator
5018-110-00-10	ENGINE SHUTDOWN DETECTION
502-0011-002	Audio Control Panel
502-0011-003	Audio Control Panel
502-0011-004	Audio Control Panel
5021-1028	Turbine Outlet Temperature Indicator
5021-3001	Turbine Outlet Temperature Indicator
5021-3002	Turbine Outlet Temperature Indicator
5021-3009	Turbine Outlet Temperature Indicator
5021-3030	Turbine Outlet Temperature Indicator
5021-3033	Turbine Outlet Temperature Indicator
5021-3039	Turbine Outlet Temperature Indicator
5021-3048	Turbine Outlet Temperature Indicator

50234-1	Hydraulic Pressure Transmitter
5029-3003	Turbine Outlet Temperature Indicator
5029-3004	Turbine Outlet Temperature Indicator
5029-3014	Turbine Outlet Temperature Indicator
502BL10	Temperature Indicator
502BL10A	Temperature Indicator
502BL3	Temperature Indicator
502BL3B	Temperature Indicator
502BL3E	Temperature Indicator
502BL3G	Temperature Indicator
5032-1017	Turbine Outlet Temperature Indicator
5032-1019	Turbine Outlet Temperature Indicator
5032-1025	Turbine Outlet Temperature Indicator
5032-1051	Turbine Outlet Temperature Indicator
5032-1119	Turbine Outlet Temperature Indicator
5032-3001	Turbine Outlet Temperature Indicator
5032-3016	Turbine Outlet Temperature Indicator
5032-3018	Turbine Outlet Temperature Indicator
5032-3019	Turbine Outlet Temperature Indicator
5032-3020	Turbine Outlet Temperature Indicator
5032-3047	Turbine Outlet Temperature Indicator
5032-3069	Turbine Outlet Temperature Indicator
5032-3073	Turbine Outlet Temperature Indicator
5032-3075	Turbine Outlet Temperature Indicator
5032-3085	Turbine Outlet Temperature Indicator
5032-3091	Turbine Outlet Temperature Indicator
5032-3092	Turbine Outlet Temperature Indicator
5032-3093	Turbine Outlet Temperature Indicator
5032-3096	Turbine Outlet Temperature Indicator
5032-3097	Turbine Outlet Temperature Indicator
5032-3101	Inter Turbine Temperature Indicator
5032-3106	Turbine Outlet Temperature Indicator
5032-3134	Tgt Indicator
5032-3144	Inter Turbine Temperature Indicator
5032-3153	Turbine Outlet Temperature Indicator
50-324284	Tachometer Indicator
50-325285-1	Tachometer Indicator
5032-8101	Inter Turbine Temperature Indicator
5035P	Encoding Altimeter
5035P P.22	Encoding Altimeter
5035P2	Altimeter
5035P2-P13	Altimeter
5035P2-P26	Altimeter
5035P2-P42	Altimeter
5035P2-P44	Encoding Altimeter
5035P2-P44 P.44	Encoding Altimeter
5035-P42	Altimeter
5035PB-P57	Altimeter
5035P-P23	Encoding Altimeter

5035P-P45	Encoding Altimeter
5035P-P46	Altimeter
5035P-P59	Encoding Altimeter In Hg
5035P-P60	Encoding Altimeter Mb
50-380034	Tachometer Indicator
50-380034-1	Tachometer Indicator
50-380034-3	Tachometer Indicator
50-380035	Propeller Speed Indicator
50-380035-1	Propeller Speed Indicator
50-380035-3	Propeller Speed Indicator
50-380035-5	Propeller Speed Indicator
50-3800-43-3	Tachometer Indicator
50-380094-9	Altimeter
50-383034-5	Tachometer Indicator
50-389057-1	Tach Generator
504-0002-902	Gyro Horizon
504-0004-901	Turn & Slip Indicator
504-0004-902	Turn & Slip Indicator
504-0004-903	Turn & Slip Indicator
504-0004-910	Turn & Slip Indicator
504-0004-911	Turn & Slip Indicator
504-0006-913	Attitude Gyro
504-0006-914	Gyro Horizon
504-0010-907	Gyro Horizon
504-0010-909	Attitude Gyro
504-0017-901	Gyro Horizon
504-0017-903	Gyro Horizon
504-0017-905	Gyro Horizon
504-0017-907	Gyro Horizon
504-0017-908	Gyro Horizon
504-0017-909	Gyro Horizon
504-0017-910	Gyro Horizon
504-0017-911	Gyro Horizon
504-0017-912	Gyro Horizon
504-0017-913	Gyro Horizon
504-0017-914	Gyro Horizon
504-0017-916	Gyro Horizon
504-0017-917	Gyro Horizon
504-0017-918	Gyro Horizon
504-0017-921	Gyro Horizon
504-0017-922	Gyro Horizon
504-0017-923	Gyro Horizon
504-0017-924	Gyro Horizon
504-0017-925	Gyro Horizon
504-0017-926	Gyro Horizon
504-0017-928	Gyro Horizon
504-0017-930	Gyro Horizon
504-0017-931	Gyro Horizon
504-0017-932	Gyro Horizon

504-0017-933	Gyro Horizon
504-0017-934	Gyro Horizon
504-0021-904	Gyro Horizon
504-0024-901	Gyro Horizon
504-0024-902	Gyro Horizon
504-0024-903	Gyro Horizon
504-0024-904	Gyro Horizon
504-0024-905	Gyro Horizon
504-0024-906	Gyro Horizon
504-0024-907	Gyro Horizon
504-0027-911	ATTITUDE INDICATOR
504-0028-901	Gyro Horizon
504-0028-902	Gyro Horizon
504-0028-903	Gyro Horizon
504-0028-904	Gyro Horizon
504-0028-905	Gyro Horizon
504-0028-906	Gyro Horizon
504-0028-907	Gyro Horizon
504-0028-908	Gyro Horizon
504-0028-909	Gyro Horizon
504-0028-910	Gyro Horizon
504-0028-911	Gyro Horizon
504-0028-912	Gyro Horizon
504-0028-913	Gyro Horizon
504-0028-914	Gyro Horizon
504-0030-909	Gyro Horizon
504-0030-910	Gyro Horizon
504-0030-911	Gyro Horizon
504-0030-912	Gyro Horizon
504-0030-913	Gyro Horizon
504-0030-914	Gyro Horizon
504-0030-915	Gyro Horizon
504-0030-916	Gyro Horizon
504-0030-918	Gyro Horizon
504-0030-919	Gyro Horizon
504-0030-920	Gyro Horizon
504-0031-901	Gyro Horizon
504-0031-902	Gyro Horizon
504-0031-903	Gyro Horizon
504-0031-904	Gyro Horizon
504-0031-905	Gyro Horizon
504-0031-906	Gyro Horizon
504-0031-907	Gyro Horizon
504-0031-908	Gyro Horizon
504-0031-909	Gyro Horizon
504-0031-910	Gyro Horizon
504-0031-911	Gyro Horizon
504-0031-912	Gyro Horizon
504-0031-913	Gyro Horizon

504-0031-914	Gyro Horizon
504-0031-915	Gyro Horizon
504-0031-916	Gyro Horizon
504-0031-917	Gyro Horizon
504-0032-902	Gyro Horizon
504-0032-904	Gyro Horizon
504-0032-906	Gyro Horizon
504-0032-911	Gyro Horizon
504-0032-912	Gyro Horizon
504-0032-916	Gyro Horizon
504-0032-917	Gyro Horizon
504-0032-932	Gyro Horizon
504-0033-921	Gyro Horizon
504-0033-922	Gyro Horizon
504-0033-923	Gyro Horizon
504-0033-924	Gyro Horizon
504-0033-925	Gyro Horizon
504-0033-926	Gyro Horizon
504-0033-927	Gyro Horizon
504-0033-928	Gyro Horizon
504-0033-929	Gyro Horizon
504-0033-930	Gyro Horizon
504-0033-931	Gyro Horizon
504-0033-932	Gyro Horizon
504-0033-933	Gyro Horizon
504-0033-934	Gyro Horizon
504-0035-901	Gyro Horizon
504-0035-902	Gyro Horizon
504-0035-903	Gyro Horizon
504-0035-904	Gyro Horizon
504-0035-905	Gyro Horizon
504-0035-906	Gyro Horizon
504-0035-907	Gyro Horizon
504-0035-908	Gyro Horizon
504-0035-909	Gyro Horizon
504-0035-910	Gyro Horizon
504-0035-911	Gyro Horizon
504-0035-912	Gyro Horizon
504-0035-913	Gyro Horizon
504-0035-914	Gyro Horizon
504-0035-915	Gyro Horizon
504-0035-916	Gyro Horizon
504-0035-917	Gyro Horizon
504-0035-918	Gyro Horizon
504-0035-921	Gyro Horizon
504-0035-922	Gyro Horizon
504-0035-923	Gyro Horizon
504-0035-924	Gyro Horizon
504-0035-925	Gyro Horizon

504-0035-926	Gyro Horizon
504-0037-901	Gyro Horizon
504-0037-902	Gyro Horizon
504-0037-903	Gyro Horizon
504-0037-904	Gyro Horizon
504-0038-901	Gyro Horizon
504-0038-902	Gyro Horizon
504-0038-903	Gyro Horizon
504-0038-904	Gyro Horizon
504-0038-905	Gyro Horizon
504-0038-906	Gyro Horizon
504-0038-907	Gyro Horizon
504-0038-908	Gyro Horizon
504-0038-909	Gyro Horizon
504-0038-910	Gyro Horizon
504-0038-911	Gyro Horizon
504-0038-913	Gyro Horizon
504-0038-914	Gyro Horizon
504-0040-901	Gyro Horizon
504-0040-902	Gyro Horizon
504-0040-903	Gyro Horizon
504-0040-904	Gyro Horizon
504-0040-905	Gyro Horizon
504-0040-906	Gyro Horizon
504-0040-907	Gyro Horizon
504-0040-908	Gyro Horizon
504-0040-909	Gyro Horizon
504-0040-910	Gyro Horizon
504-0041-901	Gyro Horizon
504-0041-902	Gyro Horizon
504-0042-901	Gyro Horizon
504-0042-902	Gyro Horizon
504-0042-903	Gyro Horizon
504-0042-904	Gyro Horizon
504-0042-905	Gyro Horizon
504-0043-901	Gyro Horizon
504-0044-901	Gyro Horizon
504-0045-901	Gyro Horizon
504-0045-902	Gyro Horizon
504-0045-903	Gyro Horizon
504-0045-904	Gyro Horizon
504-0045-914	Gyro Horizon
504-0046-901	Gyro Horizon
504-0048-901	Gyro Horizon
504-0048-902	Gyro Horizon
504-0048-903	Gyro Horizon
504-0051-901	Gyro Horizon
504-0052-901	Gyro Horizon
504-0053-901	Gyro Horizon

504-0057-901	Gyro Horizon
504-0110-901	Gyro Horizon
504-0110-902	Gyro Horizon
504-0110-903	Gyro Horizon
504-0110-904	Gyro Horizon
504-0110-905	Gyro Horizon
504-0110-906	Gyro Horizon
504-0110-907	Gyro Horizon
504-0110-908	Gyro Horizon
504-0110-909	Gyro Horizon
504-0110-910	Gyro Horizon
504-0110-911	Gyro Horizon
504-0110-912	Gyro Horizon
504-0110-913	Gyro Horizon
504-0110-914	Gyro Horizon
504-0110-915	Gyro Horizon
504-0110-916	Gyro Horizon
504-0110-917	Gyro Horizon
504-0110-918	Gyro Horizon
504-0110-919	Gyro Horizon
504-0110-920	Gyro Horizon
504-0110-921	Gyro Horizon
504-0110-922	Gyro Horizon
504-0110-923	Gyro Horizon
504-0110-924	Gyro Horizon
504-0110-925	Gyro Horizon
504-0110-926	Gyro Horizon
504-0110-927	Gyro Horizon
504-0111-901	Gyro Horizon
504-0111-902	Gyro Horizon
504-0111-903	Gyro Horizon
504-0111-904	Gyro Horizon
504-0111-905	Gyro Horizon
504-0111-906	Gyro Horizon
504-0111-907	Gyro Horizon
504-0111-908	Gyro Horizon
504-0111-909	Gyro Horizon
504-0111-910	Gyro Horizon
504-0111-911	Gyro Horizon
504-0111-912	Gyro Horizon
504-0111-913	Gyro Horizon
504-0111-914	Gyro Horizon
504-0111-915	Gyro Horizon
504-0111-916	Gyro Horizon
504-0111-917	Gyro Horizon
504-0111-918	Gyro Horizon
504-0111-919	Gyro Horizon
504-0111-920	Gyro Horizon
504-0111-921	Gyro Horizon

504-0111-922	Gyro Horizon
504-0111-923	Gyro Horizon
504-0111-924	Gyro Horizon
504-0111-925	Gyro Horizon
504-0111-926	Gyro Horizon
504-0111-927	Gyro Horizon
504-0111-928	Gyro Horizon
504-0111-929	Gyro Horizon
504-0111-930	Gyro Horizon
504-0111-931	Gyro Horizon
504-0111-932	Gyro Horizon
504-0111-933	Gyro Horizon
504-0111-934	Gyro Horizon
504-0111-935	Gyro Horizon
504-0111-936	Gyro Horizon
504-0111-937	Gyro Horizon
504-0111-938	Gyro Horizon
504-0111-939	Gyro Horizon
504-0111-940	Gyro Horizon
504-0111-941	Gyro Horizon
504-0111-942	Gyro Horizon
504-0111-943	Gyro Horizon
504-0111-944	Gyro Horizon
504-0121-901	Gyro Horizon
504-0121-902	Gyro Horizon
504-0121-903	Gyro Horizon
504-0121-904	Gyro Horizon
504-0121-905	Gyro Horizon
504-0121-906	Gyro Horizon
504-0121-907	Gyro Horizon
504-0121-908	Gyro Horizon
504-0121-909	Gyro Horizon
504-0121-910	Gyro Horizon
504-0121-911	Gyro Horizon
504-0121-912	Gyro Horizon
504-0121-913	Gyro Horizon
504-0121-914	Gyro Horizon
504-0121-915	Gyro Horizon
504-0121-916	Gyro Horizon
504-0121-917	Gyro Horizon
504-0121-918	Gyro Horizon
504-0121-919	Gyro Horizon
504-0121-920	Gyro Horizon
504-0121-921	Gyro Horizon
504-0121-923	Gyro Horizon
504-0121-924	Gyro Horizon
504-0121-925	Gyro Horizon
504-0121-927	Gyro Horizon
504-0121-929	Gyro Horizon

504-0121-931	Gyro Horizon
504-0122-901	Gyro Horizon
504-0122-902	Gyro Horizon
504-0122-903	Gyro Horizon
504-0122-904	Gyro Horizon
504-0122-905	Gyro Horizon
504-0122-906	Gyro Horizon
504-0122-907	Gyro Horizon
504-0122-908	Gyro Horizon
504-0122-910	Gyro Horizon
504-0122-911	Gyro Horizon
504-0122-912	Gyro Horizon
504-0122-914	Gyro Horizon
504-0122-915	Gyro Horizon
504-0122-916	Gyro Horizon
504-0122-917	Gyro Horizon
504-0122-918	Gyro Horizon
504-0122-919	Gyro Horizon
504-0122-920	Gyro Horizon
504-0125-901	Gyro Horizon
504-0126-901	Gyro Horizon
504-0126-902	Gyro Horizon
504-0127-901	Gyro Horizon
504-0127-902	Gyro Horizon
504-0128-901	Gyro Horizon
504-0129-901	Gyro Horizon
504-070-907-102	Motor Converter Assembly
505-0002-904	Directional Gyro
505-0010-901	Directional Gyro
505-0010-902	Directional Gyro
505-0010-904	Directional Gyro
505-0017-904	Directional Gyro
505-0023-907	Directional Gyro
505-0031-901	Directional Gyro
505-0031-902	Directional Gyro
505-0031-903	Directional Gyro
505-0031-904	Directional Gyro
505-0031-905	Directional Gyro
505-0031-906	Directional Gyro
505-0031-907	Directional Gyro
505-0031-909	Directional Gyro
505-0031-910	Directional Gyro
505-0031-911	Directional Gyro
505-0031-912	Directional Gyro
505-0031-916	Directional Gyro
505-0031-926	Directional Gyro
505-0031-927	Directional Gyro
505-0031-928	Directional Gyro
505-0031-929	Directional Gyro

505-0031-930	Directional Gyro
505-0031-931	Directional Gyro
505-0031-933	Directional Gyro
505-0033-925	Attitude Gyro
505-0033-926	Attitude Gyro
505-0033-927	Attitude Gyro
505-0033-928	Attitude Gyro
505-0033-929	Attitude Gyro
505-0033-930	Attitude Gyro
505-0033-931	Attitude Gyro
505-0033-932	Attitude Gyro
505-0033-933	Attitude Gyro
505-0033-934	Attitude Gyro
505-0035-909	Attitude Gyro
505-2A	Gyro Horizon
505-2B	Gyro Horizon
505-2BG	Gyro Horizon
505-2BK	Gyro Horizon
505-2BKS	Gyro Horizon
505-2BS	Gyro Horizon
505-2C	Gyro Horizon
50579-3	Pressure Transmitter
50629-1	Pressure Transmitter
507-0020-901	Turn Coordinator
507-0020-902	Turn Coordinator
507-0020-903	Turn Coordinator
507-0020-904	Turn Coordinator
507-0020-905	Turn Coordinator
507-0020-906	Turn Coordinator
507-0020-907	Turn Coordinator
507-0020-908	Turn Coordinator
507-0020-909	Turn Coordinator
507-0020-910	Turn Coordinator
507-0020-911	Turn Coordinator
507-0020-912	Turn Coordinator
507-0020-913	Turn Coordinator
507-0020-914	Turn Coordinator
507-0020-915	Turn Coordinator
507-0020-916	Turn Coordinator
507-0020-917	Turn Coordinator
507-0020-918	Turn Coordinator
507-0020-919	Turn Coordinator
507-0020-920	Turn Coordinator
509-0001-915	Turn & Slip Indicator
509-0004-901	Turn & Slip Indicator
509-0004-902	Turn & Slip Indicator
509-0004-903	Turn & Slip Indicator
509-0004-904	Turn & Bank Indicator
509-0004-910	Turn & Slip Indicator

509-0004-911	Turn & Slip Indicator
50971-2	Signal Conditioner
510-10A	Gyro Horizon
510-10B	Gyro Horizon
510-10C	Gyro Horizon
510-17A	Gyro Horizon
510-17B	Gyro Horizon
510-1A	Gyro Horizon
510-1B	Gyro Horizon
510-1F	Gyro Horizon
510-1G	Gyro Horizon
510-1J	Gyro Horizon
510-1K	Gyro Horizon
510-1M	Gyro Horizon
510-1N	Gyro Horizon
510-1P	Gyro Horizon
510-1R	Gyro Horizon
510-21A/AH	Gyro Horizon
510-21B/BH	Gyro Horizon
510-21C/CH	Gyro Horizon
510-21D/DH	Gyro Horizon
510-21E/EH	Gyro Horizon
510-21F	Gyro Horizon
510-22A/AH	Gyro Horizon
510-22B/BH	Gyro Horizon
510-22C/CH	Gyro Horizon
510-22D/DH	Gyro Horizon
510-22E/EH	Gyro Horizon
510-22F/FH	Gyro Horizon
510-22G/GH	Gyro Horizon
510-22H/HH	Gyro Horizon
510-22J	Gyro Horizon
510-22K	Gyro Horizon
510-22LH	Gyro Horizon
510-22M	Gyro Horizon
510-22N	Gyro Horizon
510-24J/JH	Gyro Horizon
510-24K/KH	Gyro Horizon
510-24L	Gyro Horizon
510-24L/LH	Gyro Horizon
510-24L2	Gyro Horizon
510-24M/MH	Gyro Horizon
510-24N	Gyro Horizon
510-24P	Gyro Horizon
510-24R	Gyro Horizon
510-24S	Gyro Horizon
510-24V	Gyro Horizon
510-24W	Gyro Horizon
510-25A	Gyro Horizon

510-27A	Gyro Horizon
510-27B	Gyro Horizon
510-27C	Gyro Horizon
510-27E	Gyro Horizon
510-27F	Gyro Horizon
510-27G	Gyro Horizon
510-27H	Gyro Horizon
510-27J	Gyro Horizon
510-27K	Gyro Horizon
510-27L	Gyro Horizon
510-27M	Gyro Horizon
510-27N	Gyro Horizon
510-29A/AH	Gyro Horizon
510-29B/BH	Gyro Horizon
510-29C/CH	Gyro Horizon
510-29D/DH	Gyro Horizon
510-30B	Gyro Horizon
510-30BK	Gyro Horizon
510-30BKW	Gyro Horizon
510-30BW	Gyro Horizon
510-30C	Gyro Horizon
510-30D	Gyro Horizon
510-30DK	Gyro Horizon
510-30DKW	Gyro Horizon
510-30DW	Gyro Horizon
510-31A	Gyro Horizon
510-31B	Gyro Horizon
510-32A	Gyro Horizon
510-32AK	Gyro Horizon
510-32B	Gyro Horizon
510-32BK	Gyro Horizon
510-33A	Gyro Horizon
510-34A	Gyro Horizon
510-35A	Gyro Horizon
510-35B	Gyro Horizon
510-35C	Gyro Horizon
510-35D	Gyro Horizon
510-36A	Gyro Horizon
510-37A	Gyro Horizon
510-37B	Gyro Horizon
510-37C	Gyro Horizon
510-39A	Gyro Horizon
510-3A	Gyro Horizon
510-40A	Gyro Horizon
510-41A	Attitude Indicator
510-44A	Gyro Horizon
510-5A	Gyro Horizon
510-5C	Gyro Horizon
510-6020-003	Inverter

510-7A	Gyro Horizon
510-7B	Gyro Horizon
510-7C	Gyro Horizon
510-8A	Gyro Horizon
510-8B	Gyro Horizon
510-8C	Gyro Horizon
510-8D	Gyro Horizon
510-8E	Gyro Horizon
510-8F	Gyro Horizon
510-8G	Gyro Horizon
510-8H	Gyro Horizon
51-2003	Frequency Meter
51-2004	Cabin Temperature Indicator
51-2005	Duct Air Temperature Indicator
5126-220-80-11	Fuel Temperature Indicator
5126-223-80-11	Fuel Temperature Indicator
51500-008	Protection Panel
51-5005	Dual Ammeter
51509-001	D.C. Generator Control Unit
51509-001R	D.C. Generator Control Unit
51509-002	Voltage Regulator
51509-002A	Voltage Regulator
51509-002B	Voltage Regulator
51509-002R	Voltage Regulator
51509-200	Voltage Regulator
51522-000	D.C. Generator Control Unit
51522-003	D.C. Generator Control Unit
51522-005	D.C. Generator Control Unit
51522-006	D.C. Generator Control Unit
51522-006A	D.C. Generator Control Unit
51522-007	D.C. Generator Control Unit
51530-001	D.C. Generator Control Unit
51530-001A	D.C. Generator Control Unit
51530-001D	D.C. Generator Control Unit
51530-001E	D.C. Generator Control Unit
51530-001E1	Generator Control Unit
51530-001EI	D.C. Generator Control Unit
51530-006	D.C. Generator Control Unit
51530-006A	Generator Control Unit
51530-006B	Dc Generator Control Unit
51530-007	Generator Control Unit
51530-007A	Dc Generator Control Unit
51530-007B	Generator Control Unit
51530-007D	Dc Generator Control Unit
51530-008	Dc Generator Control Unit
51538-005A	Voltage Regulator
51539-002A	Generator Control Unit
51539-002B	Generator Control Unit
51539-002M	Generator Control Unit

51539-002N	D.C. Generator Control Unit
51565-000	Voltage Regulator
51565-000R	Voltage Regulator
51565-001	Voltage Regulator
51565-001R	Voltage Regulator
51576-003	Voltage Regulator
51576-003	Voltage Regulator
515E100	Displacement Gyro
515E100-2	Displacement Gyro
5160-458	Light
51640-0010	Gyro Horizon
518-28007-201	Encoding Altimeter
518-28007-202	Encoding Altimeter
518-28007-203	Encoding Altimeter
518-28007-204	Encoding Altimeter
518-28007-205	Encoding Altimeter
518-28007-206	Encoding Altimeter
518-28007-207	Encoding Altimeter
518-28007-208	Encoding Altimeter
518-28007-209	Encoding Altimeter
518-28007-210	Encoding Altimeter
518-28007-211	Encoding Altimeter
518-28007-212	Encoding Altimeter
518-28007-213	Encoding Altimeter
518-28007-214	Encoding Altimeter
518-28007-215	Encoding Altimeter
518-28007-216	Encoding Altimeter
518-28007-217	Encoding Altimeter
518-28007-218	Encoding Altimeter
518-28007-221	Encoding Altimeter
518-28007-224	Encoding Altimeter
518-28007-227	Encoding Altimeter
518-28007-228	Encoding Altimeter
518-28007-232	Encoding Altimeter
518-28007-427	Encoding Altimeter
518-28007-429	Encoding Altimeter
518-28007-431	Encoding Altimeter
518-28007-433	Encoding Altimeter
518-28007-923	Encoding Altimeter
519-22702-032	Encoding Altimeter
519-22702-501	Encoding Altimeter
519-22702-502	Encoding Altimeter
519-22702-503	Encoding Altimeter
519-22702-511	Encoding Altimeter
519-22702-512	Encoding Altimeter
519-22702-513	Encoding Altimeter
519-22702-531	Encoding Altimeter
519-22702-532	Encoding Altimeter
519-22702-533	Encoding Altimeter

519-22702-541	Encoding Altimeter
519-22702-542	Encoding Altimeter
519-22702-543	Encoding Altimeter
519-28702-502	Encoding Altimeter
519-28702-552	Encoding Altimeter
519-28704-E2101	Encoding Altimeter
519-28704-F2101	Encoding Altimeter
51B2214	Cabin Temperature Indicator
51B2214/1	Cabin Temperature Indicator
51B2232/1	Duct Air Temperature Indicator
51B5518	Dual Ammeter
51B5518/1	Dual Ammeter
51B5520	Dual Ammeter
520 7137 011	Rmi
520 7137 012	Rmi
520 7137 013	Rmi
520 7137 014	Rmi
520 7137 015	Rmi
520 7137 016	Rmi
520 7137 017	Rmi
520 7137 018	Rmi
520 7137 021	Rmi
520 7137 022	Rmi
520 7137 023	Rmi
520 7137 024	Rmi
520 7137 025	Rmi
520 7137 026	Rmi
520 7137 027	Rmi
520 7137 028	Rmi
5-2000-07	Directional Gyro
520-10B	Attitude Indicator
520-11B	Attitude Indicator
520-12B	Attitude Indicator
520-15B	Attitude Indicator
520-16B	Attitude Indicator
520-1A	Attitude Indicator
520-1AG	Attitude Indicator
520-1B	Attitude Indicator
520-1BG	Attitude Indicator
520-2A	Attitude Indicator
520-2AG	Attitude Indicator
520-2B	Attitude Indicator
520-2BG	Attitude Indicator
520-3137-317	Radio Magnetic Indicator
520-3A	Attitude Indicator
520-3AG	Attitude Indicator
520-3B	Attitude Indicator
520-3BG	Attitude Indicator
520-4210-002	Horizontal Situation Indicator

520-4A	Attitude Indicator
520-4AG	Attitude Indicator
520-4B	Attitude Indicator
520-4BG	Attitude Indicator
5205160 006	Course Indicator
520-5B	Attitude Indicator
520-6B	Attitude Indicator
520-7100-001	Converter
520-7100-002	Converter
520-7143-004	Rmi
520-9130003	Horizontal Situation Indicator
520-9130-003	Horizontal Situation Indicator
5209130-004	Horizontal Situation Indicator
520-9130-004	Horizontal Situation Indicator
520-9130007	Horizontal Situation Indicator
520-9130008	Horizontal Situation Indicator
520-9130103	Horizontal Situation Indicator
520-9130104	Horizontal Situation Indicator
520-9130107	Horizontal Situation Indicator
520-9130108	Horizontal Situation Indicator
520-9132003	Horizontal Situation Indicator
520-9132004	Horizontal Situation Indicator
520-9132007	Horizontal Situation Indicator
520-9132008	Horizontal Situation Indicator
520-9132103	Horizontal Situation Indicator
520-9132104	Horizontal Situation Indicator
520-9132107	Horizontal Situation Indicator
520-9132108	Horizontal Situation Indicator
520-9135003	Horizontal Situation Indicator
520-9135004	Horizontal Situation Indicator
520-9135007	Horizontal Situation Indicator
520-9135008	Horizontal Situation Indicator
520-9135103	Horizontal Situation Indicator
520-9135104	Horizontal Situation Indicator
520-9135107	Horizontal Situation Indicator
520-9135108	Horizontal Situation Indicator
520-9137003	Horizontal Situation Indicator
5209137-004	Horizontal Situation Indicator
520-9137004	Horizontal Situation Indicator
520-9137007	Horizontal Situation Indicator
520-9137008	Horizontal Situation Indicator
520-9137103	Horizontal Situation Indicator
520-9137104	Horizontal Situation Indicator
520-9137107	Horizontal Situation Indicator
520-9137108	Horizontal Situation Indicator
520-9B	Attitude Indicator
521CUF1	Altitude Alerter
522-1400-000	R.M.I. Servo Amplifier
522-1836-00	Adf Receiver

522-1836-013	Adf Receiver
522-1936-047	Slaving Indicator
522-1936-048	Slaving Indicator
522-2412-00	Horizontal Situation Indicator
522-2412-000	Horizontal Situation Indicator
522-2450-011	V.O.R. Receiver
522-2450-015	V.O.R. Receiver
522-2638-006	Course Indicator
522-2638-007	Course Indicator
522-2638-008	H.S.I.
522-2644-011	Slaving Accessory
522-2644-013	Slaving Accessory
522-2996-000	Marker Beacon Receiver
522-3241-00	Directional Gyro
522-3241-000	Directional Gyro
522-3467-013	Receiver-Vor/IlS
522-3614-000	Vhf Comm Control
522-3616-202	Vhf Nav Control
522-3617-000	Vhf Comm Control
522487-1	Battery Temp Monitor
522-4945-001	Flux Detector
52441B	Handgrip
52D137-1332	Horizontal Situation Indicator
52D137-1333	Horizontal Situation Indicator
52D67	Attitude Gyro
52D75-3	Turn & Bank Indicator
52D75-3M	Turn & Bank Indicator
52D75-4	Turn & Bank Indicator
52D75-4M	Turn & Bank Indicator
5301-6	Torque Transmitter
5301-6A	Torque Transmitter
5301-6B	Torque Transmitter
5301-6C	Torque Transmitter
530-24779-202	Airspeed Indicator
530-34090-402	Airspeed Indicator
5306-155-00-10	Engine Oil Pressure Indicator
5306-160-00-11	Engine Oil Pressure Indicator
5306-161-20-10	Engine Oil Pressure Indicator
5306-166-00-10	Engine Oil Pressure Indicator
5306-167-20-10	Engine Oil Pressure Indicator
5306-167-20-11	Engine Oil Pressure Indicator
5306-168-00-10	Engine Oil Pressure Indicator
5306-169-20-10	Engine Oil Pressure Indicator
5306-255-00-11	Oil Temperature Indicator
5306-256-00-10	Engine Oil Pressure Indicator
5306-261-00-11	Oil Temperature Indicator
5306-265-00-10	Oil Temperature Indicator
5306-266-20-10	Oil Temperature Indicator
5306-266-20-11	Oil Temperature Indicator

5306-267-00-10	Oil Temperature Indicator
5306-267-20-10	Oil Temperature Indicator
5306-268-20-10	Oil Temperature Indicator
5309-155-00-11	Fuel Pressure Indicator
5309-158-00-10	Fuel Pressure Indicator
5309-159-20-10	Fuel Pressure Indicator
5309-159-20-11	Fuel Pressure Indicator
53-19-3	Pressure Switch
532-38105-202	Airspeed Indicator
53-39-3	Oil Pressure Transmitter
53-40-8	Pressure Switch
5346-220-80-10	Cabin Duct Temp Indicator
5347-700-80-10	Dual Low Pressure Rotor Speed Indicator
5348-200-80-10	Fuel Tank Temperature Indicator
53-51-6	Torque Transmitter
53-51-6-1	Torque Transmitter
535201-1	Landing Gear Selector
5352-6	Torque Transmitter
53-52-6	Torque Transmitter
5386-156-00-10	Pressure Indicator
5396-513-1	Egt Indicator
5400-7295-1	Turn Coordinator
5400-7295-2	Turn Coordinator
5400-7425-1	Turn Coordinator
5400-7425-2	Turn Coordinator
540-22722-004	Altitude Alerter
540264-2-1	Actuator
540-45100-E2111	Altitude Alerter
54174-10028-1	Transducer
54174-10028-102	Pressure Transducer
54174-10028-102T	Pressure Transducer
54174-10028-105	Pressure Transducer
5418227-29	Airspeed Indicator
5427-115-80-10	Dual Hydraulic Pressure Indicator
5427-116-80-10	Dual De-Icing Pressure Indicator
5427-218-80-10	Dual Fuel Temperature Indicator
5427-361-80-10	Engine Oil Temperature & Pressure Indicator
5427-404-80-10	Dual Temperature Indicator
5428-150-80-10	Park Brake Hydraulic Pressure Indicator
5448-706-91-10	N1 Indicator
5448-709-91-11	N1 Indicator
5448-712-91-10	N1 Indicator
548-039	Encoding Altimeter
55002-004	Prop Tach Indicator
5501B-S9	Encoding Altimeter
550-34670-101	Vertical Speed Indicator
550-34670-102	Vertical Speed Indicator
550-34670-201	Vertical Speed Indicator
550-34670-202	Vertical Speed Indicator

550-34670-601	Vertical Speed Indicator
550-34670-602	Vertical Speed Indicator
550-34670-A1300	Vertical Speed Indicator
550-34670-B1300	Vertical Speed Indicator
550-34670-C2300	Vertical Speed Indicator
55035-1148	Cabin Altitude Indicator
55035-1152	Cabin Altitude Indicator
55035-1171	Differential Pressure Indicator
550-519	Airspeed Indicator
5506-S	Encoding Altimeter
5506-SA	Encoding Altimeter
550-8340N3L	Turn & Slip Indicator
55103G	Shut-Off Valve
55103GA	Shut Off Valve
5550-8340N1L	Turn & Slip Indicator
5550-8340-N1L	Turn & Slip Indicator
5550-8340N3L	Turn & Slip Indicator
5550-8340N5L	Turn & Slip Indicator
5550-8465 N1L	Turn & Slip Indicator
5550-9235N1L	Turn & Slip Indicator
5550-9235NIL	Turn & Bank Indicator
5560-8165N1L	Turn & Bank Indicator
5560-8505N7L	Turn & Bank Indicator
5560-8825N1L	Turn & Bank Indicator
55972-3809357-2	Turbine Outlet Temperature Indicator
55D111-001	Directional Gyro
55D111-005	Directional Gyro
55D111-006	Directional Gyro
5609-306-1	Tachometer Indicator
5617-352-91-11	Temperature & Pressure Indicator
5617-352-91-12	Temperature & Pressure Indicator
5617-353-99-10	Temperature & Pressure Indicator
5617-355-91-11	Temperature & Pressure Indicator
5617-357-91-10	Temperature & Pressure Indicator
5617-358-91-10	Temperature & Pressure Indicator
5617-359-80-10	Temperature & Pressure Indicator
5617-363-80-10	Temperature & Pressure Indicator
5617-367-80-10	Temperature & Pressure Indicator
56215-2	Inter Turbine Temperature Indicator
5626-23-91	Temperature Indicator
5626-514-077	Temperature Indicator
5626-517-0	Temperature Indicator
5626-518-00	Temperature Indicator
5626-519-0	Temperature Indicator
5626-522-0	Temperature Indicator
5626-522-00	Temperature Indicator
5626-523-91	Temperature Indicator
5626-524-00-00	Temperature Indicator
5626-524-00-11	Temperature Indicator

5626-525-0	Temperature Indicator
5626-525-00	Temperature Indicator
5626-555-00-11	Temperature Indicator
562-974	Dc Voltmeter & Loadmeter
563-011	Voltmeter
563-016	Oxygen Pressure Indicator
563-031	Oil Temperature & Pressure Indicator
563-032	Fuel Pressure Indicator
563-039	Angle Of Attack Indicator
563-060	Fuel Pressure Indicator
563-061	Oil Temperature & Pressure Indicator
563-062	Dc Ammeter
563-069	Hydraulic Pressure Indicator
563-070	Oxygen Indicator
563-071	De-Ice Pressure Indicator
563-073	Cabin Air Temperature Indicator
563-074	Oxygen Pressure Indicator
563-080	Dc Ammeter
563-084	Awi Qty Indicator
563-087	Pitch Trim Indicator
563-266	Oil Temperature & Pressure Indicator
563-267	Prop Amps Indicator
5633.711.80.10	Ng Tachometer Indicator
563-306	Oil Temperature & Pressure Indicator
5633-619-00-10	Ng Tachometer Indicator
5633-619-00-11	Ng Tachometer Indicator
5633-619-00-12	Ng Tachometer Indicator
5633-622-20-10	Ng Tachometer Indicator
5633-622-20-11	Ng Tachometer Indicator
5633-707-80-12	Ng Tachometer Indicator
5633-710-80-11	Ng Tachometer Indicator
5633-711-80-10	Ng Tachometer Indicator
5633-712-20-11	Ng Tachometer Indicator
5633-713-20-10	Ng Tachometer Indicator
5633-716-80-10	Ng Tachometer Indicator
5633-717-20-10	Ng Tachometer Indicator
5633-719-20-00	Ng Tachometer Indicator
5637-551-00-11	T4 Temperature Indicator
5637-551-00-12	T4 Temperature Indicator
5637-553-00-10	T4 Temperature Indicator
5637-553-00-11	T4 Temperature Indicator
5637-554-20-10	T4 Temperature Indicator
5637-554-20-11	T4 Temperature Indicator
5637-560-00-10	T4 Temperature Indicator
5637-562-20-10	T4 Temperature Indicator
5638-710-20-10	Nr-Ntl Indicator
5638-710-20-11	Nr-Ntl Indicator
5638-710-20-12	Nr-Ntl Indicator
56515-2	Inter Turbine Temperature Indicator

566330-2R	Rate Gyro
5677-406-80-13	Oil Pressure & Temperature Indicator
5677-407-80-14	Oil Pressure & Temperature Indicator
5677-409-80-10	Oil Pressure & Temperature Indicator
5677-420-80-10	Oil Pressure & Temperature Indicator
5677-421-80-10	Oil Pressure & Temperature Indicator
5677-705-80-10	Nh NI Speed Indicator
5677-750-80-12	Torque Indicator
5677-752-00-10	Torque Indicator
5677-752-00-11	Torque Indicator
5677-752-00-12	Torque Indicator
5677-753-20-10	Torque Indicator
5677-753-20-11	Torque Indicator
5677-753-20-12	Torque Indicator
5677-755-80-11	Torque Indicator
5677-756-80-10	Torque Indicator
5677-763-20-10	Torque Indicator
5677-765-80-10	Torque Indicator
5677-766-80-10	Torque Indicator
5677-771-00-10	Torque Indicator
5678-553-80-12	Turbine Temperature Indicator
5678-555-80-10	Turbine Temperature Indicator
5678-559-80-10	Turbine Temperature Indicator
5678-704-80-11	Nh Indicator
5678-705-80-12	Nh Indicator
5678-710-80-12	Np Indicator
5678-711-80-10	Np Indicator
5678-713-80-10	Np Indicator
5678-715-80-10	Propeller Speed Indicator
5678-716-80-10	Np Indicator
570-074-080-003	Transducer - Single Element
570-074-315-1	Three Axis Rate Sensor
5702-1003	Fuel Quantity Indicator
5702-1005	Fuel Quantity Indicator
5702-1007	Fuel Quantity Indicator
5702-3002	Fuel Quantity Indicator
570-23932-981	Encoding Altimeter
570-24929-401	PNEUMATIC ENCODING ALTIMETER
570-24929-402	PNEUMATIC ENCODING ALTIMETER
570-24929-404	PNEUMATIC ENCODING ALTIMETER
570-24929-405	PNEUMATIC ENCODING ALTIMETER
570-24929-406	PNEUMATIC ENCODING ALTIMETER
570-24929-411	PNEUMATIC ENCODING ALTIMETER
570-24929-412	Altimeter, Encoding
570-24929-413	PNEUMATIC ENCODING ALTIMETER
570-24929-414	PNEUMATIC ENCODING ALTIMETER
570-24929-951	Encoding Altimeter
570-24929-J2002	Encoding Altimeter
570-31400-001	Altimeter

570-31400-002	Altimeter
570-31400-003	Altimeter
570-31400-004	Altimeter
570-31400-007	Altimeter
570-31400-011	Altimeter
570-31400-012	Altimeter
570-31400-013	Altimeter
570-31400-014	Altimeter
570-31400-017	Altimeter
570-44929-412	Altimeter, Encoding
570-536	AC Volt Frequency Meter
5707-3002	Fuel Quantity Indicator
5707-3007	Fuel Quantity Indicator
5707-3012	Fuel Quantity Indicator
5707-3013	Fuel Quantity Indicator
5707-3025	Fuel Quantity Indicator
5707-3027	Fuel Quantity Indicator
5707-3037	Fuel Quantity Indicator
5707-3061	Fuel Quantity Indicator
5707-3063	Fuel Quantity Indicator
571-25005-001	Encoding Altimeter
571-25005-002	Encoding Altimeter
571-25005-011	Encoding Altimeter
571-25005-012	Encoding Altimeter
571-25005-021	Encoding Altimeter
571-25005-022	Encoding Altimeter
571-25005-031	Encoding Altimeter
571-25005-032	Encoding Altimeter
571-25005-041	Encoding Altimeter
571-25005-042	Encoding Altimeter
571-25005-051	Encoding Altimeter
571-25005-052	Encoding Altimeter
571-25005-101	Encoding Altimeter
571-25005-102	Encoding Altimeter
571-25005-111	Encoding Altimeter
571-25005-112	Encoding Altimeter
571-25005-121	Encoding Altimeter
571-25005-122	Encoding Altimeter
571-25005-201	Encoding Altimeter
571-25005-202	Encoding Altimeter
571-25005-211	Encoding Altimeter
571-25005-212	Encoding Altimeter
571-25005-221	Encoding Altimeter
571-25005-222	Encoding Altimeter
571-25005-301	Encoding Altimeter
571-25005-302	Encoding Altimeter
571-25005-311	Encoding Altimeter
571-25005-312	Encoding Altimeter
571-25005-321	Encoding Altimeter

571-25005-322	Encoding Altimeter
571-25005-501	Encoding Altimeter
571-25005-502	Encoding Altimeter
571-29020-412	Altimeter
5728H	Turn & Slip Indicator
5728H1	Turn & Slip Indicator
5728H100-1	Turn & Slip Indicator
5728H100-1L	Turn & Slip Indicator
5728H100-1R	Turn & Slip Indicator
5728H100-2	Turn & Slip Indicator
5728H100-2A	Turn & Slip Indicator
5728H100-2AR	Turn & Slip Indicator
5728H100-2R	Turn & Slip Indicator
5728H101-1	Turn & Slip Indicator
5728H101-1R	Turn & Slip Indicator
5728H101-2	Turn & Slip Indicator
5728H101-2R	Turn & Slip Indicator
5728H102-1	Turn & Slip Indicator
5728H102-2	Turn & Slip Indicator
5728H102-2R	Turn & Slip Indicator
5728H102-R	Turn & Slip Indicator
5728H110-1	Turn & Slip Indicator
5728H110-1001	Turn & Slip Indicator
5728H110-1R	Turn & Slip Indicator
5728H110-2N	Turn & Slip Indicator
5728H110-2R	Turn & Slip Indicator
5728H111-1	Turn & Slip Indicator
5728H111-1R	Turn & Slip Indicator
5728H111-2	Turn & Slip Indicator
5728H111-2R	Turn & Slip Indicator
5728H112-1	Turn & Slip Indicator
5728H112-11	Turn & Slip Indicator
5728H112-1R	Turn & Slip Indicator
5728H112-2	Turn & Slip Indicator
5728H112-21	Turn & Slip Indicator
5728H112-2R	Turn & Slip Indicator
5728H1DL	Turn & Slip Indicator
5728H1R	Turn & Slip Indicator
5728H2	Turn & Slip Indicator
5728H2-1A	Turn & Slip Indicator
5728H2-1AR	Turn & Slip Indicator
5728H2R	Turn & Slip Indicator
5728N	Turn & Slip Indicator
5728N1	Turn & Slip Indicator
5728N100-1	Turn & Slip Indicator
5728N100-1R	Turn & Slip Indicator
5728N100-2	Turn & Slip Indicator
5728N100-2R	Turn & Slip Indicator
5728N101-1	Turn & Slip Indicator

5728N101-1R	Turn & Slip Indicator
5728N101-2	Turn & Slip Indicator
5728N101-2R	Turn & Slip Indicator
5728N102-1	Turn & Slip Indicator
5728N102-1R	Turn & Slip Indicator
5728N102-2	Turn & Slip Indicator
5728N102-2R	Turn & Slip Indicator
5728N110-1	Turn & Slip Indicator
5728N110-1R	Turn & Slip Indicator
5728N110-2	Turn & Slip Indicator
5728N110-2R	Turn & Slip Indicator
5728N111-1	Turn & Slip Indicator
5728N111-1R	Turn & Slip Indicator
5728N111-2	Turn & Slip Indicator
5728N111-2R	Turn & Slip Indicator
5728N112-1	Turn & Slip Indicator
5728N112-1R	Turn & Slip Indicator
5728N112-2	Turn & Slip Indicator
5728N112-2R	Turn & Slip Indicator
5728N1R	Turn & Slip Indicator
5728N1X	Turn & Slip Indicator
5728N2	Turn & Slip Indicator
5728N2R	Turn & Slip Indicator
574-074-162-001	Panel
574-074-162-1	Panel
575-25850	Mach Airspeed Indicator
5800-465-80-14	Multifunction Indicator
5800-483-80-10	Multifunction Indicator
5802-1034	Airspeed Indicator
5802-3060	Airspeed Indicator
5802-3060D	Airspeed Indicator
5802-306D	Airspeed Indicator
58057-85	Gyrosyn Compass Indicator
5813-700-00-10	Nr-Ntl Indicator
5813-700-00-11	Nr-Ntl Indicator
5813-700-00-12	Nr-Ntl Indicator
5813-701-00-00	Nr-Ntl Indicator
5821-01-560-7879	E.L.T.
5826-00-912-4415	DIRECTION FINDER SET
5826-01-020-2258	Navigation Receiver
5826-01-039-4148	Course Indicator
58-30069-3	Altimeter
5831-00-933-9822	INTERCOMMUNICATION SET
58-380048-1	Loadmeter
58-380048-2	Loadmeter
58-380069-3	Altimeter
5841-01-023-7112	RADAR SIGNAL DETECTING SET
585-37800-001	%RPM, HP INDICATOR (2-INCH)
585-37800-002	%RPM, HP INDICATOR (2-INCH)

586BK-0110	Airspeed Indicator
586BK-0142	Airspeed Indicator
586BK-0153	Airspeed Indicator
586BK-1-0153	Airspeed Indicator
586BK-13-0155	Airspeed Indicator
586BK-4-0153	Airspeed Indicator
586CK-1-0197	Airspeed Indicator
586CK-4-0158	Airspeed Indicator
586CK-4-0160	Airspeed Indicator
586K-026	Airspeed Indicator
586K-028	Airspeed Indicator
5876-703-00-10	Nr Indicator
5876-703-00-12	Nr Indicator
5876-704-20-10	Nr Indicator
5876-704-20-11	Nr Indicator
5876-705-00-10	Nr Indicator
5879-716-80-10	Np Indicator
58880-458-01400	Hydraulic Pressure Indicator
5930-00-177-3188	Fuel Switch
5930-00-923-1451	Oil Temperature Switch
5930-00-923-2560	Oil Temperature Switch
5930-14-3670158	Fuel Level Switch
5930-14-3670159	Fuel Level Switch
5930-14-3670160	Fuel Level Switch
5930-14-3819305	Fuel Level Switch
5930-14-3819306	Fuel Level Switch
5930-14-3819307	Fuel Level Switch
5930-14-5754605	Fuel Level Switch
5932 A.10	Altimeter
5932 A.11	Altimeter
5932 A.60	Altimeter
5932 A.9	Altimeter
5932-A.45	Altimeter
5932-BH01	Altimeter
5932-BH-1	Altimeter
5932-BH-3	Altimeter
5932-BH-5	Altimeter
5932-BH-7	Altimeter
5934 A.68	Altimeter
5934-1	Altimeter
5934-1 (A89)	Altimeter
5934-1 (A90)	Altimeter
5934-1 (A91)	Altimeter
5934-1 A.89	Altimeter
5934-1 A.90	Altimeter
5934-1A.91	Altimeter
5934-3	Altimeter
5934-3A.68	Altimeter
5934A.91	Altimeter

5934A-1	Altimeter
5934A-3	Altimeter
5934A-3 A.91	Altimeter
5934-A66	Altimeter
5934A91	Altimeter
5934AD-1	Altimeter
5934AD-3	Altimeter
5934AM-1	Altimeter
5934AM-3	Altimeter
5934D-1	Altimeter
5934D-1 (A159)	Altimeter
5934D-1A.159	Altimeter
5934D-3	Altimeter
5934D-3A.159	Altimeter
5934M-1	Altimeter
5934M-1 (A92)	Altimeter
5934M-1 A.116	Altimeter
5934M-1 A.92	Altimeter
5934M-3	Altimeter
5934P-1	Altimeter
5934P-3	Altimeter
5934P-3 (A441)	Altimeter
5934P-3 A.194	Altimeter
5934P-3A.441	Altimeter
5934PA-1	Altimeter
5934PA-1-001	Altimeter
5934PA-1-A.69	Altimeter
5934PA-1A.86	Altimeter
5934PA-1D	Altimeter
5934PA-3	Altimeter
5934PA-3-A.69	Altimeter
5934PA-3A.86	Altimeter
5934P-A56	Altimeter
5934PAD	Altimeter
5934PAD-1	Altimeter
5934PAD-1 A 132	Altimeter
5934PAD-1A.135	Altimeter
5934PAD-3	Altimeter
5934PAD-3-A.132	Altimeter
5934PAD-3B	Altimeter
5934PAM-1	Altimeter
5934PAM-1-A.70	Altimeter 50' Increments Mb
5934PAM-3	Altimeter
5934PAM-3A.87	Altimeter
5934PD-1	Altimeter
5934PD-3	Altimeter
5934PD-3 (A624)	Altimeter
5934PM-1	Altimeter
5934PM-3	Altimeter

59885/2313M-20-3	Wiper Motor
59885/2313M-20-4	Wiper Motor
5A16.22.20K.05.1.AU	Airspeed Indicator
5I-2005	Duct Air Temperature Indicator
600-563	Control Motion Transducer
600-568	Control Motion Transducer
600-580	Transducer
600-581	Transducer - Single Element
60-0605	Altimeter
60-0608	Altimeter
601285-01	Cluster Indicator
601285-02	Cluster Indicator
601285-03	Cluster Indicator
601290-01	Cluster Indicator
601290-02	Cluster Indicator
60-1321-1	Emergency Exit Light Power Supply
60-1750	Strobe Power Supply
60-1755	STOBE POWER SUPPLY
60-1755-1	STOBE POWER SUPPLY
60-1755-11	STOBE POWER SUPPLY
60-1755-13	STOBE POWER SUPPLY
60-1755-3	STOBE POWER SUPPLY
60-1755-5	Strobe Power Supply
60-1755-7	STOBE POWER SUPPLY
60-1755-9	STOBE POWER SUPPLY
6020--01/102/8805	Landing Light
60-2885-1	Power Supply
60-3269-1	Power Supply
60-3269-3	Power Supply
60-3274-5	Strobe Light Power Supply
60-3474-1	Strobe Power Supply
60-3474-3	Strobe Power Supply
60-3474-5	Power Supply
60-3557	Power Supply
60-3557-1	Power Supply
60-3844-1	Exit Light Power Supply
60-3844-1LB	Exit Light Power Supply
60-3844-3	Exit Light Power Supply
60-3844-3LB	Exit Light Power Supply
605-1	Rpm Limiit Detector
608-10023	Dual Tachometer Indicator
608-10024	Dual Tachometer Indicator
61000-011	Temperature Indicator
61000-013	Temperature Indicator
61000-014	Temperature Indicator
61000-015	Temperature Indicator
61000-016	Temperature Indicator
61000-018	Temperature Indicator
61000-019	Temperature Indicator

61000-020	Temperature Indicator
61000-021	Temperature Indicator
61000-022	Temperature Indicator
61000-023	Temperature Indicator
61000-025	Temperature Indicator
61000-026	Temperature Indicator
61000-028	Temperature Indicator
61000-029	Temperature Indicator
61000-030	Temperature Indicator
61000-031	Temperature Indicator
61000-032	Temperature Indicator
61000-033	Temperature Indicator
61000-034	Temperature Indicator
61000-035	Temperature Indicator
61000-036	Temperature Indicator
61000-037	Temperature Indicator
61000-038	Temperature Indicator
61000-039	Temperature Indicator
61000-040	Temperature Indicator
61000-041	Temperature Indicator
61000-042	Temperature Indicator
61000-047	Temperature Indicator
61000-051	Temperature Indicator
61000-068	Temperature Indicator
61001-16	Temperature Indicator
61015-001-4	Torque Indicator
61015-007-1	Dual Torque Indicator
61015-008-1	Dual Torque Indicator
6103-1004	Altimeter
61100-02	E.G.T. Indicator
61100-03	E.G.T. Indicator
6110-01-118-5556	Magnetic Brake
6110-01-225-3936	Power Panel
61104-03	I.T.T. Indicator
61111-14	Tachometer Indicator
61111-19	Tachometer Indicator
61111-19A	Tachometer Indicator
61111-30	Tachometer Indicator
61121-04	Percent Torque Indicator
61121-05	Torque Indicator
611-40053	Tachometer Indicator
61-2008	Strobe Power Supply
6125-00-062-7483	MOTOR GENERATORS
6125-00-863-9683	MOTOR GENERATORS
6125-00-884-5261	MOTOR GENERATORS
6125-00-938-6539	MOTOR GENERATORS
6130-00-014-6184	Inverter
6130-01-056-5251	Inverter
6130-01-121-5118	Power Supply

61349-SR-2AK	Torque Indicator
61474-103-1	Tachometer Indicator
61474-103-2	Tachometer Indicator
61474-103-3	Tachometer Indicator
61474-103-4	Tachometer Indicator
61474-104-1	Tachometer Indicator
61474-104-2	Tachometer Indicator
61474-104-3	Tachometer Indicator
61474-108-1	Tachometer Indicator
61474-108-2	Tachometer Indicator
61474-109-1	Tachometer Indicator
61474-110-1	Tachometer Indicator
61474-112-1	Tachometer Indicator
61474-112-2	Tachometer Indicator
61474-114-1	Tachometer Indicator
61474-130-1	Tachometer Indicator
61474-130-2	Tachometer Indicator
61474-131-2	Tachometer Indicator
61474-132-1	Tachometer Indicator
61474-133-1	Tachometer Indicator
61474-134-1	Tachometer Indicator
61474-135-1	Tachometer Indicator
61475-100-1	Tachometer Indicator
61475-102-1	Tachometer Indicator
61475-103-1	Tachometer Indicator
61475-104-1	Tachometer Indicator
61475-105-1	Tachometer Indicator
61475-106-1	Tachometer Indicator
61475-107-1	Tachometer Indicator
61475-108-1	Tachometer Indicator
61475-109-1	Tachometer Indicator
61475-110-1	Tachometer Indicator
61475-111-1	Tachometer Indicator
61475-114-2	Tachometer Indicator
61475-115-2	Tachometer Indicator
61476-402-1	Tachometer Indicator
61476-403-1	Tachometer Indicator
614L-11	Adf Control
614L-13	Dual Adf Control
61533-102-1	Temperature Indicator
61533-103-1	Temperature Indicator
61533-104-1	Temperature Indicator
61533-106-1	Temperature Indicator
61533-107-1	Temperature Indicator
61533-109-2	Temperature Indicator
61533-109-3	Temperature Indicator
61533-109-4	Temperature Indicator
61533-109-5	Temperature Indicator
61533-111-1	Temperature Indicator

61533-117-1	Temperature Indicator
61533-117-4	Temperature Indicator
61533-121-1	Temperature Indicator
617-10029	Dual Tachometer Indicator
617-10030	Dual Tachometer Indicator
618-12	Clock
618-12-24	Clock
618-17250	Ammeter
618-24	Clock
618-24-100	Clock
618T-3	Hf Transceiver
6200-01-246-6838	Searchlight
621396-221	Compass
6220-01-108-7280	Strobe Light
6220-01-253-9658	Strobe Light
622-0224-001	ATTITUDE DIRECTOR INDICATOR
622-0224-002	ATTITUDE DIRECTOR INDICATOR
622-0224-003	ATTITUDE DIRECTOR INDICATOR
622-0224-004	ATTITUDE DIRECTOR INDICATOR
622-0224-005	ATTITUDE DIRECTOR INDICATOR
622-0224-006	ATTITUDE DIRECTOR INDICATOR
622-0410-001	Radar Altimeter
622-0876-001	Vor/Loc Receiver
622-1204-002	Radar Altimeter Indicator
622-1204-004	Radar Altimeter Indicator
622-1233-001	Dme Transceiver
622-1270-001	Atc Transponder
622-1879-001	Vhf Transceiver
622-2012-011	Dme Indicator
622-2080-011	Navigation Receiver
622-2362-001	Adf Receiver
622-2506-004	R.M.I.
622-2506-006	R.M.I.
622-2506-014	Radio Magnetic Indicator
622-2855-001	Radio Altimeter
622-2855-011	Radio Altimeter
622-2937-004	Radio Altimeter Indicator
622-3594-005	Attitude Director Indicator
622-3594-007	Attitude Director Indicator
622-3918-001	Dme Indicator
622-3920-001	Dme Indicator
622-4151-001	H.S.I.
622-4483-002	H.S.I.
622-4563-001	Radar Altimeter
622-4565-001	Vertical Gyro
622-4808-001	ATTITUDE DIRECTOR INDICATOR
622-4808-002	ATTITUDE DIRECTOR INDICATOR
622-4808-003	ATTITUDE DIRECTOR INDICATOR
622-4808-004	ATTITUDE DIRECTOR INDICATOR

622-4808-005	ATTITUDE DIRECTOR INDICATOR
622-4808-006	ATTITUDE DIRECTOR INDICATOR
622-4808-007	ATTITUDE DIRECTOR INDICATOR
622-4808-008	ATTITUDE DIRECTOR INDICATOR
622-4808-009	ATTITUDE DIRECTOR INDICATOR
622-4808-010	ATTITUDE DIRECTOR INDICATOR
622-4808-011	ATTITUDE DIRECTOR INDICATOR
622-4808-012	ATTITUDE DIRECTOR INDICATOR
622-4808-013	ATTITUDE DIRECTOR INDICATOR
622-4913-001	H.S.I.
622-4938-001	R.M.I.
622-4938-002	R.M.I.
622-5812-001	Flux Detector Unit
622-5812-002	FLUX DETECTOR UNITS
622-5812-003	FLUX DETECTOR UNITS
622-5812-004	FLUX DETECTOR UNITS
622-5812-005	FLUX DETECTOR UNITS
622-5812-006	FLUX DETECTOR UNITS
622-6136-002	Directional Gyro
622-6137-001	Nav Receiver
622-6152-001	Vhf Comm Transceiver
622-6152-002	Vhf Comm Transceiver
622-6152-011	Vhf Comm Transceiver
622-6152-012	Vhf Comm Transceiver
622-6153-001	Vhf Comm Transceiver
622-6153-002	Vhf Comm Transceiver
622-6263-001	Dme Transceiver
622-6263-003	Dme Transceiver
622-6389-001	Vhf Comm Transceiver
622-6389-002	Vhf Comm Transceiver
622-6389-011	Vhf Comm Transceiver
622-6389-012	Vhf Comm Transceiver
622-6390-001	Vhf Comm Transceiver
622-6390-002	Vhf Comm Transceiver
622-6520-008	Vhf Comm Control
622-6520-009	Comm Control
622-6521-016	Vhf Nav Control
622-6521-025	Nav Control
622-6522-008	Adf Control
622-6522-017	Adf Control
622-6523-001	Atc Control
622-6523-008	Atc Control
622-6523-009	Atc Control
622-6523-013	Atc Control
622-6523-208	ATC Control
622-6523-209	Atc Control
622-6523-213	Atc Control
622-6524-001	Dme Indicator
622-6524-002	Dme Indicator

622-6524-003	Dme Indicator
622-6524-004	Dme Indicator
622-6590-001	Control Adapter
622-7318-001	Dme Indicator
622-7318-002	Dme Indicator
622-7318-003	Dme Indicator
622-7318-004	Dme Indicator
622-8154-001	FLUX DETECTOR UNITS
622-8154-002	FLUX DETECTOR UNITS
622-8332-001	Control Adapter
622910-211	Compass
622-9976-001	Dme Indicator
622-9976-002	Dme Indicator
622-9976-003	Dme Indicator
622-9976-004	Dme Indicator
6230-01-343-1325	Emergency Exit Light
6246-00071	Cluster Indicator
6246-00401	Ammeter
6246-00402	Fuel Quantity Indicator
6246-00514	Engine Oil Temperature Indicator
6246-00589	Ammeter
6246-00610	Engine Oil Temperature Indicator
6340-01-087-2792	Smoke Detector
6340-UH1-017-1	Rpm Limit Detector
63491R3077	Temperature Indicator
63494R5460	Temperature Indicator
63540-045-2	Radio Magnetic Indicator
640-12	Clock
640-24	Clock
64050-228-1	Airspeed Indicator
64050-660-1	Airspeed Indicator
64050-661-1	Airspeed Indicator
64050-662-1	Airspeed Indicator
64050-663-1	Airspeed Indicator
64052-200-1	Airspeed Switch
64052-202-1	Airspeed Switch
64060-890-1	Max Allowable Airspeed Indicator
64089-360-1	Vertical Speed Indicator
64110-010-1	Altimeter
64111-900-1	Altimeter
64130-100-1	Altimeter
64130-101-1	Altimeter
64130-102-1	Altimeter
64130-103-1	Altimeter
64131-560-1	Altimeter
64131-760-1	Altimeter
64140-953-1	Altimeter
64140-955-1	Altimeter
64140-956-1	Altimeter

64140-971-1	Altimeter
64141-360-1	Altimeter
64141-361-1	Altimeter
64141-362-1	Altimeter
64141-370-1	Altimeter
64141-372-1	Altimeter
64141-520-1	Altimeter
64141-530-1	Altimeter
64141-560-1	Altimeter
64141-564-1	Altimeter
64141-570-1	Altimeter
64152-02215-104	Handgrip
64156-02415-104	Handgrip
64156-02415-105	Handgrip
64191-203-1	Pressure Indicator
64191-204-1	Pressure Indicator
64191-214-1	Pressure Indicator
64191-215-1	Pressure Indicator
64191-217-1	Pressure Indicator
64191-222-1	Pressure Indicator
64210-002-1	Pressure Transmitter
64210-002-2	Pressure Transmitter
64250-033-1	Pressure Transmitter
64250-033-2	Pressure Transmitter
64251-020-1	Pressure Transmitter
64251-400-1	Pressure Transmitter
64251-401-1	Pressure Transmitter
64251-408-1	Pressure Transmitter
64251-409-1	Pressure Transmitter
64251-409-2	Pressure Transmitter
64251-903-1	Pressure Transmitter
64251-903-1X	Pressure Transmitter
64251-903-2	Pressure Transmitter
64279-001-1	Pressure Transmitter
64279-001-2	Pressure Transmitter
64279-004-1	Pressure Transmitter
64279-200-2	Pressure Transmitter
64279-516-2	Pressure Transmitter
64301-030-1	Differential Pressure Switch
64350-068-4	Ng Tachometer Indicator
6445-01	Fire Overheat Control Card
64500-200-1	Tachometer Indicator
64500-201-1	Tachometer Indicator
64500-202-1	Tachometer Indicator
64500-205-2	Tachometer Indicator
64500-207-1	Tachometer Indicator
64500-246-1	Tachometer Indicator
64500-247-1	Tachometer Indicator
64500-249-1	Tachometer Indicator

64511-103-1	Tachometer Indicator
64514-201-1	Tachometer Indicator
64514-202-1	Tachometer Indicator
64514-203-1	Tachometer Indicator
64514-205-1	Tachometer Indicator
64514-205-2	Tachometer Indicator
64514-208-1	Tachometer Indicator
64530-068-4	Tachometer Indicator
64536-500-1	Tachometer Indicator
64536-501-1	Tachometer Indicator
64538-068-1	Tachometer Indicator
64538-300-1	Tachometer Indicator
64538-305-1	Tachometer Indicator
64538-307-1	Tachometer Indicator
64538-308-1	Tachometer Indicator
64538-309-1	Tachometer Indicator
64550-005-1	Tach Generator
64550-007-1	Tach Generator
64550-023-1	Tach Generator
64550-029-1	Tach Generator
64660-025-1	Temperature Probe
64750-002-1	Fuel Quantity Transmitter
64750-007-1	Fuel Quantity Transmitter
64751-003-1	Fuel Quantity Transmitter
64751-003-2	Fuel Quantity Transmitter
64751-003-3	Fuel Quantity Transmitter
64751-100-1	Fuel Quantity Transmitter
64751-101-1	Fuel Quantity Transmitter
64757-100-2	Fuel Quantity Transmitter
64757-101-2	Fuel Quantity Transmitter
64760-019-1	Fuel Level Switch
64760-021-1	Fuel Level Switch
64760-022-1	Fuel Level Switch
64760-025-1	Fuel Level Switch
64760-026-1	Fuel Level Switch
64760-027-1	Fuel Level Switch
64760-027-2	Fuel Level Switch
648 12 01	ANTICOLLISION LIGHT
64807-406-1	Temperature Indicator
64807-407-1	Temperature Indicator
64807-408-1	Temperature Indicator
64807-409-1	Temperature Indicator
64807-410-1	Temperature Indicator
64807-411-1	Temperature Indicator
64807-412-1	Temperature Indicator
64807-413-1	Temperature Indicator
64807-414-1	Temperature Indicator
64807-415-1	Temperature Indicator
64807-416-1	Temperature Indicator

64807-417-1	Temperature Indicator
64807-418-1	Temperature Indicator
64807-419-1	Temperature Indicator
64807-420-1	Temperature Indicator
64807-421-1	Temperature Indicator
64807-422-1	Temperature Indicator
64807-423-1	Temperature Indicator
64807-424-1	Temperature Indicator
64807-503-1	Temperature Indicator
64807-507-1	Temperature Indicator
64807-600-1	Temperature Indicator
64807-601-1	Temperature Indicator
64807-603-1	Temperature Indicator
64807-604-1	Temperature Indicator
64807-612-1	Temperature Indicator
64807-613-1	Temperature Indicator
64809-408-1	Pressure Indicator
64809-409-1	Pressure Indicator
64809-411-1	Pressure Indicator
64809-412-1	Pressure Indicator
64809-414-1	Pressure Indicator
64809-415-1	Pressure Indicator
64809-416-1	Pressure Indicator
64809-417-1	Pressure Indicator
64809-418-1	Pressure Indicator
64809-419-1	Pressure Indicator
64809-420-1	Pressure Indicator
64809-421-1	Pressure Indicator
64809-422-1	Pressure Indicator
64809-423-1	Pressure Indicator
64809-424-1	Pressure Indicator
64809-426-1	Pressure Indicator
64809-427-1	Pressure Indicator
64809-428-1	Pressure Indicator
64809-429-1	Pressure Indicator
64809-431-1	Pressure Indicator
64809-432-1	Pressure Indicator
64809-433-1	Pressure Indicator
64809-434-1	Pressure Indicator
64809-436-1	Pressure Indicator
64809-437-1	Pressure Indicator
64809-438-1	Pressure Indicator
64809-439-1	Pressure Indicator
64809-440-1	Pressure Indicator
64809-441-1	Pressure Indicator
64809-442-1	Pressure Indicator
64809-443-1	Pressure Indicator
64809-446-1	Pressure Indicator
64809-447-1	Pressure Indicator

64809-448-1	Pressure Indicator
64809-449-1	Pressure Indicator
64809-450-1	Pressure Indicator
64809-451-1	Pressure Indicator
64809-452-1	Pressure Indicator
64809-453-1	Pressure Indicator
64809-454-1	Pressure Indicator
64809-455-1	Pressure Indicator
64809-456-1	Pressure Indicator
64809-463-1	Pressure Indicator
64809-465-1	Pressure Indicator
64809-467-1	Pressure Indicator
64809-468-1	Pressure Indicator
64809-469-1	Pressure Indicator
64809-474-1	Pressure Indicator
64809-475-1	Pressure Indicator
64809-476-1	Pressure Indicator
64809-506-1	Pressure Indicator
64809-507-1	Pressure Indicator
64809-508-1	Pressure Indicator
64809-511-1	Pressure Indicator
64809-514-1	Pressure Indicator
64809-515-1	Pressure Indicator
64809-522-1	Pressure Indicator
64809-523-1	Pressure Indicator
64809-524-1	Pressure Indicator
64809-600-1	Pressure Indicator
64809-601-1	Pressure Indicator
64809-602-1	Pressure Indicator
64809-603-1	Pressure Indicator
64809-604-1	Pressure Indicator
64809-605-1	Pressure Indicator
64809-606-1	Pressure Indicator
64809-607-1	Pressure Indicator
64809-608-1	Pressure Indicator
64809-609-1	Pressure Indicator
64809-610-1	Pressure Indicator
64809-611-1	Pressure Indicator
64809-612-1	Pressure Indicator
64809-613-1	Pressure Indicator
64809-614-1	Pressure Indicator
64809-615-1	Pressure Indicator
64809-616-1	Pressure Indicator
64809-617-1	Pressure Indicator
64809-618-1	Pressure Indicator
64809-619-1	Pressure Indicator
64818-000-1	Oil Temperature Indicator
64818-001-1	Pressure Indicator
64818-009-1	Pressure Indicator

64818-010-1	Pressure Indicator
64818-012-1	Oil Temperature Indicator
64818-013-1	Pressure Indicator
64818-014-1	Pressure Indicator
64818-015-1	Pressure Indicator
64818-018-1	Pressure Indicator
64818-019-1	Pressure Indicator
64818-020-1	Oil Temperature Indicator
64818-300-1	Fuel Pressure Indicator
64818-303-1	Fuel Pressure Indicator
64818-307-1	Fuel Pressure Indicator
64830-001-1	Fuel Quantity Indicator
64830-001-2	Fuel Quantity Indicator
64830-002-1	Fuel Quantity Indicator
64830-002-2	Fuel Quantity Indicator
64830-200-1	Fuel Quantity Indicator
64830-208-1	Fuel Quantity Indicator
64830-209-1	Fuel Quantity Indicator
64830-212-1	Fuel Quantity Indicator
64838-000-1	Temperature & Pressure Indicator
64838-001-1	Temperature & Pressure Indicator
64838-003-1	Temperature & Pressure Indicator
64839-003-1	Dual Fuel Quantity Indicator
64904-000-1	Position Indicator
64904-001-1	Position Indicator
64904-002-1	Position Indicator
64905-003-1	Position Indicator
64905-004-1	Position Indicator
64905-005-1	Position Indicator
64905-006-1	Position Indicator
64905-007-1	Position Indicator
64905-008-1	Position Indicator
64970-000-2	Tachometer Indicator
64970-001-1	Tachometer Indicator
64975-001-1	Tachometer Indicator
64975-001-2	Tachometer Indicator
64975-003-1	Tachometer Indicator
64975-004-1	Tachometer Indicator
64975-005-1	Tachometer Indicator
64975-020-1	Tachometer Indicator
64975-021-2	Tachometer Indicator
6501-1001	Tachometer Indicator
6501-1005	Tachometer Indicator
6501-1006	Tachometer Indicator
6501-1010	Tachometer Indicator
6501-1011	Tachometer Indicator
6501-1014	Tachometer Indicator
6501-1018	Tachometer Indicator
6501-1040	Tachometer Indicator

6501-1044	Tachometer Indicator
6501-1047	Tachometer Indicator
6501-1051	Tachometer Indicator
6501-1055	Tachometer Indicator
6501-1056	Tachometer Indicator
6501-1058	Tachometer Indicator
6501-1068	Tachometer Indicator
6501-1087	Tachometer Indicator
6501-2004	Tachometer Indicator
6501-3003	Tachometer Indicator
6501-3007	Tachometer Indicator
6501-3008	Tachometer Indicator
6501-3009	Tachometer Indicator
6501-3010	Tachometer Indicator
6501-3018	Tachometer Indicator
6501-3034	Tachometer Indicator
6501-3037	Tachometer Indicator
6501-3054	Gas Producer Tachometer Indicator
6501-3061	Tachometer Indicator
6501-3062	Tachometer Indicator
6501-3089	Percent Tachometer Indicator
6501-3091	Tachometer Indicator
6501-3135	Gas Producer Tachometer Indicator
6501-3139	Gas Producer Tachometer Indicator
6501-3142	Gas Producer Tachometer Indicator
6501-3146	Gas Producer Tachometer Indicator
6501-3149	Gas Producer Tachometer Indicator
6501-8140	Gas Producer Tachometer Indicator
6502-1001	Dual Tachometer Indicator
6502-1002	Dual Tachometer Indicator
6502-1006	Dual Tachometer Indicator
6502-1007	Dual Tachometer Indicator
6502-1008	Dual Tachometer Indicator
6502-1009	Dual Tachometer Indicator
6502-1011	Dual Tachometer Indicator
6502-1013	Dual Tachometer Indicator
6502-1014	Dual Tachometer Indicator
6502-1019	Dual Tachometer Indicator
6502-1024	Dual Tachometer Indicator
6502-1032	Dual Tachometer Indicator
6502-1033	Dual Tachometer Indicator
6502-1034	Dual Tachometer Indicator
6502-1038	Dual Tachometer Indicator
6502-1041	Dual Tachometer Indicator
6502-1048	Dual Tachometer Indicator
6502-1053	Dual Tachometer Indicator
6502-1055	Dual Tachometer Indicator
6502-2004	Dual Tachometer Indicator
6502-3003	Dual Tachometer Indicator

6502-3010	Dual Tachometer Indicator
6502-3031	Dual Tachometer Indicator
6502-3044	Dual Tachometer Indicator
6502-3045	Dual Tachometer Indicator
6502-3046	Dual Tachometer Indicator
6502-3061	Dual Tachometer Indicator
6503-1032	Gas Producer Tachometer Indicator
6503-2038	Gas Producer Tachometer Indicator
6503A-1009	Gas Producer Tachometer Indicator
6503A-1015	Gas Producer Tachometer Indicator
6503A-1022	Gas Producer Tachometer Indicator
6503A-1024	Gas Producer Tachometer Indicator
6503A-1032	Gas Producer Tachometer Indicator
6503A-1058	Gas Producer Tachometer Indicator
6503A-1073	Gas Producer Tachometer Indicator
6503A-1097	Gas Producer Tachometer Indicator
6503A-3043	Gas Producer Tachometer Indicator
6503A-3045	Gas Producer Tachometer Indicator
6503A-3085	Gas Producer Tachometer Indicator
6503A-3088	Gas Producer Tachometer Indicator
6503A-3101	Gas Producer Tachometer Indicator
6503A-3121	Gas Producer Tachometer Indicator
6503A-3122	Gas Producer Tachometer Indicator
6503A-3165	Gas Producer Tachometer Indicator
6503A-3166	Gas Producer Tachometer Indicator
65041-02415-102P	Handgrip
65042-02115-102P	Handgrip
6505-3062	Tachometer Indicator
6505A1008	Triple Tachometer Indicator
6505A-1008	Triple Tachometer Indicator
6505A-1025	Triple Tachometer Indicator
6505A-1028	Triple Tachometer Indicator
6505A-2023	Triple Tachometer Indicator
6505A-2031	Triple Tachometer Indicator
6505A-3027	Triple Tachometer Indicator
6505A-3042	Triple Tachometer Indicator
6505A3053	Triple Tachometer Indicator
6505A-3053	Triple Tachometer Indicator
6505A-3062	Triple Tachometer Indicator
6505A-3068	Triple Tachometer Indicator
6505A-361	Triple Tachometer Indicator
65-0647-1	Master Caution Panel
65-0647-11	Master Caution Panel
65-0647-3	Master Caution Panel
65-0647-5	Master Caution Panel
65-0647-7	Master Caution Panel
65-0647-9	Master Caution Panel
65-0648-1	Master Caution Panel
65-0700-1	Annunciator Panel

65-0700-3	Annunciator Panel
65-0878-1	Annunciator Panel
65-0878-3	Annunciator Panel
65-0878-7	Annunciator Panel
65-0879-1	Annunciator Panel
65-0879-11	Annunciator Panel
65-0879-3	Annunciator Panel
65-0879-5	Annunciator Panel
65-0879-7	Annunciator Panel
65-0879-9	Annunciator Panel
65100-019	Torque Indicator
6520-3011	Triple Tachometer Indicator
6520-8013	Triple Tachometer Indicator
6530A SERIES	Gas Producer Tachometer Indicator
6530A-1009	Gas Producer Tachometer Indicator
6530A-1015	Gas Producer Tachometer Indicator
6530A-1022	Gas Producer Tachometer Indicator
6530A-1024	Gas Producer Tachometer Indicator
6530A-1058	Gas Producer Tachometer Indicator
6530A-1073	Gas Producer Tachometer Indicator
6530A-1097	Gas Producer Tachometer Indicator
6530A-3043	Gas Producer Tachometer Indicator
6530A-3045	Gas Producer Tachometer Indicator
6530A-3085	Gas Producer Tachometer Indicator
6530A-3101	Gas Producer Tachometer Indicator
6530A-3121	Gas Producer Tachometer Indicator
6530A-3122	Gas Producer Tachometer Indicator
6530A-3165	Gas Producer Tachometer Indicator
6530A-3166	Gas Producer Tachometer Indicator
65401-02471-101	Handgrip
65412-02215-102	Handgrip
65412-02215-103	Handgrip
65416-02415-103	Grip Assembly
65-47	Tachometer Indicator
6547-A	Tachometer Indicator
65-47A	Tachometer Indicator
6547-A-1	Tachometer Indicator
65-52808-26-01	Overheat Accessory Unit
65-52808-26-01 R1	Overheat Accessory Unit
65-52808-3	Overheat Accessory Unit
65-52808-6	Overheat Accessory Unit
65-52808-7	Overheat Accessory Unit
65-52808-7A	Overheat Accessory Unit
65560-04801-101	Handgrip
65560-04900-101	Handgrip
65653-05025-103	Handgrip
656-767	Compensator
65A120	Actuator
65A149	Linear Actuator

65A168	Linear Actuator
65A173	Actuator
65A181	Linear Actuator
65A192	Actuator
65A237	Actuator
65A238	Actuator
6600355-1	Motor Driven Valve
6601-1004	Vertical Speed Indicator
6601-3009	Rate Of Climb Indicator
66-021-01	Tachometer Indicator
66-021-03	Tachometer Indicator
66-021-04	Tachometer Indicator
66-021-05	Tachometer Indicator
66-021-07	Tachometer Indicator
66-022-01	Dual Tachometer Indicator
66-022-03	Dual Tachometer Indicator
66-022-04	Dual Tachometer Indicator
66-022-1	Dual Tachometer Indicator
6607-1	Pressure Switch
6607-1-90A	Pressure Switch
6607-2	Pressure Switch
6607-3	Pressure Switch
6607-3-54	Pressure Switch
6607-4	Pressure Switch
6607-5	Pressure Switch
6607-6	Pressure Switch
6607-7	Pressure Switch
6607-8	Pressure Switch
6607-9	Pressure Switch
6607A3-22	Pressure Switch
6608208-5	Angle Of Attack Indicator
6608217-11	Aileron Trim Indicator
660-8314-1	Dual Tachometer Indicator
660-8332-1	Tachometer Indicator
660-8333-1	T.O.T. Indicator
6608401-11	Ammeter
6610-00-085-2739	Attitude Indicator
6610-00-089-6950	Turn & Slip Indicator
6610-00-110-3368	Altimeter
6610-00-115-2405	Altimeter
6610-00-133-7749	Airspeed Indicator
6610-00-134-5625	Altimeter
6610-00-159-1627	Turn & Slip Indicator
6610-00-169-1489	Turn & Slip Indicator
6610-00-337-9874	Turn & Slip Indicator
6610-00-526-4397	Airspeed Indicator
6610-00-557-3030	Attitude Indicator
6610-00-903-0714	Vertical Speed Indicator
6610-00-912-3613	Attitude Indicator

6610-00-952-8832	Vertical Speed Indicator
6610-01-029-6702	Rate Gyro Transmitter
6610-01-029-673	Vertical Speed Indicator
6610-01-029-7544	Attitude Indicator
6610-01-118-75-7577	Cruise Indicator
6610-01-118-7577	Cruise Indicator
6610-01-119-7389	Longitude Indicator
6610-01-119-7390	Longitude Indicator
6610-01-125-0726	Vertical Speed Indicator
6610-01-135-2149	Attitude Indicator
6610-01-159-0438	Turn & Slip Indicator
6610-01-163-7061	Rate Gyro Transmitter
6610-01-226-7612	Airspeed Indicator
6610-012-4624	Vertical Speed Indicator
6610-01-568-4933	Airspeed Indicator
6610-089-6950	Turn & Slip Indicator
6610-12-140-6782	Vertical Speed Indicator
6610-12-141-1331	Vertical Speed Indicator
6610-12-144-9338	Vertical Speed Indicator
6610-14-268-1620	Gyro Horizon
6610-169-1489	Turn & Slip Indicator
66-1037-08	Dme Indicator
6610-388-0049	Attitude Indicator
6610-390-8441	Attitude Indicator
6610-526-4717	Attitude Indicator
6610-526-6765	Attitude Indicator
6610-663-8798	Attitude Indicator
6610-663-8800	Attitude Indicator
661072-0101	Altimeter
6610-810-3245	Altimeter
661102B	Phase Adapter
6615-00-167-9757	Directional Gyro
6615-00-453-5669	Displacement Gyro
6615-01-031-7270	Displacement Gyro
6615-01-134-8914	Vertical Gyro
6615-01-187-0548	Displacement Gyro
6615-01-266-7641	Displacement Gyro
6615-01-431-3517	Displacement Gyro
6620-00-179-2254	Oil Pressure Indicator
6620-00-514-5334	Pressure Indicator
6620-00-587-0363	Oil Pressure Indicator
6620-00-969-3972	R.P.M. Indicator
6620-01-025-8229	Gas Temperature Indicator
6620-01-0296705	Tachometer Indicator
6620-01-029-6705	Tachometer Indicator
6620-01-0653740	Tachometer Indicator
6620-01-065-3740	Tachometer Indicator
6620-01-083-7518	Torque Indicator
6620-01-120-7434	Fuel Flow Indicator

6620-01-179-2657	Pressure Transmitter
6620-01-179-9737	Torque Indicator
6620-01-301-8222	Torque Indicator
6620-01-322-7678	Tachometer Indicator
6620-01-422-3446	Transmitter
6620-01-457-7274	Torque Indicator
6620-01-457-7277	Tachometer Indicator
6620-020-6096	Turbine Inlet Temperature Indicator
6620-14-452-2695	Pressure Transmitter
6620-557-3023	Tachometer Indicator
6620-738-5996	Turbine Inlet Temperature Indicator
6625-00-235-4782	Dc Voltmeter
6625-00-239-6016	RADIO TEST SET
6625-00-538-9683	Ac Voltmeter
6625-00-544-5899	Loadmeter
6625-00-895-6646	RADIO TEST SET
6645-01-285-4284	Clock
66483-209-1	Fuel Indicator
6680-00-981-7828	Liquid Oxygen Indicator
6680-01-056-1779	Fuel Quantity Indicator
6680-01-081-9181	Tachometer Indicator
6680-01-123-7726	Liquid Transmitter
6680-01-123-7727	Liquid Quantity Indicator
6680-01-123-7728	Liquid Quantity Indicator
6680-01-127-2481	Tachometer Indicator
6680-01-150-0765	Liquid Level Transmitter
6680-01-291-4271	Totalizer Fuel Quantity Indicator
6685-00-557-0370	Temperature Indicator
6685-00-941-4087	Pressure Indicator
6685-01-119-7402	Temperature Indicator
6685-919-2188	Turbine Inlet Temperature Indicator
6695-00-045-4522	Liquid Quantity Indicator
6695-00-923-9046	Oil Temperature Indicator
6695-00-955-9476	OIL TEMPERATURE INDICATOR
6700-300-80-10	Ac Power Monitor
6700-400-80-10	Ac Power Monitor
67-005-298-00	Dual Fuel Pressure Indicator
671BK-010	Altimeter
671BK-011	Altimeter
671BK-03	Altimeter
671BK-07	Altimeter
671BU-010	Altimeter
671CK-010	Altimeter
671CK-018	Altimeter
671CKL-010	Altimeter
671CP-19-017	Altimeter
671CPU-015	Altimeter
671CPX10-05	Altimeter
671CU-015	Altimeter

671K-03	Altimeter
671P-19-017	Altimeter
672087-101	Hydraulic Pressure Indicator
672379-103	Pressure Indicator
67458-1	Panel
67-542-002-00J	Handgrip
67-542-003-00J	Handgrip
67A258	Actuator
67A317	Actuator
6800-100-80-10	Battery Temp Monitor
680-0251-600	Magnetic Brake
6800-C3A-41-A2	Torque Indicator
680-2351-1	T.O.T. Indicator
680-2352-1	Temperature & Pressure Indicator
684-4022-100	Static Inverter
684-4143-100	Static Inverter
68712-2120	Torque Indicator
68712-2122	Torque Indicator
688-100	Fire Warning Indicator
6900027-1	Prop Sync Indicator
697749-9	Indicator
698611-1	Torque Indicator
7000466-901	Attitude Director Indicator
7000466-902	Attitude Director Indicator
7000466-903	Attitude Director Indicator
7000466-904	Attitude Director Indicator
7000466-905	Attitude Director Indicator
7000466-906	Attitude Director Indicator
7000466-907	Attitude Director Indicator
7000466-908	Attitude Director Indicator
7000466-909	Attitude Director Indicator
7000466-910	Attitude Director Indicator
7000466-911	Attitude Director Indicator
7000466-912	Attitude Director Indicator
7000466-913	Attitude Director Indicator
7000466-914	Attitude Director Indicator
7000466-915	Attitude Director Indicator
7000466-916	Attitude Director Indicator
7000466-917	Attitude Director Indicator
7000466-918	Attitude Director Indicator
7000466-920	Attitude Director Indicator
7000466-925	Attitude Director Indicator
7000466-926	Attitude Director Indicator
7000466-935	Attitude Director Indicator
7000466-936	Attitude Director Indicator
7000466-945	Attitude Director Indicator
7000466-946	Attitude Director Indicator
7000466-951	Attitude Director Indicator
7000466-953	Attitude Director Indicator

7000466-955	Attitude Director Indicator
7000466-957	Attitude Director Indicator
7000466-959	Attitude Director Indicator
7000466-961	Attitude Director Indicator
7000466-966	Attitude Director Indicator
7000466-986	Attitude Director Indicator
7000469-901	Horizontal Situation Indicator
7000469-909	Horizontal Situation Indicator
7000605-901	Mode Selector
7000605-902	Mode Selector
7000622-901	Vertical Gyro
70-0075-1	Flasher Assembly
7000788-105	Gyro Horizon
7000788-135	Gyro Horizon
7000788-175	Gyro Horizon
7000788-191	Gyro Horizon
7000788-195	Gyro Horizon
7000789-901	Flight Director Computer
7000836-913	Attitude Director Indicator
7000839-901	Radar Altimeter
7000839-904	Radar Altimeter
7000839-905	Radar Altimeter
7000850-571	Attitude Director Indicator
7000850-771	Attitude Director Indicator
7000B	Gyro
7000E	Gyro
7001179-901	H.S.I.
7001179-951	H.S.I.
7001182-909	Attitude Director Indicator
7001182-913	Attitude Director Indicator
70-0158-1	Dimmer Control
70-0158-5	Dimmer Control
7002353-902	Air Data Sensor
7002353-913	Air Data Sensor
700248-1	Landing Light
7002493-901	Horizontal Situation Indicator
7002493-902	Horizontal Situation Indicator
7002493-903	Horizontal Situation Indicator
7002493-904	Horizontal Situation Indicator
7002493-905	Horizontal Situation Indicator
7002493-906	Horizontal Situation Indicator
7002493-907	Horizontal Situation Indicator
7002493-908	Horizontal Situation Indicator
7002493-909	Horizontal Situation Indicator
7002493-910	Horizontal Situation Indicator
7002493-911	Horizontal Situation Indicator
7002493-912	Horizontal Situation Indicator
7002638-901	Airspeed/Temperature Indicator
7002638-902	Airspeed/Temperature Indicator

7002638-903	Airspeed/Temperature Indicator
7002638-904	Airspeed/Temperature Indicator
7002638-905	Airspeed/Temperature Indicator
7002638-906	Airspeed/Temperature Indicator
7002638-907	Airspeed/Temperature Indicator
7002638-908	Airspeed/Temperature Indicator
7002638-909	Airspeed/Temperature Indicator
700-2760-1	Torque Indicator
700-2CF	Gyro Horizon
700348-11	Rpm Limit Detector
700348-15	Rpm Limit Detector
700348-17	Rpm Limit Detector
700348-7	Rpm Limit Detector
700-3CF	Gyro Horizon
700-5211-5	Torque Indicator
700-5213-1	T.O.T. Indicator
700-5215-1	Tachometer Indicator
700-5217-1	Tachometer Indicator
700-5217-3	Tachometer Indicator
700-5217-5	Tachometer Indicator
700-5CF	Gyro Horizon
7015480-901	DIGITAL FLIGHT CONTROL COMPUTER
7015480-902	DIGITAL FLIGHT CONTROL COMPUTER
7015480-903	DIGITAL FLIGHT CONTROL COMPUTER
7020B	Instantaneous Vertical Speed Indicator
70250-21014-103	Handgrip
70285-01	Anti-Collision Light
70285-06	Searchlight
70285-1	Strobe Light
70285-21	Strobe Light
7030 C.27	Vertical Speed Indicator
7030 C.27A	Vertical Speed Indicator
7030B	Instantaneous Vertical Speed Indicator
7030BC73	V.S.I.
7030C.189	Vertical Speed Indicator
7030-C.29	Vertical Speed Indicator
704 A45 360 043	Audio Controller
704.A.43.230.006	Trim Motor Actuator
70400-01260-102	Handgrip
70400-01405-103	Handgrip
70400-01405-104	Handgrip
70400-21222-044	Handgrip
70400-21260-103	Handgrip
70400-21405-106	Handgrip
70400-21405-107	Handgrip
70400-61801-101	Handgrip
70400-61801-102	Handgrip
70400-61802-101	Handgrip
7040B	Instantaneous Vertical Speed Indicator

70450-21905-101	Handgrip
7046-100	Transmitter
704A 47 612 120	N Rotor Indicator
704A.37.721.026	Pressure Switch
704A.37.721.056	Pressure Switch
704A.37.721.073	Pressure Switch
704A_47_612 052	Rotor Rpm Indicator
704A36310000	Motor
704A36711004	Dc Voltmeter
704A36712018	Ammeter
704A37111008	Vertical Speed Indicator
704A37270090	Cluster Indicator
704A37270095	Cluster Indicator
704A37334001	Slaving Accessory
704A37612012	Tachometer Indicator
704A37633008	Oil Temperature Indicator
704A37633025	Oil Temperature Indicator
704A37641106	Oil Pressure Indicator
704A37642042	Pressure Transmitter
704A37642060	Pressure Transmitter
704A37-642-060	Pressure Transmitter
704A37642064	Pressure Switch
704A37643009	Pressure Sensor
704A37650099	Fuel Quantity Indicator
704A37650100	Fuel Quantity Indicator
704A37670009	Flow Transmitter
704A37721026	Differential Pressure Switch
704A37721048	Differential Pressure Switch
704A37721051	Differential Pressure Switch
704A37721056	Differential Pressure Switch
704A37721073	Differential Pressure Switch
704A41110016	Handgrip
704A41110030	Handgrip
704A41110037	Handgrip
704A41110038	Handgrip
704A41110040	Handgrip
704A41110041	Handgrip
704A41110045	Handgrip
704A41110053	Handgrip
704A41-110-053	Grip Assembly
704A41-110-106	Grip Assembly
704A41440014	Landing Gear Position Indicator
704A43230006	Actuator
704A45310034	Vhf Communications Transceiver
704A45310064	Vhf Communications Transceiver
704A45360043	Audio Controller
704A45720048	Radar Altimeter
704A45720049	Radar Altimeter
704A45720058	Radar Altimeter

704A45730012	Atc Transponder
704A45731033	Atc Control
704A45802003	Dme Transceiver
704A45802009	Dme Transceiver
704A45802016	Dme Transceiver
704A45810040	Adf Receiver
704A45813034	Nav Receiver
704A45823010	Dme Indicator
704A45824004	Dme Indicator
704A45824015	Radar Altimeter
704A45824025	Dme Indicator
704A45824028	Dme Indicator
704A45832025	Inverter
704A45840045	Adf Control
704A45842025	Navigation Control
704A46.817.027	Beacon Assembly
704A46.817.056	Beacon Assembly
704A46570009	Master Electrical Box
704A46580048	Engine Warning Box
704A4681005	Circuit Light Card
704A46814049	Light Dimmer
704A46-814-049	Light Dimmer
704A46817027	Beacon Assembly
704A46817056	Beacon Assembly
704A46818000	Dimmer Light Card
704A46818005	Lighting Harmonization Card
704A46820034	Searchlight
704A46-820-034	Searchlight
704A46851007	Strobe Light
704A47.270-133	Cluster Indicator
704A47.720.059	Alarm Rotor
704A47111022	Vertical Speed Indicator
704A47111034	Vertical Speed Indicator
704A47111035	Vertical Speed Indicator
704A47111037	Vertical Speed Indicator
704A47111039	Vertical Speed Indicator
704A47113027	Airspeed Indicator
704A47113028	Airspeed Indicator
704A47113064	Airspeed Indicator
704A47113080	Airspeed Indicator
704A47113089	Airspeed Indicator
704A47113099	Vertical Speed Indicator
704A47113106	Airspeed Indicator
704A47115003	Turn & Bank Indicator
704A47150038	Gyro Horizon
704A47150048	Gyro Horizon
704A47150055	Gyro Horizon
704A47150071	Gyro Horizon
704A47150081	Gyro Horizon

704A47150083	Gyro Horizon
704A47150086	Gyro Horizon
704A47150103	Gyro Horizon
704A47150118	Gyro Horizon
704A47150120	Gyro Horizon
704A47150125	Gyro Horizon
704A47150130	Gyro Horizon
704A-47-150-132	Gyro Horizon
704A47210027	Altimeter
704A47210028	Altimeter
704A47210083	Altimeter
704A47212004	Encoding Altimeter
704A47212007	Encoding Altimeter
704A47212011	Encoding Altimeter
704A47212021	Encoding Altimeter
704A47232021	Temperature Probe
704A47270100	Instrument Cluster
704A47270101	Instrument Cluster
704A47270102	Instrument Cluster
704A47270138	Instrument Cluster
704A47300010	Gyrosyn Compass Indicator
704A47310016	Directional Gyro
704A47310019	Directional Gyro
704A47313009	Standby Compass
704A47320006	Clock
704A47320011	Clock
704A47320020	Clock
704A47320041	Digital Clock
704A47330036	Horizontal Situation Indicator
704A47-330-038	Horizontal Situation Indicator
704A47330050	R.M.I.
704A47330051	R.M.I.
704A47330052	R.M.I.
704A47330089	Horizontal Situation Indicator
704A47330100	Horizontal Situation Indicator
704A47334004	Slaving Accessory
704A47610065F1	Dual Tachometer Indicator
704A47610069	Tachometer Indicator
704A47610072	Nr/Nf Indicator
704A47611014	Tach Generator
704A-47611-014	Tach Generator
704A47611015	Tach Generator
704A47612020	Tachometer Indicator
704A47612025	Tachometer Indicator
704A-47-612-025	Gas Producer Tachometer Indicator
704A47612035	Tachometer Indicator
704A47612039	Tachometer Indicator
704A47-612-039	Tachometer Indicator
704A47612042	Tachometer Indicator

704A-47-612-042	Gas Producer Tachometer Indicator
704A47612044	Tachometer Indicator
704A47-612-044	Ng Tachometer Indicator
704A47612045	Rotor Rpm Indicator
704A47612051	Rotor Rpm Indicator
704A47612052	Rotor Rpm Indicator
704A47-612-052	Rotor Rpm Indicator
704A47612053	Rotor Rpm Indicator
704A47612063	Dual Tachometer Indicator
704A47-612-063	Ng Tachometer Indicator
704A47612065	Tachometer Indicator
704A47612066	Tachometer Indicator
704A47612071	Rotor Rpm Indicator
704A47612074	Tachometer Indicator
704A47612078	Tachometer Indicator
704A47612083	Failure Indicator
704A47612092	Ng Tachometer Indicator
704A47612098	Ng Tachometer Indicator
704A47612102	Ng Tachometer Indicator
704A47612113	Ng Tachometer Indicator
704A47612120	Tachometer Indicator
704A47612123	Delta Ng Indicator
704A47612131	Tachometer Indicator
704A47612134	Delta Ng Indicator
704A47612139	Delta Ng Indicator
704A47616008	Triple Tachometer Indicator
704A47616009	Tachometer Indicator
704A47616036	Tachometer Indicator
704A47616039	Rotor Rpm Indicator
704A47616040	Triple Tachometer Indicator
704A47616045	Nr/Ntl Indicator
704A47620013	Oil Pressure Transmitter
704A47620019	Pressure Transmitter
704A47621073	Torque Indicator
704A47621082	Dual Torque Indicator
704A47621088	Dual Torque Indicator
704A47621089	Dual Torque Indicator
704A-47-621-089	Dual Torque Indicator
704A47621092	Torque Indicator
704A47621096	Dual Torque Indicator
704A47-621-097	Torque Indicator
704A47621111	Torque Indicator
704A47621114	Torque Indicator
704A47621120	Torque Indicator
704A47621128	Torque Indicator
704A47621135	Torque Indicator
704A47621138	Torque Indicator
704A47621139	Torque Indicator
704A47632021	T4 Temperature Indicator

704A47632026	T4 Temperature Indicator
704A47632038	T4 Temperature Indicator
704A47632051	T4 Temperature Indicator
704A47632065	T4 Temperature Indicator
704A47632066	Temperature Indicator
704A47633045	Oil Temperature Indicator
704A47633047	Oil Temperature Indicator
704A47633052	Oil Temperature Indicator
704A47640009	Torque Transmitter
704A47641028	Pressure Indicator
704A47641033	Pressure Indicator
704A47641098	Pressure Indicator
704A47641109	Pressure Indicator
704A47641113	Pressure Indicator
704A47643018	Pressure Transmitter
704A47644014	Pressure Indicator
704A47644029	Pressure Indicator
704A47644030	Pressure Indicator
704A47644039	Pressure Indicator
704A47650050	Fuel Indicator
704A47650074	Fuel Indicator
704A47650075	Fuel Indicator
704A47650077	Fuel Indicator
704A47650078	Fuel Indicator
704A47650079	Fuel Indicator
704A47650082	Fuel Indicator
704A47650083	Fuel Indicator
704A47650118	Fuel Indicator
704A47650119	Fuel Indicator
704A47651012	Fuel Quantity Transmitter
704A47-651-012	Fuel Quantity Transmitter
704A47651091	Fuel Quantity Transmitter
704A47651094	Fuel Quantity Transmitter
704A47651096	Fuel Quantity Transmitter
704A47651097	Fuel Quantity Transmitter
704A47651099	Fuel Quantity Transmitter
704A47660012	Temperature & Pressure Indicator
704A47671031	Flowmeter Indicator
704A47720100	Alarm Rotor
704A477210077	Altimeter
704A47723014	Annunciator
704A47723017	Annunciator
704A4A7650116	Fuel Quantity Indicator
70550-03101-101	Handgrip
7060B	Vertical Speed Indicator
7060C.46	Vertical Speed Indicator
7060L	Vertical Speed Indicator
7060L C.179	Vertical Speed Indicator
708554-11	Master Caution Panel

708554-13	Master Caution Panel
708554-5	Master Caution Panel
709K-01	Altimeter
7120B	Instantaneous Vertical Speed Indicator
7125-1	Rate Gyro
7125-2	Rate Gyro
7130B	Instantaneous Vertical Speed Indicator
7130B C.71	I.V.S.I.
7132-11	Instantaneous Vertical Speed Indicator
7140B	Instantaneous Vertical Speed Indicator
714125-1	Fault Function Panel
7160B	Instantaneous Vertical Speed Indicator
7160C130	Vertical Speed Indicator
716-523-2	Fuel Indicator
716-585-1	Fuel Indicator
716-586-1	Fuel Indicator
716-587-1	Fuel Indicator
716-879	Fuel Indicator
716BK-5-046	Rate Of Climb Indicator
716BK-8-036	Rate Of Climb Indicator
716BU-4-052	Rate Of Climb Indicator
716BU-8-036	Rate Of Climb Indicator
716CU-4-052	Rate Of Climb Indicator
716U-03	Altimeter
7185-15	Actuator
7185-7	Actuator
7200-2	Rate Of Climb Indicator
7200-3	Rate Of Climb Indicator
7200-4	Rate Of Climb Indicator
7201-2	Rate Of Climb Indicator
7201-3	Rate Of Climb Indicator
7201-4	Rate Of Climb Indicator
720-15900-1410	Cabin Altitude, Rate & Differential Pressure Indicator
720-15900-410	Cabin Altitude, Rate & Differential Pressure Indicator
720-5900-1410	Cabin Altitude, Rate & Differential Pressure Indicator
7210-2	Rate Of Climb Indicator
7210-3	Rate Of Climb Indicator
7210-4	Rate Of Climb Indicator
7211-2	Rate Of Climb Indicator
7211-3	Rate Of Climb Indicator
7211-4	Rate Of Climb Indicator
724CU-4-012	Airspeed Indicator
724CU-5-011	Airspeed Indicator
724CU5-03M	Airspeed Indicator
724CU8-011	Airspeed Indicator
724DX4-012	Airspeed Indicator
727MVBU1	Temperature Indicator
727MVBU10	Temperature Indicator
727MVBU11	Temperature Indicator

727MVBU12	Temperature Indicator
727MVBU14	Temperature Indicator
727MVBU15	Temperature Indicator
727MVBU16	Temperature Indicator
727MVBU17-580	Temperature Indicator
727MVBU17-600	Temperature Indicator
727MVBU17-640	Temperature Indicator
727MVBU18-580	Temperature Indicator
727MVBU18-610	Temperature Indicator
727MVBU18-620	Temperature Indicator
727MVBU18-640	Temperature Indicator
727MVBU19	Temperature Indicator
727MVBU2	Temperature Indicator
727MVBU20-500	Temperature Indicator
727MVBU20-560	Temperature Indicator
727MVBU21-500	Temperature Indicator
727MVBU22	Temperature Indicator
727MVBU24	Temperature Indicator
727MVBU-25-640	Temperature Indicator
727MVBU26	Temperature Indicator
727MVBU3	Temperature Indicator
727MVBU30	Temperature Indicator
727MVBU32	Temperature Indicator
727MVBU33-580	Temperature Indicator
727MVBU34-700	Temperature Indicator
727MVBU37	Temperature Indicator
727MVBU38	Temperature Indicator
727MVBU39-700	Temperature Indicator
727MVBU4	Temperature Indicator
727MVBU40-700	Temperature Indicator
727MVBU42-690	Temperature Indicator
727MVBU43-550	Temperature Indicator
727MVBU44-700	Temperature Indicator
727MVBU46-650	Temperature Indicator
727MVBU47-580	Temperature Indicator
727MVBU48	Temperature Indicator
727MVBU5	Temperature Indicator
727MVBU50	Temperature Indicator
727MVBU51-700	Temperature Indicator
727MVBU52-640	Temperature Indicator
727MVBU53-650	Temperature Indicator
727MVBU53-750	Temperature Indicator
727MVBU54-690	Temperature Indicator
727MVBU56-730	Temperature Indicator
727MVBU57-740	Temperature Indicator
727MVBU-580	Temperature Indicator
727MVBU59-720	Temperature Indicator
727MVBU6	Temperature Indicator
727MVBU60-720	Temperature Indicator

727MVBU61-750	Temperature Indicator
727MVBU62-700	Temperature Indicator
727MVBU63	Temperature Indicator
727MVBU64-660	Temperature Indicator
727MVBU65-720	Temperature Indicator
727MVBU66-660	Temperature Indicator
727MVBU68-640	Temperature Indicator
727MVBU69-750	Temperature Indicator
727MVBU7	Temperature Indicator
727MVBU8	Temperature Indicator
72914/45-0128	Searchlight
72914/45-0128-3	Searchlight
72ESF2013-4	Total Fuel Used Indicator
73-101-1	Fuel Quantity Tank Unit
73-102-1	Fuel Probe
73-102-2	Fuel Probe
73-118-1	Fuel Quantity Transmitter
73168/17343-771-310F	Detector
739K-03	Airspeed Indicator
739U-03	Airspeed Indicator
73B020-001	Directional Gyro
742287-1-0	Fuel Quantity Indicator
742288-1-0	Fuel Quantity Indicator
742289-1-0	Fuel Quantity Indicator
742290-1-0	Fuel Quantity Indicator
742366-1-0	Fuel Quantity Indicator
744-082	Digital Flow Indicator
744-082-3	Digital Flow Indicator
744-098-1	Digital Flow Indicator
748-355-2	Fuel Quantity Transmitter
748-465-4	Fuel Quantity Indicator
748-465-5	Fuel Quantity Indicator
748-522-1	Fuel Quantity Indicator
748-522-2	Fuel Quantity Indicator
748-538	Fuel Indicator
748-681-1	Fuel Quantity Indicator
748-681-2	Fuel Quantity Indicator
748-682-1	Fuel Quantity Indicator
748-682-2	Fuel Quantity Indicator
748-722	Repeater Indicator
748-724	Repeater Indicator
748-735	Fuel Indicator
748-934-2	Fuel Indicator
749-158	Fuel Quantity Indicator
749-159	Fuel Quantity Indicator
749-160	Fuel Quantity Indicator
749-161	Fuel Quantity Indicator
749-188	Triple Pressure Indicator
749-416	Fuel Indicator

749-757	Fuel Quantity Indicator
749-758	Fuel Quantity Indicator
749-759	Fuel Quantity Indicator
749-760	Fuel Quantity Indicator
75-0285-11	Caution Annunciator Panel
75-0285-13	Caution Annunciator Panel
75-0285-15	Caution Annunciator Panel
75-0285-17	Caution Annunciator Panel
75-0285-21	Caution Annunciator Panel
75-0286-1	Caution Annunciator Panel
75-0286-11	Caution Annunciator Panel
75-0286-13	Caution Annunciator Panel
75-0286-15	Caution Annunciator Panel
75-0286-17	Caution Annunciator Panel
75-0286-3	Caution Annunciator Panel
75-0286-5	Caution Annunciator Panel
75-0286-7	Caution Annunciator Panel
75-0286-9	Caution Annunciator Panel
75-0363-3	Caution Annunciator Panel
75-0434-5	Caution Annunciator Panel
7532-175-00-12	Dual Tachometer Indicator
754661-8	Cabin Temperature Controller
756450-02011-104	Grip Assembly
7582-175-00-12	Dual Tachometer Indicator
7582-175-00-12X	Dual Tachometer Indicator
7582-175-00-12XX	Dual Tachometer Indicator
758355-2	Fuel Level Transmitter
758-355-2	Fuel Quantity Transmitter
758IE000	Fuel Quantity Transmitter
76-1	Vertical Gyro
7613-551-91-13	Temperature Indicator
7613-554-91-11	Temperature Indicator
7613-555-91-10	Temperature Indicator
7613-557-91-10	Temperature Indicator
76-2	Vertical Gyro
762MVBM44-791	Temperature Indicator
762MVBU10-700	Temperature Indicator
762MVBU11	Temperature Indicator
762MVBU12	Temperature Indicator
762MVBU15-725	Temperature Indicator
762MVBU16-580	Temperature Indicator
762MVBU1-740	Temperature Indicator
762MVBU18-740	Temperature Indicator
762MVBU18-750	Temperature Indicator
762MVBU19-700	Temperature Indicator
762MVBU20-860	Temperature Indicator
762MVBU21-860	Temperature Indicator
762MVBU22-680	Temperature Indicator
762MVBU23-860	Temperature Indicator

762MVBU24-790	Temperature Indicator
762MVBU25-720	Temperature Indicator
762MVBU2-580	Temperature Indicator
762MVBU26-700	Temperature Indicator
762MVBU27-860	Temperature Indicator
762MVBU28-800	Temperature Indicator
762MVBU30-770	Temperature Indicator
762MVBU33-700	Temperature Indicator
762MVBU34-700	Temperature Indicator
762MVBU3-520	Temperature Indicator
762MVBU36-860	Temperature Indicator
762MVBU37-800	Temperature Indicator
762MVBU38-790	Temperature Indicator
762MVBU40-860	Temperature Indicator
762MVBU41-805	Temperature Indicator
762MVBU42-900	Temperature Indicator
762MVBU43-900	Temperature Indicator
762MVBU5-590	Temperature Indicator
762MVBU5-600	Temperature Indicator
762MVBU6-580	Temperature Indicator
762MVBU7	Temperature Indicator
762MVBU8-550	Temperature Indicator
762MVBU9-550	Temperature Indicator
76450-00706-102	P.T.I.T. Indicator
76450-00706-103	Triple Tachometer Indicator
76450-00801-100	Airspeed Indicator
76450-00801-101	Airspeed Indicator
76450-00801-99	Airspeed Indicator
76450-00803-101	Handgrip
76450-00901-101	Triple Tachometer Indicator
76450-00901-102	Triple Tachometer Indicator
76450-00901-103	Triple Tachometer Indicator
76450-00901-104	Triple Tachometer Indicator
76450-00902-102	Dual Torque Indicator
76450-00902-103	Dual Torque Indicator
76450-00903-101	Tachometer Indicator
76450-00904-103	P.T.I.T. Indicator
76450-00904-104	P.T.I.T. Indicator
76450-00904-105	P.T.I.T. Indicator
76450-00904-106	Ptit Indicator
76450-00906-102	Oil Temperature & Pressure Indicator
76450-00907-103	Oil Temperature & Pressure Indicator
76450-00908-101	Handgrip
76450-01072-103	Oil Temperature & Pressure Indicator
76450-01072-104	Fuel Pressure Indicator
76450-01072-105	Dual Fuel Quantity Indicator
76450-01072-106	Dual Oil Pressure Indicator
76450-01072-107	Oil Temperature & Pressure Indicator
76450-01072-109	Dual Torque Indicator

76450-01076-101	N1 Tachometer Indicator
76450-01076-102	P.T.I.T. Indicator
76450-01076-103	Triple Tachometer Indicator
76450-01076-105	T5 Temperature Indicator
76450-01076-106	Turbine Temperature Indicator
76450-01076-107	T5 Temperature Indicator
76450-01076-110	N1 Indicator
76450-01076-111	Temperature Indicator
76450-01076-112	Triple Tachometer Indicator
76450-01078-101	Temperature & Pressure Indicator
76450-01078-102	Fuel Pressure Indicator
76450-01078-103	Dual Fuel Quantity Indicator
76450-01078-104	Pressure Indicator
76450-01078-106	Dual Torque Indicator
76450-01078-109	Torque Pressure Indicator
76450-01078-111	Oil Temperature & Pressure Indicator
76450-01078-112	Temperature & Pressure Indicator
76450-01078-125	Dual Torque Indicator
76450-01078-126	Oil Temperature & Pressure Indicator
76450-01078-128	Pressure Transmitter
76450-01096-101	N1 Tachometer Indicator
76450-01096-108	N1 Indicator
76450-02010-103	Handgrip
76450-02011-103	Handgrip
76450-02011-104	Handgrip
76550-01001-103	Caution Panel
76550-01010-101	Windshield Heater Control
76550-02005-102	Searchlight
76550-09006-105	Generator Control Unit
76550-09006-106	Generator Control Unit
76600-02113-103	Vertical Gyro
76AT2B	Temperature Indicator
76AT3BN	Temperature Indicator
76AT3C	Temperature Indicator
76B	Temperature Indicator
76B20	Temperature Indicator
76B23	Temperature Indicator
76B2A	Temperature Indicator
76B3	Temperature Indicator
76B502A	Temperature Indicator
76B503	Temperature Indicator
76B526	Temperature Indicator
76B711	Temperature Indicator
7709-15-A5-1	Pressure Transmitter
7709-15-B8-2	Pressure Transmitter
7709-15-G5-1	Pressure Transmitter
772-5140-001	Rate Of Turn Sensor
772-5140-002	Rate Of Turn Sensor
7740-00001	Tank Unit

7740-00002	Tank Unit
7740-00005	Tank Unit
7740-00006	Tank Unit
7740-00011	Tank Unit
7740-00012	Tank Unit
7740-00013	Tank Unit
7740-000168	Tank Unit
7740-000169	Tank Unit
7740-000177	Tank Unit
7740-000182	Tank Unit
7740-000183	Tank Unit
7740-00025	Tank Unit
7740-00026	Tank Unit
7740-00027	Tank Unit
7740-00028	Tank Unit
7740-00030	Tank Unit
7740-00037	Tank Unit
7740-00040	Tank Unit
7740-00041	Tank Unit
7740-00046	Tank Unit
7740-00047	Tank Unit
7740-00050	Tank Unit
7740-00051	Tank Unit
7740-00052	Tank Unit
7740-00055	Tank Unit
7740-00056	Tank Unit
7740-00067	Tank Unit
7740-00068	Tank Unit
7740-00069	Tank Unit
7740-00071	Tank Unit
7740-00078	Tank Unit
7740-00079	Tank Unit
7740-00082	Tank Unit
7740-00084	Tank Unit
7740-00087	Tank Unit
7740-00088	Tank Unit
7740-00089	Tank Unit
7740-00091	Tank Unit
7740-00095	Tank Unit
7740-00096	Tank Unit
7740-0010	Tank Unit
7740-00100	Tank Unit
7740-00106	Tank Unit
7740-00107	Tank Unit
7740-00108	Tank Unit
7740-00109	Tank Unit
7740-00114	Tank Unit
7740-00117	Tank Unit
7740-00118	Tank Unit

7740-00121	Tank Unit
7740-00126	Tank Unit
7740-00128	Tank Unit
7740-00134	Tank Unit
7740-00138	Tank Unit
7740-00139	Tank Unit
7740-00147	Tank Unit
7740-00154	Tank Unit
7740-00155	Tank Unit
7740-00157	Tank Unit
7740-00159	Tank Unit
7740-00164	Tank Unit
7740-00167	Tank Unit
7740-00176	Tank Unit
7740-00190	Tank Unit
7740-00194	Tank Unit
7740-00195	Tank Unit
7740-00204	Tank Unit
7740-00205	Tank Unit
7740-00206	Tank Unit
7740-00207	Tank Unit
7740-00210	Tank Unit
7740-00212	Tank Unit
7740-00213	Tank Unit
7740-00214	Tank Unit
7740-00231	Tank Unit
7740-00233	Tank Unit
7740-00234	Tank Unit
7740-00242	Tank Unit
7740-00243	Tank Unit
7740-00247	Tank Unit
7740-00257	Tank Unit
7740-00258	Tank Unit
7740-00259	Tank Unit
7740-00264	Tank Unit
7740-00291	Tank Unit
7740-00292	Tank Unit
7740-00293	Tank Unit
7740-00298	Tank Unit
7740-00302	Tank Unit
7740-00303	Tank Unit
7740-00305	Tank Unit
7740-00309	Tank Unit
7740-00312	Tank Unit
7740-00325	Tank Unit
7740-00326	Tank Unit
7740-00336	Tank Unit
7740-00337	Tank Unit
7740-00344	Tank Unit

7740-00345	Tank Unit
7740-00346	Tank Unit
7740-00362	Tank Unit
7740-00363	Tank Unit
7740-00375	Tank Unit
7740-00381	Tank Unit
7740-00393	Tank Unit
7740-00394	Tank Unit
7740-00403	Tank Unit
7740-00404	Tank Unit
7740-00405	Tank Unit
7740-00408	Tank Unit
7740-00409	Tank Unit
7740-00410	Tank Unit
7740-00411	Tank Unit
7740-00412	Tank Unit
7740-00413	Tank Unit
7740-00414	Tank Unit
7740-00419	Tank Unit
7740-00420	Tank Unit
7740-00435	Tank Unit
7740-00438	Tank Unit
7740-00439	Tank Unit
7740-00443	Tank Unit
7740-00448	Tank Unit
7740-00459	Tank Unit
7740-00466	Tank Unit
7740-00468	Tank Unit
7740-00469	Tank Unit
7740-00480	Tank Unit
7740-00504	Tank Unit
7740-00506	Tank Unit
7740-00514	Tank Unit
7740-00515	Tank Unit
7740-00517	Tank Unit
7740-0108	Tank Unit
7740-015	Tank Unit
7740-037	Tank Unit
7740-106	Tank Unit
7740-107	Tank Unit
7740-109	Tank Unit
7740-114	Tank Unit
7740-135	Tank Unit
7740-204	Tank Unit
7740-205	Tank Unit
7740-206	Tank Unit
7740-207	Tank Unit
7740-40	Tank Unit
7740-41	Tank Unit

7740-468	Tank Unit
7740-469	Tank Unit
7740-503	Tank Unit
7740-504	Tank Unit
7740-59	Tank Unit
7749-122-A5-1	Oil Pressure Transmitter
777-1034-001	Rate Of Turn Sensor
777-1493-005	Adf Control
77B	Temperature Indicator
77B15	Temperature Indicator
77B36	Temperature Indicator
77B7	Temperature Indicator
77C7	Temperature Indicator
77C8	Temperature Indicator
77D2	Temperature Indicator
78035-01100	Tachometer Indicator
78035-01112	Tachometer Indicator
78035-01113	Tachometer Indicator
78035-01118	Tachometer Indicator
78035-0161	Tachometer Indicator
78035-11119	Tachometer Indicator
7813-175-00-13	Triple Tachometer Indicator
7813-175-00-13F	Triple Tachometer Indicator
7813-175-00-13X	Triple Tachometer Indicator
7813-175-00-13Y	Triple Tachometer Indicator
7813-175-00-15	Triple Tachometer Indicator
7813-177-00-11	Nr-N/TI1-N/TI2 Indicator
7813-177-00-12	Nr-N/TI1-N/TI2 Indicator
7813-178-20-11	Nr-N/TI1-N/TI2 Indicator
7813-178-20-12	Nr-N/TI1-N/TI2 Indicator
78200000-01	Triple Tachometer Indicator
78200000-02	Triple Tachometer Indicator
78200000-03	Triple Tachometer Indicator
78200000-04	Triple Tachometer Indicator
78200000-05	Triple Tachometer Indicator
78200000-06	Triple Tachometer Indicator
78200000-07	Triple Tachometer Indicator
78200000-08	Triple Tachometer Indicator
78286-76450-00904-106	Turbine Inlet Temperature Indicator
78300000-01	Triple Torque Indicator
78300000-02	Triple Torque Indicator
78300000-03	Triple Torque Indicator
78300000-04	Triple Torque Indicator
78300000-05	Triple Torque Indicator
78300000-06	Triple Torque Indicator
78300000-07	Triple Torque Indicator
78300000-08	Triple Torque Indicator
78300000-09	Triple Torque Indicator
78300000-11	Triple Torque Indicator

783200000-05	Triple Torque Indicator
78320000-01	Triple Torque Indicator
78320000-02	Triple Torque Indicator
78320000-03	Triple Torque Indicator
78320000-04	Triple Torque Indicator
78320000-05	Triple Torque Indicator
7852-175-00-12	NI Dual Indicator
787-6173-013	Attitude Director Indicator
787-6173-016	Attitude Director Indicator
787-6385-001	Course Indicator
787-6385-002	Course Indicator
787-6385-003	Course Indicator
787-6385-004	Course Indicator
787-6385-005	Course Indicator
787-6385-006	Course Indicator
788664-1	Nr/Nf Indicator
788664-2	Nr/Nf Indicator
788664-3	Nr/Nf Indicator
788998-1-1	Nr/Nf Indicator
792-6275-003	Dual Adf Control
792-6356-002	Course Indicator
792-6356-003	Course Indicator
792-6356-004	Course Indicator
792-6357-002	A.D.I.
792-6694-001	Vertical Gyro
794167-1	Fuel Probe
8.040.051.2	Altimeter
8.148.015	Gyro Horizon
8.148.900-1	Gyro Horizon
8.148.900-2	Gyro Horizon
8.148.900-3	Gyro Horizon
8.148.900-4	Gyro Horizon
8.249.001	Gyro Horizon
8.249.006	Gyro Horizon
8.249.007	Gyro Horizon
8.249.009	Gyro Horizon
8.249.050	Gyro Horizon
8.249.086	Gyro Horizon
8.249.095	Gyro Horizon
8000 B 336	Airspeed Indicator
8000 B.12	Airspeed Indicator
8000 B.336	Airspeed Indicator
8000 B.4	Airspeed Indicator
8000 B.629	Airspeed Indicator
8000B.12	Airspeed Indicator
8000B.336	Airspeed Indicator
8000B.402	Airspeed Indicator
8000B.751	Airspeed Indicator
8000B827	Airspeed Indicator

8000BH5	Airspeed Indicator
8000-BH5	Airspeed Indicator
8000L	Airspeed Indicator
8000T	Airspeed Indicator
80-0203	Annunciator Panel
80-0203-15	Annunciator Panel
80-0203-17	Annunciator Panel
80-0203-19	Annunciator Panel
80-0203-23	Annunciator Panel
80-0203-9	Annunciator Panel
80-0295	Annunciator Panel
80-0368-1	Annunciator Panel
80-0368-11	Annunciator Panel
80-0368-21	Annunciator Panel
80-0368-23	Annunciator Panel
80-0368-3	Annunciator Panel
80-0368-5	Annunciator Panel
80-0368-7	Annunciator Panel
80-0381-3	Annunciator Panel
80-0475-11	Annunciator Panel
80-0475-5	Annunciator Panel
80-0500-1	Annunciator Panel
80-0500-11	Annunciator Panel
80-0500-13	Annunciator Panel
80-0500-15	Annunciator Panel
80-0500-17	Annunciator Panel
80-0500-19	Annunciator Panel
80-0500-21	Annunciator Panel
80-0500-23	Annunciator Panel
80-0500-25	Annunciator Panel
80-0500-27	Annunciator Panel
80-0500-29	Annunciator Panel
80-0500-3	Annunciator Panel
80-0500-31	Annunciator Panel
80-0500-33	Annunciator Panel
80-0500-35	Annunciator Panel
80-0500-37	Annunciator Panel
80-0500-39	Annunciator Panel
80-0500-5	Annunciator Panel
80-0500-7	Annunciator Panel
80-0500-9	Annunciator Panel
80-0557-11	Aural Warning Unit
800-5-BATT	Clock
80181WB84	Tachometer Indicator
8025-1 B.701	Airspeed Indicator
8025-1B701	Airspeed Indicator
8025-1B816	Airspeed Indicator
8025-1B842	Airspeed Indicator
8025-1B883	Airspeed Indicator

8025-B845	Airspeed Indicator
80294-2001844204	Transmitter
8030B.448	Airspeed Indicator
8040B	Encoding Altimeter
8040B-20	Encoding Altimeter
8040B-20LX	Encoding Altimeter
8040B-20MB	Encoding Altimeter
8040B-20MB-LX	Encoding Altimeter
8040B-30	Encoding Altimeter
8040B-30LX	Encoding Altimeter
8040B-30MB	Encoding Altimeter
8040B-30MB-LX	Encoding Altimeter
8040B-35	Encoding Altimeter
8040B-35LX	Encoding Altimeter
8040B-35MB	Encoding Altimeter
8040B-35MB-LX	Encoding Altimeter
8040B-LX	Encoding Altimeter
8040B-MB	Encoding Altimeter
8040B-MB-LX	Encoding Altimeter
8040B-S20LW	Encoding Altimeter
8047-10DH	Altimeter
805C0620-05	Indicator
8107-101-00-12	Pressure Transmitter
8107-105-00-10	Pressure Transmitter
8107-110-00-10	Engine Oil Pressure Sensor
8107-122-00-10	Pressure Transmitter
8107-126-00-01	Pressure Transmitter
8107-126-00-10	Pressure Transmitter
8107-133-00-10	Pressure Transmitter
8107-137-00-10	Pressure Transmitter
8107-140-00-10	ENGINE SHUTDOWN DETECTION
81-0970-3	Lighting Panel
81-101-3	Fuel Quantity Indicator
81-101-5	Fuel Quantity Indicator
8114-101-00-10	Pressure Transmitter
8114-110-00-00	Pressure Transmitter
811B	Clock
811B-24	Clock
81-208-1	Fuel Quantity Indicator
8140B-20MB	Encoding Altimeter
8140B-20MB-LX	Encoding Altimeter
8140B-30MB	Encoding Altimeter
8140B-30MB-LX	Encoding Altimeter
8140B-35MB	Encoding Altimeter
8140B-35MB-LX	Encoding Altimeter
8140BS20LW	Altimeter
8140B-S20LW	Encoding Altimeter
8140B-S20-LW-MB	Encoding Altimeter
8141B	Encoding Altimeter

8141B-LX	Encoding Altimeter
8141B-MB	Encoding Altimeter
8141B-MB-LX	Encoding Altimeter
8142B	Encoding Altimeter
8142B-LX	Encoding Altimeter
8142B-MB	Encoding Altimeter
8142B-MB-LX	Encoding Altimeter
81440-02	RECEIVER DISPLAY UNIT
81440-03	RECEIVER DISPLAY UNIT
81440-12	RECEIVER DISPLAY UNIT
81440-32	RECEIVER DISPLAY UNIT
81440-33	RECEIVER DISPLAY UNIT
81440-42	RECEIVER DISPLAY UNIT
8148.900-1	Gyro Horizon
8148.900-15	Gyro Horizon
8148.900-2	Gyro Horizon
8148.900-3	Gyro Horizon
8148.900-4	Gyro Horizon
81901-07	Signal Processor Cruise Guide
82000-05602	Annunciator Panel
82000-05603	Annunciator Panel
82000-05604	Annunciator Panel
82000-05605	Annunciator Panel
82000-05606	Annunciator Panel
82000-05607	Annunciator Panel
820-264	Indicator
820-602	Angle Of Attack Indicator
820-615	Indicator
820-616	Indicator
820-617	Indicator
820-619	Indicator
820-620	Indicator
820-621	Indicator
820-622	Indicator
820-623	Indicator
820-642	Indicator
820-643	Indicator
820-644	Indicator
820-645	Indicator
820-646	Indicator
820-647	Indicator
820-658	Indicator
820-659	Indicator
820-662	Ammeter
820-663	Indicator
820-665	Indicator
820-666	Indicator
820-671	Tri-Meter
820-672	Indicator

820-674	Tri-Meter
820-675	Indicator
820-676	Indicator
820-679	Indicator
820-685	Indicator
820-688	Indicator
820-689	Indicator
820-696	Indicator
820-717	Indicator
82100000-01	Dual Torque Indicator
82100000-02	Dual Torque Indicator
822-0400-001	Nav Receiver
822-1193-001	FLUX DETECTOR UNITS
82300000-01	Triple Tachometer Indicator
82300000-02	Triple Tachometer Indicator
82300000-03	Triple Tachometer Indicator
82300000-04	Triple Tachometer Indicator
82300000-06	Triple Tachometer Indicator
8-240-02	Proximity Switch
8-240-02A	Proximity Switch
8-240-04	Proximity Switch
8-240-04A	Proximity Switch
8-240-06	Proximity Switch
8-240-08	Proximity Switch
8-240-12	Proximity Switch
8-240-34	Proximity Switch
8-240-37	Proximity Switch
8-240-38	Proximity Switch
82410162-007	Emergency Lights Control
82600000-07	Torque Indicator
826A16-4	Shut-Off Valve
83000-00401	Light Control Unit
83000-00402	Light Control Unit
83000-00501	Light Control Unit
83000-00502	Light Control Unit
83000-01401	Emergency Lights Pws
83000-01402	Emergency Lights Pws
83000-03201	Power Supply
830-266	Indicator
833-00157	Relay
834-1	Audio Amplifier
8-405-02	Proximity Switch
8-405-04	Proximity Switch
8-405-06	Proximity Switch
8-405-08	Proximity Switch
8-405-12	Proximity Switch
8-405-34	Proximity Switch
8-405-36	Proximity Switch
8-405-44	Proximity Switch

8-405-46	Proximity Switch
8-436-08	TACHOMETER INDICATOR
843-67-1	Vertical Speed Indicator
843-67-1A	Vertical Speed Indicator
843-67-2	Vertical Speed Indicator
843-67-2A	Vertical Speed Indicator
843-67-3	Vertical Speed Indicator
843-67-3R	Vertical Speed Indicator
843-67-6	Vertical Speed Indicator
843-67-6-R	Vertical Speed Indicator
8-436AB	TACHOMETER INDICATOR
8-436AT	TACHOMETER INDICATOR
8-436BA	TACHOMETER INDICATOR
843772-103	Caution Panel
850083-507	Dual Tachometer Indicator
85-02-205-1	Blower Assembly
85-02-205-2	Blower Assembly
850275-507	Tachometer Indicator
850275-509	Tachometer Indicator
8502S20LW	Airspeed Indicator
8503S20LW	Altimeter
8503-S20LW	Altimeter
8503S20LWMB	Altimeter
850610-1	Dc Voltmeter
850611-501	Dc Ammeter
8518T71	Tachometer Indicator
85374/277700	Attitude Indicator
8555M1	Landing Light
8555M2	Landing Light
8555M3	Landing Light
8555M4	Landing Light
8555M5	Landing Light
8555M6	Landing Light
8555M7	Landing Light
8555M9	Landing Light
8595-03	Vertical Gyro
86000-1107	Clock
86000-1161	Aircraft Clock
86000-2104	Clock
860110-1	Battery & Fuel Temperature Indicator
8602-8	Battery Temp Monitor
8604-4	Dc Power Monitor
8604-5	Ac Power Monitor
861260-01	Double-Check Valve
861C010101	Slaved Valve
861C010102	Slaved Valve
86200000-01	Horizontal Situation Indicator
8621-2	Cabin Pressurization Indicator
86400-1163	Clock

86400-1168	Clock
86400-1199	Clock
86400-3162	Clock
87000-1105	Clock
87000-1106	Clock
87000-1111	Clock
87000-1115	Clock
87000-1120	Clock
8700-1111	Clock
87232009-1	Temperature Probe
87232009-2	Temperature Probe
87500-1130	Clock
87500-1132	Clock
87500-1133	Clock
87500-1134	Clock
87500-1135	Clock
87500-1136	Clock
87500-1137	Clock
87500-1138	Clock
87500-1139	Clock
87500-1140	Clock
87500-1141	Clock
87500-1142	Clock
87500-1144	Clock
87500-1145	Clock
87500-1146	Clock
87500-2131	Clock
8800-T	Altitude Indicator
8820-694	Indicator
8930-112B90H101	Smoke Detector
89513-91D74-1	Servo Control
895TS05NY	Switch Control Landing Gear
897331-1	Pressure Switch
897331-2	Pressure Switch
897331-3	Pressure Switch
897331-4	Pressure Switch
897331-5	Pressure Switch
89944-B4515210002	Altimeter
8AW59FAA1	Frequency Meter
8CDJ81WDG4	Tachometer Indicator
8D1274	Gage Pressure Switch
8D1494	Differential Pressure Switch
8D1495	Differential Pressure Switch
8D1496	Differential Pressure Switch
8DJ100AAA1	Temperature Indicator
8DJ100AAF1	Temperature Indicator
8DJ100AAK1	Temperature Indicator
8DJ100AAS4	Temperature Indicator
8DJ100LAB1	Temperature Indicator

8DJ100LAC1	Temperature Indicator
8DJ100LAC4	Temperature Indicator
8DJ100LAE1	Temperature Indicator
8DJ100LAF1	Temperature Indicator
8DJ100LAK1	Temperature Indicator
8DJ100LAR1	Temperature Indicator
8DJ100LAT1	Temperature Indicator
8DJ100LAV1	Temperature Indicator
8DJ100LAW1	Temperature Indicator
8DJ100LAY1	Temperature Indicator
8DJ100LBA1	Temperature Indicator
8DJ100WAA1	Temperature Indicator
8DJ100WAA2	Temperature Indicator
8DJ100WAD2	Temperature Indicator
8DJ100WAD3	Temperature Indicator
8DJ100WAD5	Temperature Indicator
8DJ100WAE4	Temperature Indicator
8DJ100WAG2	Temperature Indicator
8DJ100WAH4	Temperature Indicator
8DJ100WAM4	Temperature Indicator
8DJ100WAS2	Temperature Indicator
8DJ100WBD2	Temperature Indicator
8DJ1201-VAA	Dual Tachometer Indicator
8DJ1201-WAA	Dual Tachometer Indicator
8DJ120AAH1	Dual Tachometer Indicator
8DJ120AAP1	Dual Tachometer Indicator
8DJ120AAP-1	Dual Tachometer Indicator
8DJ120WAA	Dual Tachometer Indicator
8DJ120WAA1	Dual Tachometer Indicator
8DJ12AAP-1	Triple Tachometer Indicator
8DJ131AAB	Triple Tachometer Indicator
8DJ131AAB1	Triple Tachometer Indicator
8DJ131AAG SUB 1	Triple Tachometer Indicator
8DJ131AAG1	Triple Tachometer Indicator
8DJ131AAG2	Triple Tachometer Indicator
8DJ131AAJ	Triple Tachometer Indicator
8DJ131AAJ1	Triple Tachometer Indicator
8DJ131AAT2	Triple Tachometer Indicator
8DJ131LAE1	Triple Tachometer Indicator
8DJ131LAE-1	Triple Tachometer Indicator
8DJ131LAF2	Triple Tachometer Indicator
8DJ131LAN1	Triple Tachometer Indicator
8DJ131LAN-1	Triple Tachometer Indicator
8DJ131LAV	Triple Tachometer Indicator
8DJ131LAV1	Triple Tachometer Indicator
8DJ131LAW	Triple Tachometer Indicator
8DJ131LAW1	Triple Tachometer Indicator
8DJ131LAZ1	Triple Tachometer Indicator
8DJ131LBA	Triple Tachometer Indicator

8DJ131LBA1	Triple Tachometer Indicator
8DJ131LBK2	Triple Tachometer Indicator
8DJ131LBT2	Triple Tachometer Indicator
8DJ135LAA1	Fuel Flow Indicator
8DJ13AAA	Tachometer Indicator
8DJ13AAT	Tachometer Indicator
8DJ13ABK	Tachometer Indicator
8DJ13ACX	Tachometer Indicator
8DJ13ADL	Tachometer Indicator
8DJ13ADX	Tachometer Indicator
8DJ13AEL	Tachometer Indicator
8DJ13AGT	Tachometer Indicator
8DJ142LAX3	Tachometer Indicator
8DJ148AA1	Tachometer Indicator
8DJ148CAB1	Tachometer Indicator
8DJ148CAC1	Tachometer Indicator
8DJ148CAD1	Dual Tachometer Indicator
8DJ148WAA1	Dual Tachometer Indicator
8DJ148WAC2	Dual Tachometer Indicator
8DJ148WAC3	Dual Tachometer Indicator
8DJ148WAD2	Dual Tachometer Indicator
8DJ148WAD3	Dual Tachometer Indicator
8DJ148WAF1	Dual Tachometer Indicator
8DJ148WAF-1	Dual Tachometer Indicator
8DJ148WAF-1	Dual Tachometer Indicator
8DJ150- ()	Dual Tachometer Indicator
8DJ150FAD-1	Dual Tachometer Indicator
8DJ150FAE1	Dual Tachometer Indicator
8DJ150FAK1	Dual Tachometer Indicator
8DJ150LAC1	Dual Tachometer Indicator
8DJ150LAD1	Dual Tachometer Indicator
8DJ150LAE1	Dual Tachometer Indicator
8DJ150WAA1	Dual Tachometer Indicator
8DJ150WAC1	Dual Tachometer Indicator
8DJ150WAD1	Dual Tachometer Indicator
8DJ150WAE1	Dual Tachometer Indicator
8DJ150WAF1	Dual Tachometer Indicator
8DJ150WAG1	Dual Tachometer Indicator
8DJ150WAH1	Dual Tachometer Indicator
8DJ15AAC	Tachometer Indicator
8DJ15AAF	Tachometer Indicator
8DJ162LYB2	Propeller Speed Indicator
8DJ162LZC2	Propeller Speed Indicator
8DJ162LZZ2	Propeller Speed Indicator
8DJ163LWT2	Gas Temperature Indicator
8DJ163LWV2	Gas Temperature Indicator
8DJ163LWY2	Gas Temperature Indicator
8DJ163LWZ2	Gas Temperature Indicator
8DJ163LXA4	Gas Temperature Indicator

8DJ163LXB2	Gas Temperature Indicator
8DJ163LXC2	Gas Temperature Indicator
8DJ163LXC3	Gas Temperature Indicator
8DJ163LXD2	Gas Temperature Indicator
8DJ163LXD3	Gas Temperature Indicator
8DJ163LXD4	Gas Temperature Indicator
8DJ163LXE2	Gas Temperature Indicator
8DJ163LXE3	Gas Temperature Indicator
8DJ163LXE4	Gas Temperature Indicator
8DJ163LXF2	Gas Temperature Indicator
8DJ163LXF3	Gas Temperature Indicator
8DJ163LXF4	Gas Temperature Indicator
8DJ163LXH4	Gas Temperature Indicator
8DJ163LXK4	Gas Temperature Indicator
8DJ163LXM4	Gas Temperature Indicator
8DJ163LXP4	Gas Temperature Indicator
8DJ163LXR4	Gas Temperature Indicator
8DJ163LXY4	Gas Temperature Indicator
8DJ163LXZ4	Gas Temperature Indicator
8DJ163LYA4	Gas Temperature Indicator
8DJ163LYC4	Gas Temperature Indicator
8DJ163LYD4	Gas Temperature Indicator
8DJ163LYH4	Gas Temperature Indicator
8DJ163LYK4	Gas Temperature Indicator
8DJ163LYL4	Gas Temperature Indicator
8DJ163LYM4	Gas Temperature Indicator
8DJ163LYN4	Gas Temperature Indicator
8DJ163LYP4	Gas Temperature Indicator
8DJ163LYR4	Gas Temperature Indicator
8DJ163LYS4	Gas Temperature Indicator
8DJ163LYT4	Gas Temperature Indicator
8DJ163LYV4	Gas Temperature Indicator
8DJ163LYW4	Gas Temperature Indicator
8DJ163LYX4	Gas Temperature Indicator
8DJ163LYY4	Gas Temperature Indicator
8DJ163LYZ4	Gas Temperature Indicator
8DJ163LZB4	Gas Temperature Indicator
8DJ163LZC4	Gas Temperature Indicator
8DJ163LZD4	Gas Temperature Indicator
8DJ167FCA-1	Dual Tachometer Indicator
8DJ167FCM-1	Dual Tachometer Indicator
8DJ167FCW-1	Dual Tachometer Indicator
8DJ173LWA1	Oil Quantity Indicator
8DJ173LWC1	Oil Quantity Indicator
8DJ173LWD1	Oil Quantity Indicator
8DJ173LWE1	Oil Quantity Indicator
8DJ176FAB-1	Tachometer Indicator
8DJ176LWX1	Engine Speed Indicator
8DJ176LWY1	Engine Speed Indicator

8DJ176LZB1	Engine Speed Indicator
8DJ176LZC1	Engine Speed Indicator
8DJ176LZP1	Engine Speed Indicator
8DJ176LZR1	Engine Speed Indicator
8DJ176LZY1	Engine Speed Indicator
8DJ176LZZ1	Engine Speed Indicator
8DJ176WAD1	Engine Speed Indicator
8DJ176WAE1	Engine Speed Indicator
8DJ176WAV1	Engine Speed Indicator
8DJ176WBH1	Engine Speed Indicator
8DJ176WBN1	Engine Speed Indicator
8DJ176WBP1	Engine Speed Indicator
8DJ177LWN1	Temperature Indicator
8DJ177LWP1	Temperature Indicator
8DJ177LWR1	Temperature Indicator
8DJ177LWS1	Temperature Indicator
8DJ177LWV1	Temperature Indicator
8DJ177LWW1	Temperature Indicator
8DJ177LWX1	Temperature Indicator
8DJ179KAA2	Temperature Indicator
8DJ179LAD4	Tachometer Indicator
8DJ179WAD1	Tachometer Indicator
8DJ179WAD4	Tachometer Indicator
8DJ181LAA-2	Tachometer Indicator
8DJ181LAA-4	Tachometer Indicator
8DJ181LCP4	Tachometer Indicator
8DJ181LCR4	Tachometer Indicator
8DJ181LVA-4	Tachometer Indicator
8DJ181LVG4	Tachometer Indicator
8DJ181LVH4	Tachometer Indicator
8DJ19AAH	Tachometer Indicator
8DJ19AAY	Tachometer Indicator
8DJ19ABR	Tachometer Indicator
8DJ19ACV	Tachometer Indicator
8DJ19ADH	Tachometer Indicator
8DJ19ADK	Tachometer Indicator
8DJ19ADV	Tachometer Indicator
8DJ26AAA1	Wheels & Flaps Position Indicator
8DJ26AAA2	Wheels & Flaps Position Indicator
8DJ26AAA50	Wheels & Flaps Position Indicator
8DJ26AAA51	Wheels & Flaps Position Indicator
8DJ43AAD	Tachometer Indicator
8DJ43AAM	Tachometer Indicator
8DJ43AAM-14	R.P.M. Indicator
8DJ48FAL2	Position Indicator
8DJ48FAR2	Position Indicator
8DJ49GAW1	Position Indicator
8DJ49GAW2	Position Indicator
8DJ49GAX1	Position Indicator

8DJ49GAX2	Position Indicator
8DJ49GAY1	Position Indicator
8DJ49GAY2	Position Indicator
8DJ49GBV2	Position Indicator
8DJ49GEP2	Position Indicator
8DJ49GER2	Position Indicator
8DJ49GET2	Position Indicator
8DJ49LAL2	Position Indicator
8DJ49LAM2	Position Indicator
8DJ49LAN2	Position Indicator
8DJ49LAV2	Position Indicator
8DJ64GBH1	Rate Of Fuel Flow Indicator
8DJ64GBW1	Rate Of Fuel Flow Indicator
8DJ67FAB1	Dual Tachometer Indicator
8DJ67FAB-1	Dual Tachometer Indicator
8DJ67FAC1	Dual Tachometer Indicator
8DJ67FAE1	Dual Tachometer Indicator
8DJ67FAF1	Dual Tachometer Indicator
8DJ67-FAF-1	Dual Tachometer Indicator
8DJ67FAH1	Dual Tachometer Indicator
8DJ67FAK1	Dual Tachometer Indicator
8DJ67FAT1	Dual Tachometer Indicator
8DJ67FAW1	Dual Tachometer Indicator
8DJ67FBC	Dual Tachometer Indicator
8DJ67FBC1	Dual Tachometer Indicator
8DJ67FBC-1	Dual Tachometer Indicator
8DJ67FBE1	Dual Tachometer Indicator
8DJ67FBS1	Dual Tachometer Indicator
8DJ67FCA1	Dual Tachometer Indicator
8DJ67FCA-1	Dual Tachometer Indicator
8DJ67FCC1	Dual Tachometer Indicator
8DJ67FCM1	Dual Tachometer Indicator
8DJ67FCM-1	Dual Tachometer Indicator
8DJ67FCW1	Dual Tachometer Indicator
8DJ67FCW-1	Dual Tachometer Indicator
8DJ71GAB1	Fuel Flow Indicator
8DJ71GAK2	Fuel Flow Indicator
8DJ72GAB1	Rate Of Fuel Flow Indicator
8DJ72GAD2	Rate Of Fuel Flow Indicator
8DJ81AA4U	Tachometer Indicator
8DJ81AAA1	Tachometer Indicator
8DJ81AAB1	Tachometer Indicator
8DJ81AAC1	Tachometer Indicator
8DJ81AAP1	Tachometer Indicator
8DJ81BAA1	Tachometer Indicator
8DJ81BLB4	Tachometer Indicator
8DJ81BLB4U	Tachometer Indicator
8DJ81BLC4	Tachometer Indicator
8DJ81BLC4U	Tachometer Indicator

8DJ81CAA	Tachometer Indicator
8DJ81CAA1	Tachometer Indicator
8DJ81CAA2	Tachometer Indicator
8DJ81CAA4	Tachometer Indicator
8DJ81CAB2	Tachometer Indicator
8DJ81CAC1	Tachometer Indicator
8DJ81CAC2	Tachometer Indicator
8DJ81CAE1	Tachometer Indicator
8DJ81CAE2	Tachometer Indicator
8DJ81CAF1	Tachometer Indicator
8DJ81CAF2	Tachometer Indicator
8DJ81CAH1	Tachometer Indicator
8DJ81CAH2	Tachometer Indicator
8DJ81CAK1	Tachometer Indicator
8DJ81CAK2	Tachometer Indicator
8DJ81CAL1	Tachometer Indicator
8DJ81CAM1	Tachometer Indicator
8DJ81CAM2	Tachometer Indicator
8DJ81CAN1	Tachometer Indicator
8DJ81CAN2	Tachometer Indicator
8DJ81CAN4	Tachometer Indicator
8DJ81CAS2	Tachometer Indicator
8DJ81CAX2	Tachometer Indicator
8DJ81CAY2	Tachometer Indicator
8DJ81CAZ2	Tachometer Indicator
8DJ81CBA2	Tachometer Indicator
8DJ81CBB2	Tachometer Indicator
8DJ81CBD	Tachometer Indicator
8DJ81CBD4	Tachometer Indicator
8DJ81CBK2	Tachometer Indicator
8DJ81CBX2	Tachometer Indicator
8DJ81CCK2	Tachometer Indicator
8DJ81CCL2	Tachometer Indicator
8DJ81CCM2	Tachometer Indicator
8DJ81CCY4	Tachometer Indicator
8DJ81CDC2	Tachometer Indicator
8DJ81CDE2	Tachometer Indicator
8DJ81CDF2	Tachometer Indicator
8DJ81CDF4	Tachometer Indicator
8DJ81CDG2	Tachometer Indicator
8DJ81CDG4	Tachometer Indicator
8DJ81CDH2	Tachometer Indicator
8DJ81CDR4	Tachometer Indicator
8DJ81CDS4	Tachometer Indicator
8DJ81CDW4	Tachometer Indicator
8DJ81CDX4	Tachometer Indicator
8DJ81CDY2	Tachometer Indicator
8DJ81CDY4	Tachometer Indicator
8DJ81CDZ4	Tachometer Indicator

8DJ81CER4	Tachometer Indicator
8DJ81CET4	Tachometer Indicator
8DJ81CFA4	Tachometer Indicator
8DJ81FAA1	Tachometer Indicator
8DJ81FAA2	Tachometer Indicator
8DJ81LAA1	Tachometer Indicator
8DJ81LAA2	Tachometer Indicator
8DJ81LAA4	Tachometer Indicator
8DJ81LAA4U	Tachometer Indicator
8DJ81LAB2	Tachometer Indicator
8DJ81LAC1	Tachometer Indicator
8DJ81LAC2	Tachometer Indicator
8DJ81LAD1	Tachometer Indicator
8DJ81LAD2	Tachometer Indicator
8DJ81LAE1	Tachometer Indicator
8DJ81LAE2	Tachometer Indicator
8DJ81LAK1	Tachometer Indicator
8DJ81LAK2	Tachometer Indicator
8DJ81LAN2	Tachometer Indicator
8DJ81LAT1	Tachometer Indicator
8DJ81LAT2	Tachometer Indicator
8DJ81LAV2	Tachometer Indicator
8DJ81LAV4	Tachometer Indicator
8DJ81LAW1	Tachometer Indicator
8DJ81LAW2	Tachometer Indicator
8DJ81LAX2	Tachometer Indicator
8DJ81LAY2	Tachometer Indicator
8DJ81LAZ2	Tachometer Indicator
8DJ81LBC2	Tachometer Indicator
8DJ81LBD2	Tachometer Indicator
8DJ81LBE2	Tachometer Indicator
8DJ81LBF2	Tachometer Indicator
8DJ81LBH2	Tachometer Indicator
8DJ81LBK2	Tachometer Indicator
8DJ81LBL2	Tachometer Indicator
8DJ81LBS2	Tachometer Indicator
8DJ81LBT2	Tachometer Indicator
8DJ81LBX2	Tachometer Indicator
8DJ81LCA2	Tachometer Indicator
8DJ81LCA4	Tachometer Indicator
8DJ81LCB2	Tachometer Indicator
8DJ81LCD2	Tachometer Indicator
8DJ81LCF2	Tachometer Indicator
8DJ81LCK2	Tachometer Indicator
8DJ81LCP4	Tachometer Indicator
8DJ81LCP4U	Tachometer Indicator
8DJ81LCR4	Tachometer Indicator
8DJ81LCR4U	Tachometer Indicator
8DJ81LCT4	Tachometer Indicator

8DJ81LCT4U	Tachometer Indicator
8DJ81LSC4	Tachometer Indicator
8DJ81LSC4U	Tachometer Indicator
8DJ81LV4	Tachometer Indicator
8DJ81LVA4	Tachometer Indicator
8DJ81LVA4U	Tachometer Indicator
8DJ81LVB4	Tachometer Indicator
8DJ81LVB4U	Tachometer Indicator
8DJ81LVF4	Tachometer Indicator
8DJ81LVF4U	Tachometer Indicator
8DJ81LVG4	Tachometer Indicator
8DJ81LVG4U	Tachometer Indicator
8DJ81LVH4	Tachometer Indicator
8DJ81LVL4	Tachometer Indicator
8DJ81LVL4U	Tachometer Indicator
8DJ81LWA1	Tachometer Indicator
8DJ81LWA2	Tachometer Indicator
8DJ81LWA3	Tachometer Indicator
8DJ81LWA4	Tachometer Indicator
8DJ81LWA4U	Tachometer Indicator
8DJ81LWB2	Tachometer Indicator
8DJ81LWC2	Tachometer Indicator
8DJ81LWC4	Tachometer Indicator
8DJ81LWC4U	Tachometer Indicator
8DJ81LWH2	Tachometer Indicator
8DJ81LWM2	Tachometer Indicator
8DJ81LWN2	Tachometer Indicator
8DJ81LWR2	Tachometer Indicator
8DJ81LWR4	Tachometer Indicator
8DJ81LWR4U	Tachometer Indicator
8DJ81LWS2	Tachometer Indicator
8DJ81LWS4	Tachometer Indicator
8DJ81LWS4U	Tachometer Indicator
8DJ81LWT2	Tachometer Indicator
8DJ81LWT4	Tachometer Indicator
8DJ81LWT4U	Tachometer Indicator
8DJ81LWV2	Tachometer Indicator
8DJ81LWY2	Tachometer Indicator
8DJ81LWY4	Tachometer Indicator
8DJ81LWY4U	Tachometer Indicator
8DJ81LWZ2	Tachometer Indicator
8DJ81LWZ4	Tachometer Indicator
8DJ81LWZ4U	Tachometer Indicator
8DJ81LXC2	Tachometer Indicator
8DJ81LXD2	Tachometer Indicator
8DJ81LXE2	Tachometer Indicator
8DJ81LXF	Tachometer Indicator
8DJ81LXF2	Tachometer Indicator
8DJ81LXF4	Tachometer Indicator

8DJ81LXF4U	Tachometer Indicator
8DJ81LXG2	Tachometer Indicator
8DJ81LXG4	Tachometer Indicator
8DJ81LXG4U	Tachometer Indicator
8DJ81LXH2	Tachometer Indicator
8DJ81LXH4	Tachometer Indicator
8DJ81LXH4U	Tachometer Indicator
8DJ81LXK2	Tachometer Indicator
8DJ81LXK4	Tachometer Indicator
8DJ81LXK4U	Tachometer Indicator
8DJ81LXL2	Tachometer Indicator
8DJ81LXM2	Tachometer Indicator
8DJ81LXN2	Tachometer Indicator
8DJ81LXP2	Tachometer Indicator
8DJ81LXT2	Tachometer Indicator
8DJ81LXT4	Tachometer Indicator
8DJ81LXT4U	Tachometer Indicator
8DJ81LXV2	Tachometer Indicator
8DJ81LXW2	Tachometer Indicator
8DJ81LXY2	Tachometer Indicator
8DJ81LXZ2	Tachometer Indicator
8DJ81LYA2	Tachometer Indicator
8DJ81LYB2	Tachometer Indicator
8DJ81LYC2	Tachometer Indicator
8DJ81LYP2	Tachometer Indicator
8DJ81LYP4	Tachometer Indicator
8DJ81LYP4U	Tachometer Indicator
8DJ81LYT2	Tachometer Indicator
8DJ81LYT4	Tachometer Indicator
8DJ81LYT4U	Tachometer Indicator
8DJ81LYV2	Tachometer Indicator
8DJ81LYV4	Tachometer Indicator
8DJ81LYV4U	Tachometer Indicator
8DJ81LYW2	Tachometer Indicator
8DJ81LYX2	Tachometer Indicator
8DJ81LYX4	Tachometer Indicator
8DJ81LYX4U	Tachometer Indicator
8DJ81LYZ2	Tachometer Indicator
8DJ81LZA2	Tachometer Indicator
8DJ81LZA4	Tachometer Indicator
8DJ81LZB2	Tachometer Indicator
8DJ81LZC2	Tachometer Indicator
8DJ81LZC4	Tachometer Indicator
8DJ81LZC4U	Tachometer Indicator
8DJ81LZE2	Tachometer Indicator
8DJ81LZE4	Tachometer Indicator
8DJ81LZE4U	Tachometer Indicator
8DJ81LZF2	Tachometer Indicator
8DJ81LZF4	Tachometer Indicator

8DJ81LZF4U	Tachometer Indicator
8DJ81WAG2	Tachometer Indicator
8DJ81WAG4	Tachometer Indicator
8DJ81WAG4U	Tachometer Indicator
8DJ81WAL4	Tachometer Indicator
8DJ81WAL4U	Tachometer Indicator
8DJ81WAP4	Tachometer Indicator
8DJ81WAP4U	Tachometer Indicator
8DJ81WAY4	Tachometer Indicator
8DJ81WAY4U	Tachometer Indicator
8DJ81WBA4	Tachometer Indicator
8DJ81WBA4U	Tachometer Indicator
8DJ81WBB4	Tachometer Indicator
8DJ81WBB4U	Tachometer Indicator
8DJ81WBC4	Tachometer Indicator
8DJ81WBC4U	Tachometer Indicator
8DJ81WBD4	Tachometer Indicator
8DJ81WBD4U	Tachometer Indicator
8DJ81WBF4	Tachometer Indicator
8DJ81WBF4U	Tachometer Indicator
8DJ81WBG4	Tachometer Indicator
8DJ81WBG4U	Tachometer Indicator
8DJ81WBL4	Tachometer Indicator
8DJ81WBL4U	Tachometer Indicator
8DJ81WBM4	Tachometer Indicator
8DJ81WBM4U	Tachometer Indicator
8DJ81WBS4	Tachometer Indicator
8DJ81WBS4U	Tachometer Indicator
8DJ81WBT4	Tachometer Indicator
8DJ81WBT4U	Tachometer Indicator
8DJ81WCF4	Tachometer Indicator
8DJ81WCF4U	Tachometer Indicator
8DJ81WCG4	Tachometer Indicator
8DJ81WCG4U	Tachometer Indicator
8DJ81WCR4	Tachometer Indicator
8DJ81WCR4U	Tachometer Indicator
8DJ81WCS4	Tachometer Indicator
8DJ81WCS4U	Tachometer Indicator
8DJ81WCT4	Tachometer Indicator
8DJ81WCT4U	Tachometer Indicator
8DJ81WCW4	Tachometer Indicator
8DJ81WCW4U	Tachometer Indicator
8DJ81WCX4	Tachometer Indicator
8DJ81WCX4U	Tachometer Indicator
8DJ81WDE4	Tachometer Indicator
8DJ81WDG4	Tachometer Indicator
8DJ81WDK4	Tachometer Indicator
8DJ81WDK4U	Tachometer Indicator
8DJ81WDL4	Tachometer Indicator

8DJ81WDL4U	Tachometer Indicator
8DJ8ACAA1	Tachometer Indicator
8DJ98AAC1	Tachometer Indicator
8ES455070-00	Emergency Power Supply
8G1229	Oil Pressure Switch
8G1247-1	Switch
8G1267-1	Switch
8SC0026	Horizon Gyro
8SC0053	Engine Torque Indicator
8SC0054	Prop Rpm Indicator
8SC0055	I.T.T. Indicator
8SC0056	Nh % Rpm Indicator
8SC0057	Fuel Flow Indicator
8SC0068	Hydraulic Quantity Indicator
8SC0070	Dual Hydraulic Pressure Indicator
8SC0072	Ac Power Monitor
8SC0073	Dc Power Monitor
8SC0079	Cabin Duct Temp Indicator
8SC0098	Cabin Pressure Indicator
8SC0109	Airspeed Indicator
8SC-0109	Airspeed Indicator
8SC0118	Dual De-Icing Pressure Indicator
8SC0132	Battery Temp Monitor
8SC0152	Rudder Trim Indicator
8SC0160	Lo Pressure Rotor Speed Indicator
8SC0202	Engine Oil Temperature & Pressure Indicator
8SC0271	Fuel Tank Temperature Indicator
8SC0325	I.T.T. Indicator
8SC0326	Oil Temperature & Pressure Indicator
8SC0345	Airspeed Indicator
8TJ120GAB2	Power Supply
8TJ124GGD3	Fuel Flow Transmitter
8TJ124GGT1	Fuel Flow Transmitter
9000407-15	Flap Lever Position Transmitter
9000407-16	Flap Lever Position Transmitter
9000407-19	Flap Lever Position Transmitter
9000407-20	Flap Lever Position Transmitter
9002-1101	Instrument Cluster
90024-1	Voltage Regulator
90033-12	Anti-Collision Light
90033-24	Anti-Collision Light
90-060-1	Searchlight
90090001-02	Mgt Indicator
90090002-02	Indicator
90090003-01	Ng Tachometer Indicator
90090003-2	Ng Tachometer Indicator
90090004-03	Fuel Pressure/Ammeter Indicator
90090004-04	Fuel Pressure/Ammeter Indicator
90090005-01	Fuel Quantity Indicator

90090005-02	Fuel Quantity Indicator
90090007-01	Engine Oil Temperature & Pressure Indicator
90090007-02	Engine Oil Temperature & Pressure Indicator
9009006-01	Transmission Oil Temperature & Pressure Indicator
9009006-02	Transmission Oil Temperature & Pressure Indicator
9009-1015	Temperature & Pressure Indicator
9009-1016	Temperature & Pressure Indicator
9009-3003	Temperature & Pressure Indicator
9009-3004	Temperature & Pressure Indicator
9009-3006	Oil Temperature Indicator
9009-3009	Temperature & Pressure Indicator
9009-3010	Temperature & Pressure Indicator
9009-3013	Temperature & Pressure Indicator
9009-3016	Temperature & Pressure Indicator
9009-3023	Engine Oil Temperature & Pressure Indicator
9009-3028	Temperature & Pressure Indicator
9009-3042	Engine Oil Temperature & Pressure Indicator
9009-3043	Transmission Oil Temperature & Pressure Indicator
901-366-014	Motor Driven Valve
901-366-563-107	Motor Driven Valve
901-366-563-109	Motor Driven Valve
901-366-596-101	Motor Driven Valve
9016-1017	Fuel Pressure/Load Meter
9016-3001	Fuel Pressure/Load Meter
9016-3002	Fuel Pressure/Load Meter
9016-3003	Fuel Pressure/Load Meter
9016-3018	Fuel Pressure/Load Meter
9016-3019	Fuel Pressure/Load Meter
9016-3021	Fuel Pressure/Load Meter
9016-3022	Fuel Pressure/Load Meter
9016-3023	Fuel Pressure/Load Meter
9016-3024	Fuel Pressure/Load Meter
9016-3025	Fuel Pressure/Load Meter
9016-3029	Fuel Pressure/Load Meter
9018-1003	Temperature Indicator
9018-1006	Temperature Indicator
9018-1007	Temperature Indicator
9019-1018	Temperature & Pressure Indicator
9019-3001	Temperature & Pressure Indicator
9019-3002	Temperature & Pressure Indicator
9019-3003	Temperature & Pressure Indicator
9019-3018	Temperature & Pressure Indicator
9019-3019	Temperature & Pressure Indicator
9019-3020	Temperature & Pressure Indicator
9019-3021	Temperature & Pressure Indicator
9019-3025	Temperature & Pressure Indicator
9019-3026	Temperature & Pressure Indicator
9019-3027	Temperature & Pressure Indicator
9019-3028	Temperature & Pressure Indicator

9019-3029	Temperature & Pressure Indicator
9019-3031	Temperature & Pressure Indicator
9019-3036	Temperature & Pressure Indicator
9019-3037	Temperature & Pressure Indicator
9019-3039	Temperature & Pressure Indicator
9019-3040	Temperature & Pressure Indicator
9019-3041	Temperature & Pressure Indicator
9019-3042	Temperature & Pressure Indicator
9019-3043	Temperature & Pressure Indicator
9019-3048	Oil Temperature & Pressure Indicator
9019-3056	Oil Temperature & Pressure Indicator
9019-8021	Oil Temperature & Pressure Indicator
9019-8050	Oil Temperature & Pressure Indicator
9019-8054	Oil Temperature & Pressure Indicator
9020-1041	Voltmeter
9020-2012	Voltmeter
9020-3002	Voltmeter
9020-3003	Dual Ammeter
9020-3004	Dual Voltmeter Indicator
9020-3011	Ammeter
9020-3015	Dual Voltmeter Indicator
9020-3017	Dual Ammeter
9020-3026	Volt/Ammeter
9020-3032	Volt/Ammeter
9020-8049	Voltmeter
9024-3001	Instrument Cluster
9024-3002	Instrument Cluster
9024-3003	Instrument Cluster
9024-3004	Instrument Cluster
9024-3005	Instrument Cluster
9024-3006	Instrument Cluster
902F010100	Valve
9030-1017	Dual Pressure Indicator
9030-1032	Dual Pressure Indicator
9030-4	Airspeed Indicator
9030-5	Airspeed Indicator
9032-1003	Fuel Quantity Indicator
9034-1003	Triple Oil Pressure Indicator
9036-1018	Temperature & Pressure Indicator
9036-2006	Temperature & Pressure Indicator
9036-2007	Temperature & Pressure Indicator
9036-2132	Temperature & Pressure Indicator
9036-2133	Temperature & Pressure Indicator
9036-3010	Temperature & Pressure Indicator
9036-3011	Temperature & Pressure Indicator
9036-3012	Temperature & Pressure Indicator
9036-3014	Temperature & Pressure Indicator
9036-3023	Temperature & Pressure Indicator
9036-3024	Temperature & Pressure Indicator

9036-3067	Engine Oil Temperature Indicator
9036-8153	Oil Temperature & Pressure Indicator
90-380037-1	Fuel Flow Indicator
90-38402-6	I.T.T. Indicator
9050-2001	Temperature & Pressure Indicator
906B-4-015	Differential Pressure Indicator
906C-13-018	Differential Pressure Indicator
906D	Differential Pressure Indicator
906D-10-020	Differential Pressure Indicator
906D-13-018	Differential Pressure Indicator
906D-4-015	Differential Pressure Indicator
906D-6-020	Differential Pressure Indicator
90G235	Gage Pressure Switch
90G236	Gage Pressure Switch
90G237	Gage Pressure Switch
910GC01Y01	Circuit Card
912041T	Fuel Flow Indicator
912041T-D	Fuel Flow Indicator
9133-25-B1	Fuel Flow Transmitter
91-380012-1	Synchro Indicator
91-380012-3	Synchro Indicator
91380015-1	Synchro Indicator
91D74-1	Servo Control
91D75-1	Actuator
91F389	Panel
9204401-88	Fuel Quantity Transmitter
921012-1	VHF/FM Transceiver
921012-1 (5V)	Vhf/Fm Communications Transceiver
921012-2	Vhf/Fm Communications Transceiver
921012-2 (5V)	Vhf/Fm Communications Transceiver
92DR147	Differential Pressure Indicator
9302328-001	Dc Volt/Ammeter
9302337-001	Cabin Temperature Indicator
9302337-002	Cabin Temperature Indicator
9302342-004	Trim Position Indicator
9302350-002	Cabin Pressure Indicator
9302391-002	Hydraulic Brake Pressure Indicator
9302392-002	Hydraulic Pressure Indicator
9302392-003	Dual Hydraulic Pressure Indicator
9302393-001	Hydraulic Oil Quantity Indicator
9302471-003	Dual Flap Position Indicator
9302472-005	Engine Torque Indicator
9302472-006	Torque Indicator
9302473-002	Propeller Speed Indicator
9302474-002	Gas Generator Speed Indicator
9302475-001	Battery/Fuel Temperature Indicator
9302476-003	Itt Indicator
9302476-004	Itt Indicator
9302476-010	Itt Indicator

9302478-002	Engine Oil Temperature/Pressure
9302481-002	Oil Pressure/Temperature Indicator
9302481-003	Prop Oil Pressure/Temperature Indicator
9302751-002	Fuel Quantity Indicator
9302751-003	Fuel Quantity Indicator
9303262-002	Itt Indicator
930-500-15-1	Searchlight
930-500-25	Searchlight
930-500-25-1	Landing Light
930-500-25-2	Searchlight
930-500-25-3	Searchlight
930-500-25-4	Searchlight
930-500-25-5	Searchlight
930-500-25-6	Searchlight
930-500-25-7	Searchlight
930-500-25-8	Searchlight
930-500-25-9	Searchlight
930-500-25-A	Searchlight
930-500-25-B	Searchlight
930-500-25-C	Searchlight
930-500-33	Searchlight
930-500-35	Searchlight
930-500-50-1	Searchlight
930-500-50-1-1	Searchlight
930-500-50-2	Searchlight
935A-5001	TORQUE GAUGE INDICATOR
935A-5001-2	TORQUE GAUGE INDICATOR
935A-5001-3	TORQUE GAUGE INDICATOR
935A-5001-4	TORQUE GAUGE INDICATOR
9377M61MP02	Fuel Flow Transmitter
9377M61P01	Fuel Flow Transmitter
940605-31	Flow Meter Indicator
940605-32	Flow Meter Indicator
940605-41	Flow Meter Indicator
940605-42	Flow Meter Indicator
940-638-X	Fuel Flow Meter Indicator
940-639-X	Fuel Flow Meter Indicator
940L-02	Altimeter
941059-1	UHF FM Transceiver
941059-1 (5V)	UHF FM Transceiver
941059-2	UHF FM Transceiver
941059-2 (5V)	UHF FM Transceiver
94123-A	Voltage Regulator
94214-A	Voltage Regulator
9-441-01	Fuel Totalizer Indicator
9-441-08	Fuel Totalizer Indicator
9-464-02	Fuel Flow Indicator
9-464-21	Fuel Flow Indicator
9-464-25	Fuel Flow Indicator

9-464-32	Fuel Flow Indicator
9-464-33	Fuel Flow Indicator
9-464-41	Fuel Flow Indicator
94P32	Gage Pressure Switch
9500A	Turn & Slip Indicator
9500B	Turn & Slip Indicator
9501-3004	Clock
9501A	Turn & Slip Indicator
9501B	Turn & Slip Indicator
9502A	Turn & Slip Indicator
9502B	Turn & Slip Indicator
95-40-17-B6-56885	Indicator Switch
95-40-17-H6-56909	Rpm Indicator
9550 N.589	Turn & Slip Indicator
9550-8340N5L	Turn & Slip Indicator
9550A	Turn & Slip Indicator
9550AN.589	Turn & Slip Indicator
9550B	Turn & Slip Indicator
9550BN.540	Turn & Slip Indicator
9550BN577	Turn & Slip Indicator
9550N574	Turn & Slip Indicator
9551A	Turn & Slip Indicator
9551AN.510	Turn & Slip Indicator
9551B	Turn & Slip Indicator
9551BN541	Turn & Slip Indicator
9552A	Turn & Slip Indicator
9552B	Turn & Slip Indicator
961068-1	Audio Controller
961068-14	Audio Control Station
961068-18	Audio Control Station
961068-2	Audio Controller
961068-3	Audio Controller
961068-4	Audio Controller
961068-5	Audio Controller
961068-6	Audio Controller
961068-7	Audio Controller
961068-8	Audio Controller
961072-1	Audio Controller
961072-14	Audio Control Station
961072-18	Audio Control Station
961072-2	Audio Controller
961072-20	Audio Control Station
961072-21	Audio Control Station
961072-22	Audio Control Station
961072-23	Audio Control Station
961072-24	Audio Control Station
961072-25	Audio Control Station
961072-3	Audio Controller
961072-4	Audio Controller

961072-5	Audio Controller
961072-6	Audio Controller
961072-7	Audio Controller
961072-8	Audio Controller
961077-1	Intercom
961082-1	VHF/FM Transceiver
961082-1 (5V)	VHF/FM Transceiver
961082-2	VHF/FM Transceiver
961082-2 (5V)	VHF/FM Transceiver
96774-18-1814	Transmitter
96774-18-1842-7	Torque/Pressure Transmitter
96774-18-1874	Course Indicator
971083-1	VHF/UHF FM Transceiver
971083-1 (5V),	VHF/UHF FM Transceiver
971083-3	VHF/UHF FM Transceiver
971083-3 (5V),	VHF/UHF FM Transceiver
97-384009-1	Synchro Indicator
97-384009-3	Synchro Indicator
97-384009-5	Synchro Indicator
97-384010-1	Synchro Indicator
97-384010-3	Synchro Indicator
97-384010-5	Synchro Indicator
975.21.15.206	Pressure Transducer
980-4535-001	Attendant Control Unit
9807-56	Hydraulic Pressure Indicator
981086-1	Vhf/Fm Communications Transceiver
981086-1 (5V)	Vhf/Fm Communications Transceiver
981086-2	Vhf/Fm Communications Transceiver
981086-2 (5V)	Vhf/Fm Communications Transceiver
981087-1	Vhf/Fm Digital Communications Transceiver
981087-1 (5V)	Vhf/Fm Digital Communications Transceiver
981087-2	Vhf/Fm Digital Communications Transceiver
981087-2 (5V)	Vhf/Fm Digital Communications Transceiver
9813-25	Dual Torque Indicator
9813-25-00	Dual Torque Indicator
9813-25-02	Dual Torque Indicator
9813-25-03	Dual Torque Indicator
9813-25-05	Dual Torque Indicator
9813-25-07	Dual Torque Indicator
9813-25-12	Dual Torque Indicator
9813-25-13	Dual Torque Indicator
9813-25-15	Dual Torque Indicator
9813-25-16	Dual Torque Indicator
9813-25-17	Dual Torque Indicator
9813-25-18	Dual Torque Indicator
9813-25-19	Dual Torque Indicator
9813-25-20	Dual Torque Indicator
9813-25-21	Dual Torque Indicator
9813-25-5	Dual Torque Indicator

9817-01	Temperature Indicator
9819-90	Flap Position Indicator
9819-90-01	Flap Position Indicator
99002-8	Gyro Horizon
9910113-1	Blower Assembly
9910378-1	Tach Generator
991095-1	VHF High/VHF Low/UHF/FM Transceiver
991095-2	Vhf/Uhf Fm Communications Transceiver
991095-3	Vhf/Uhf Fm Communications Transceiver
991095-4	Vhf/Uhf Fm Communications Transceiver
991097-1	Remote Control Head
991097-2	Remote Control Head
991099-1	Remote Control Head
991099-2	Remote Control Head
9912034-1	Tach Generator
9912117-5	Fan Speed Indicator
991214-34	Inter Turbine Temperature Indicator
9912147-1	Oil Temperature Indicator
9912147-10	Oil Pressure Indicator
9912147-11	Oil Temperature Indicator
9912147-12	Fuel Quantity Indicator
9912147-13	Fan Speed Indicator
9912147-14	Fuel Flow Indicator
9912147-15	Inter Turbine Temperature Indicator
9912147-16	Fuel Flow Indicator
9912147-17	Fuel Flow Indicator
9912147-18	Fan Speed Indicator
9912147-19	Fan Speed Indicator
9912147-2	Fuel Flow Indicator
9912147-20	Fan Speed Indicator
9912147-21	Turbine Speed Indicator
9912147-22	Fuel Flow Indicator
9912147-23	Fan Speed Indicator
9912147-24	Fan Speed Indicator
9912147-25	Turbine Speed Indicator
9912147-27	Fan Speed Indicator
9912147-28	Turbine Speed Indicator
9912147-3	Oil Pressure Indicator
9912147-30	Oil Pressure Indicator
9912147-34	Inter Turbine Temperature Indicator
9912147-35	Fan Speed Indicator
9912147-36	Turbine Speed Indicator
9912147-4	Inter Turbine Temperature Indicator
9912147-5	Fan Speed Indicator
9912147-6	Turbine Speed Indicator
9912147-7	Fuel Quantity Indicator
9912147-8	Fan Speed Indicator
9912147-9	Turbine Speed Indicator
9913147-3	Oil Pressure Indicator

99193SOCN897331	Pressure Transducer
99193SOCN897331-2B	Transducer
99193SOCN897331-2D	Pressure Transducer
99193SOCN897331-2E	Pressure Transducer
99193SOCN897331-2F	Pressure Transducer
99193SOCN897331-2G	Pressure Transducer
99193SOCN897331-3B	Pressure Transducer
99193SOCN897331-3D	Pressure Transducer
99193SOCN897331-5E	Pressure Transducer
99251-3252011-0101	Encoding Altimeter
99-384009-1	Synchro Indicator
99-384029	Synchro Indicator
99-384030-3	Synchro Indicator
99-384030-5	Synchro Indicator
99-384030-7	Synchro Indicator
9A1100	Torque Indicator
9A1290	Gas Temperature Indicator
9A2100	Torque Indicator
9A2630	Torque Indicator
9A26302	Torque Indicator
9A2630-2	Torque Indicator
9A2640-2	Indicator
9A2650	Dual Tachometer Indicator
9A360	Liquid Quantity Indicator
9A360HEA	Liquid Quantity Indicator
9A375	Temperature Indicator
9A400	Temperature Indicator
9A550	Temperature Indicator
9AA11SOCN897331-2	Pressure Switch
9DJ176WBG1	Engine Speed Indicator
9DJ81CAA4	Tachometer Indicator
9DJ81CDW4	Tachometer Indicator
A. N. 3202-1	Voltmeter
A.13A	Clock
A/S INDICATOR	Airspeed Indicator
A102AN116	Quantity Indicator
A1050-02	Turn & Slip Indicator
A1050-03	Turn & Slip Indicator
A1060	Turn & Slip Indicator
A-11	Turn & Slip Indicator
A-1155-1	Loadmeter
A-1155-3	Loadmeter
A-12	Turn & Slip Indicator
A-13A-1	Clock
A1600	Turn & Slip Indicator
A1600B-1	Turn & Slip Indicator
A1605	Turn & Slip Indicator
A1615	Turn & Slip Indicator
A1620	Turn & Slip Indicator

A162003	Turn & Slip Indicator
A-20-CM	Altimeter
A2125-1B-100	Static Inverter
A218-965616-00	Control Grip Assembly
A218-967750-00	Hand Grip
A2200	Turn & Slip Indicator
A2250-1	Turn & Slip Indicator
A2475	Turn & Slip Indicator
A24A9170	Voltage Regulator
A250-1B-1	Static Inverter
A25363-10-002	Vertical Speed Indicator
A25363-10-003	Vertical Speed Indicator
A2550-1	Turn & Slip Indicator
A2562-01	Turn & Slip Indicator
A25753-10-001	Vertical Speed Indicator
A301	Audio Controller
A301-1	Audio Controller
A301-12-1	Audio Controller
A301-14A	Audio Controller
A301-1A	Audio Controller
A301-412	Audio Controller
A301-6	Audio Controller
A301-61	Audio Controller
A301-61A	Control Communication
A30161ACVR	Audio Controller
A301-61B1	Audio Controller
A301-61B-1	Audio Controller
A301-6CVR	Audio Controller
A301-6R	Control Communication Panel
A301-6W	Control Communication
A301-6W/CVR	Control Communications Panel
A301-6W-001	Audio Controller
A301-6W-1	Audio Controller
A301-6WCR	Comm Control Unit
A301-6WCVR	Audio Controller
A3562-01	Turn & Slip Indicator
A-35-AAU-8A/A	Altimeter
A35MA	Altimeter
A-35MA	Altimeter
A35MA10L1	Altimeter
A35MA10L2	Altimeter
A35-MA-10L-2	Altimeter
A412AHS-28	Strobe Power Supply
A413A	Strobe Power Supply
A490ATSC	Power Supply
A50691103	Tach Generator
A5069110302	Tach Generator
A5920-01	Turn & Slip Indicator
A5920-02	Turn & Slip Indicator

A5920-03	Turn & Slip Indicator
A5920-05	Turn & Slip Indicator
A5930-01	Turn & Slip Indicator
A5930-02	Turn & Slip Indicator
A5930-03	Turn & Slip Indicator
A5930-04	Turn & Slip Indicator
A5930-05	Turn & Slip Indicator
A5930-06	Turn & Slip Indicator
A5930-07	Turn & Slip Indicator
A5930-1	Turn & Slip Indicator
A5930-2	Turn & Slip Indicator
A5930-4	Turn & Slip Indicator
A615A	Oil Monitor
A710	Audio Control Station
A711	Audio Control Station
A740	Audio Control Station
A770	Audio Control Station
A775	Audio Control Station
A790	Loud Hailer Controller
A8/A-10-4	Altimeter
A80 AAU 8A/A	Altimeter
A80-AAU-7A/A	Altimeter
A80-AAU7A/A-101	Altimeter
A80-AAU-8/A	Altimeter
A-80-AAU-8/A	Altimeter
A-80-AAU-8A/A	Altimeter
A80AAU8AA	Altimeter
AA10-020	Audio Controller
AA12	COMPACT AUDIO CONTROLLER
AA12-001	COMPACT AUDIO CONTROLLER
AA12-002	COMPACT AUDIO CONTROLLER
AA20-431	Cabin Pa Controller
AA21-400	Pa/Siren Controller
AA21-403	Pa/Siren Controller
AA21-406	Controller
AA21-407	Cabin Pa Controller
AA22-110	Control Pa
AA22-160	Pa/Siren Controller
AA22-170	Pa/Siren Controller
AA22-492	Pa/Siren Controller
AA22-493	Pa/Siren Controller
AA25-001	Audio Controller
AA25-007	Audio Controller
AA25-008	Audio Controller
AA25-011	Audio Controller
AA25-022	Audio Controller
AA25-027	Audio Controller
AA25-035	Audio Controller
AA25-036	Audio Controller

AA25-037	Audio Controller
AA31-002	Intercom
AA31-301	Ics Mod Controller
AA34-200	Radio Interface
AA35-100	Audio Mixer
AA36-001	Audio Adapter
AA36-100	Audio Adapter
AA37-001	Ics Call/Alert System
AA37-002	Ics Call/Alert System
AA37-212	Audio Module
AA39-2	Audio Controller
AA39-2A	Audio Controller
AA82-001	Stereo Intercom
AA82-060	Stereo Intercom
AA83-001	Stereo Intercom
AA92H-407	Audio Controller
AA94-401	Audio Controller
AA94-407	Audio Controller
AA94-423	Audio Controller
AA94-426	Audio Controller
AA94-428	Audio Controller
AA94-435	Audio Controller
AA95	Audio Controller
AA95-452	Audio Controller
AA95-453	Audio Controller
AA95-479	Audio Controller
AA95-498	Audio Controller
AA95-512	Audio Controller
AA95-524	Audio Controller
AA95-525	Audio Controller
AA95-528	Audio Controller
AA95-564	Audio Controller
AA95-565	Audio Controller
AA95-567	Audio Controller
AA95-725	Audio Controller
AA95-728	Audio Controller
AA95-728N	Audio Panel Nvg
AA95-728P	Audio Controller
AA95-729	Audio Controller
AA95-737	Audio Controller
AA95-764	Audio Controller
AA95-766	Audio Controller
AA95-863	Audio Controller
AA95-863 TSO	Audio Controller
AA95-912N	Audio Controller
AA95-913N	Audio Controller
AA96	Audio Controller
AA96-001	Audio Controller
AA96-400	Audio Controller

AA97	Audio Controller
AA97-402	Audio Controller
AA97-402N	Audio Controller
AA97-420	Audio Controller
AA97-431	Audio Controller
AA97-451	Audio Controller
AA97-MSP	Audio Controller
AAU/21/A	Altimeter
AAU/24/A	Altimeter
AAU/27/A	Altimeter
AAU/31/A	Altimeter
AAU/32/A	Altimeter
AAU/7/A	Altimeter
AAU/8/A	Altimeter
AAU-21/A	Altimeter
AAU-24/A	Altimeter
AAU-27/A	Altimeter
AAU31/A	Altimeter
AAU-31/A	Altimeter
AAU-31/A-1	Altimeter
AAU-32/A	Altimeter
AAU-32/A-1	Altimeter
AAU5003/A	Encoding Altimeter
AAU-7/A	Altimeter
AAU-8/A	Altimeter
AC-102	Airspeed Indicator
AC131	Airspeed Indicator
AC131A	Airspeed Indicator
ACP53-001	Audio Controller
AD-300H	A.D.I.
AD-550C	Attitude Director Indicator
AD-55C	Attitude Director Indicator
AD-600A	Attitude Director Indicator
AD-600B	Attitude Director Indicator
AD-600C	Attitude Director Indicator
AD-600H	Attitude Director Indicator
AD-650A	Attitude Director Indicator
AD-650B	Attitude Director Indicator
AD-650C	Attitude Director Indicator
AD-650H	Attitude Director Indicator
ADF-60	Adf Receiver
ADI-350AP	Attitude Indicator
ADI-350AT	Attitude Indicator
ADI-350AU	Attitude Gyro
ADI-350B	Attitude Indicator
ADI-350J	Attitude Indicator
ADI-350K	Attitude Indicator
ADI-350U	Attitude Indicator
ADI-35AR	Attitude Indicator

ADI-84	Attitude Director Indicator
ADI-84A	Attitude Director Indicator
ADI-85	ATTITUDE DIRECTOR INDICATOR
ADI-85A	ATTITUDE DIRECTOR INDICATOR
AEU-13/A	Torque Indicator
AF200	Cabin Pressure Indicator
AF200A	Cabin Pressure Indicator
AG34	Tach Generator
AG-44	Tach Generator
AGU-21/A	Hydraulic Pressure Indicator
AHC-SP-034	Vertical Speed Indicator
AHC-SP-034-01	Vertical Speed Indicator
AI360	Attitude Indicator
AI-360	Attitude Indicator
AI803	Attitude Indicator
AI-804	Attitude Indicator
AI-804A	Attitude Indicator
AI-804AA	Attitude Indicator
AI-804AB	Attitude Indicator
AI-804AC	Attitude Indicator
AI-804AD	Attitude Indicator
AI-804AE	Attitude Indicator
AI-804AF	Attitude Indicator
AI-804AG	Attitude Indicator
AI-804AH	Attitude Indicator
AI-804AJ	Attitude Indicator
AI-804AK	Attitude Indicator
AI-804AL	Attitude Indicator
AI-804AN	Attitude Indicator
AI-804AR	Attitude Indicator
AI-804AS	Attitude Indicator
AI-804AU	Attitude Indicator
AI-804AV	Attitude Indicator
AI-804AW	Attitude Indicator
AI-804AX	Attitude Indicator
AI-804AY	Attitude Indicator
AI-804AZ	Attitude Indicator
AI-804B	Attitude Indicator
AI-804BA	Attitude Indicator
AI-804BB	Attitude Indicator
AI-804BC	Attitude Indicator
AI-804BE	Attitude Indicator
AI-804BF	Attitude Indicator
AI-804BG	Attitude Indicator
AI-804BJ	Attitude Indicator
AI-804BK	Attitude Indicator
AI-804BL	Attitude Indicator
AI-804BM	Attitude Indicator
AI-804BN	Attitude Indicator

AI-804BP	Attitude Indicator
AI-804BR	Attitude Indicator
AI-804BT	Attitude Indicator
AI-804BU	Attitude Indicator
AI-804BV	Attitude Indicator
AI-804BW	Attitude Indicator
AI-804BY	Attitude Indicator
AI-804BZ	Attitude Indicator
AI-804C	Attitude Indicator
AI-804CA	Attitude Indicator
AI-804CC	Attitude Indicator
AI-804CD	Attitude Indicator
AI-804CE	Attitude Indicator
AI-804CF	Attitude Indicator
AI-804CH	Attitude Indicator
AI-804CJ	Attitude Indicator
AI-804CK	Attitude Indicator
AI-804CM	Attitude Indicator
AI-804CN	Attitude Indicator
AI-804CP	Attitude Indicator
AI-804CR	Attitude Indicator
AI-804CT	Attitude Indicator
AI-804CU	Attitude Indicator
AI-804CV	Attitude Indicator
AI-804CW	Attitude Indicator
AI-804CY	Attitude Indicator
AI-804D	Attitude Indicator
AI-804DA	Attitude Indicator
AI-804DB	Attitude Indicator
AI-804DC	Attitude Indicator
AI-804DD	Attitude Indicator
AI-804E	Attitude Indicator
AI-804F	Attitude Indicator
AI-804G	Attitude Indicator
AI-804H	Attitude Gyro
AI-804H/B	Attitude Indicator
AI-804H/G	Attitude Indicator
AI-804J/B	Attitude Indicator
AI-804J/G	Attitude Indicator
AI-804K	Attitude Indicator
AI-804L	Attitude Indicator
AI-804N	Attitude Indicator
AI-804P	Attitude Indicator
AI-804R	Attitude Indicator
AI-804S	Attitude Indicator
AI-804T	Attitude Indicator
AI-804U	Attitude Indicator
AI-804V	Attitude Indicator
AI-804W	Attitude Indicator

AI-804Y	Attitude Indicator
AI-804Z	Attitude Indicator
AI-904AD	Attitude Indicator
AI-904HA/B	Attitude Indicator
AI-904HA/G	Attitude Indicator
AI-904HB/B	Attitude Indicator
AI-904HB/G	Attitude Indicator
AI-904HC/B	Attitude Indicator
AI-904HC/G	Attitude Indicator
AI-904M/B	Attitude Indicator
AI-904M/G	Attitude Indicator
AI-904N/B	Attitude Indicator
AI-904N/G	Attitude Indicator
AI-904P/B	Attitude Indicator
AI-904P/G	Attitude Indicator
AI-904R/B	Attitude Indicator
AI-904R/G	Attitude Indicator
AI-904S/B	Attitude Indicator
AI-904S/G	Attitude Indicator
AI-904S/HB/B	Attitude Indicator
AI-904S/HB/G	Attitude Indicator
AI-904T/B	Attitude Indicator
AI-904T/G	Attitude Indicator
AI-904U/B	Attitude Indicator
AI-904U/G	Attitude Indicator
AI-904U/HA/B	Attitude Indicator
AI-904U/HA/G	Attitude Indicator
AI-904U/HC/B	Attitude Indicator
AI-904V/B	Attitude Indicator
AI-904V/G	Attitude Indicator
AIM 200	Turn & Slip Indicator
AIM 200DC (14)	Turn & Slip Indicator
AIM 200DC (14) P	Turn & Slip Indicator
AIM 200DC (28)	Turn & Slip Indicator
AIM 200DC (28) P	Turn & Slip Indicator
AIM 200E (AeroCom)	Turn & Slip Indicator
AIM 200ED	Turn & Slip Indicator
AIM 200EDC	Turn & Slip Indicator
AIM200E	Directional Gyro
AIM200ED	Directional Gyro
AIM200ED-2	Directional Gyro
AIM500ED	Attitude Indicator
AIM510-17A	Attitude Indicator
AIM510-17B	Attitude Indicator
AIM510-7A	Attitude Indicator
AIM510-7B	Attitude Indicator
A-J5-AAU-8A/A	Altimeter
AK2823AK10	Airspeed Indicator
AK-350	ALTITUDE REPORTER (ENCODER)

AK-35035	ALTITUDE REPORTER (ENCODER)
AK-35040	ALTITUDE REPORTER (ENCODER)
AK-35050	ALTITUDE REPORTER (ENCODER)
AK-35060	ALTITUDE REPORTER (ENCODER)
AK-35080	ALTITUDE REPORTER (ENCODER)
ALI-55	Radio Altimeter Indicator
ALT-55	Radio Altimeter
ALT-55B	Radio Altimeter
AMP1100-1100S	Clock
AMP1100-1100SW	Clock
AMP-1100-1100SW	Clock
AMP1100-1101	Clock
AMP1100-1108	Clock
AMP1100-1111	Clock
AMP1100-1120	Clock
AMP-1100-1120	Clock
AMP1100-11200SE	Clock
AMP1100-11200WE	Clock
AMP1100-11200YE	Clock
AMP1100-1120WE	Clock
AMP1100-1121	Clock
AMP1100-1124	Clock
AMP-1100-1124	Clock
AMP1100-1124B	Clock
AMP1100-1125	Clock
AMP-1100-1125	Clock
AMP1100-1126	Clock
AMP-1100-1126	Clock
AMP-1101-1108	Clock
AMP-1110-1110S-1110SW	Clock
AMP-1111	Clock
AMP-1120-1120WE	Clock
AMP-1121	Clock
AMP-1124	Clock
AMP-1124B	Clock
AMP-1125	Clock
AMR 350	Audio Controller
AMR 350H	Audio Controller
AMR-350	Audio Controller
AMR-350H	Audio Controller
AMS 44	Audio Controller
AMS42	Audio Controller
AMS42F	Audio Controller
AMS43	Audio Controller
AMS43 TSO	Audio Controller
AMS43HP	Audio Controller
AMS43T	Audio Controller
AMS43TSO	Single Channel Audio Controller
AMS44	Audio Controller

AMS44	Audio Controller
AMS44T	Audio Controller
AMS50-000	Audio Panel With Marker Beacon
AMS50-100	Audio Panel, Stereo
AMS-6000	Audio Mode Selector
AN 5760	Altimeter
AN 5771-5	Suction Gage
AN 5771-5A	Suction Gage
AN/APR39(V)1	RADAR SIGNAL DETECTING SET
AN/APR-39(V)1	RADAR SIGNAL DETECTING SET
AN/ARN-83	DIRECTION FINDER SET
AN/ASN-43	Gyro
AN3095-1	Landing Light
AN3095-10	Landing Light
AN3095-11	Landing Light
AN3095-2	Landing Light
AN3095-3	Landing Light
AN3095-4	Landing Light
AN3095-4A	Landing Light
AN3095-5	Landing Light
AN3095-6	Landing Light
AN3095-6A	Landing Light
AN3095-7	Landing Light
AN3095-8	Landing Light
AN3095-9	Landing Light
AN-30959	Landing Light
AN3095-A4	Landing Light
AN3203V30	Voltmeter
AN3203-V30	Dc Voltmeter
AN395-5A	Landing Light
AN5531-1	Tachometer Indicator
AN5766-1	Magnetic Compass
AN5766-2	Magnetic Compass
AN5766-3	Magnetic Compass
AN5766-4	Magnetic Compass
AN5766-T3	Magnetic Compass
AN5766-T4	Magnetic Compass
AN5770-1	Manifold Pressure Gage
AN5770-2	Manifold Pressure Gage
AN5770-2-12	Manifold Pressure Gage
AN5770-2A-12	Manifold Pressure Gage
AN5770-2A-34	Manifold Pressure Gage
AN5770-3	Manifold Pressure Gage
AN5770-4-12	Manifold Pressure Gage
AN5770-4-34	Manifold Pressure Gage
AN5771-1	De-Ice Pressure Indicator
AN-5771-2	Pressure Indicator
AN5772-1	Dual Fuel Pressure Gage
AN5772-2	Oil Pressure Indicator

AN-5825-1	Climb Gauge
AN6011-1B	O2 Pressure Gauge
ANS-70SL	Turn & Bank Indicator
APM1100	Clock
APM1100S	Clock
APM1100SW	Clock
APM1101	Clock
APM1101S	Clock
APM1101SW	Clock
APM1111	Clock
APM1120	Clock
APM11200SE	Clock
APM11200WE	Clock
APM11200YE	Clock
APM1120WE	Clock
APM1121	Clock
APM1124	Clock
APM1124B	Clock
APM1125	Clock
APM1126	Clock
APT-100-1000-2030SG	Pressure Transducer
APT-150-1000-125G	Oil Pressure Transmitter
APT-279-1000-125G	Pressure Switch
APT-291A-1000-250G	Oil Pressure Transmitter
APT-294A-1000-150G	Oil Pressure Transmitter
APT-311-1000-200G	Oil Pressure Transmitter
APT-48KBS-1000-150G	Pressure Transducer
APTE-130-1000-75G	Pressure Transducer
APTE-130LF-1000-75G	Pressure Transducer
APTE-138-100G	Pressure Transducer
APTE-138-150G	Pressure Transducer
APTE-138-50G	Pressure Transducer
APTE-138A-100G	Pressure Transducer
APTE-138A-150G	Pressure Transducer
APTE-138A-50G	Pressure Transducer
APTE-139-1500SG	Pressure Transducer
APTE-139KBS-1000-1500SG	Pressure Transducer
APTE-173RT1-75G	Oil Pressure Transmitter
APTE-74-1000-10G	Pressure Transmitter
APTE-74-1000-120G	Pressure Transmitter
APTE-74-1000-40G	Pressure Transmitter
AR204-1D	Fuel Flow Indicator
AR-209-11	Fuel Flow Indicator
AR-209-4	Fuel Flow Indicator
ARU-13/A	REMOTE ATTITUDE INDICATOR
ARU-14/A	Attitude Indicator
ARU-3/A	Turn & Slip Indicator
ARU-3A	Turn & Slip Indicator
ARU-48/A	Attitude Indicator

ARU-65/A	Attitude Indicator
ARU-68/A	Attitude Indicator
ARU-69/A	Attitude Indicator
ARU-70/A	Attitude Indicator
ARU-71/A	Attitude Indicator
ASC 1006 DO38	Torque Indicator
ASH450-1	Static Inverter
ASH500-1P	Static Inverter
ASH500-1PB	Static Inverter
ASH564B-9	Static Inverter
ASH584-1	Static Inverter
ASH584-2	Static Inverter
ASH584-3	Static Inverter
ASH584-4	Static Inverter
ASH584-5	Static Inverter
ASH584-6	Static Inverter
ASO AAU-6A/A	Altimeter
AT-206-2	Fuel Totalizer
AT-209-NL-05	Fuel Totalizer
AT4110A6	Clock
AT420000	Clock
AT4200C0	Clock
AT420100	Clock
AT420102	Clock
AT4210A5	Clock
AT4210A6	Clock
AT4210P0	Clock
AT4210R0	Clock
AT4211A5	Clock
AT4211A6	Clock
AT4211P0	Clock
AT422002	Clock
AT422004	Clock
AT4220A5	Clock
AT4220A6	Clock
AT4220C1	Clock
AT4220C2	Clock
AT4220P0	Clock
AT4220P1	Clock
AT42210H	Clock
AT4221A5	Clock
AT4221A6	Clock
AT4221E1	Clock
AT4221P0	Clock
AT4250P1	Clock
AT42510H	Clock
AT4251E1	Clock
AT4251E1C	Clock
AT660100	Clock

ATP-100-1000-2030 SG	Pressure Transducer
ATPE-138-100G	Pressure Transducer
ATPE-138-150G	Pressure Transducer
ATPE-138A-100G	Pressure Transmitter
ATPE-138A-150G	Pressure Transmitter
ATPE-138A-50G	Pressure Transmitter
AU-10	Rpm Warning Box
AU-10-1	Warning Control Unit
AU-10-6	Rpm Warning Box
AUD 250H	Audio Panel Ic
AUD 251H	Audio Controller
AUD-250H	Audio Panel Ic
AUD-251H	Audio Controller
AV16B1667D	Motor Driven Valve
AV16B17480-2	Motor Driven Valve
AV16B2095D	Motor Driven Valve
AV16E1217C	Fuel Shut Off Valve
AV24B1119B	Motor Driven Valve
AV24B1179B	Motor Driven Valve
AV24B1260AR	Fuel Valve
AV24B1265AR	Fuel Shut Off Valve
AW1-7/8-21-AK	Suction Indicator
AW-17/8-27-E5	O2 Pressure Gauge
AW-1-7/8-4	Suction Gage
AW1814AB09	Oil Pressure Indicator
AW1821AC02	Hydraulic Pressure Indicator
AW1842AR01	Torque Indicator
AW1842AR02	Torque Indicator
AW1842AR04	Torque Indicator
AW1842AR05	Torque Indicator
AW1842AR07	Torque Indicator
AW1842BA01	Torque Indicator
AW1842BA02	Torque Indicator
AW1842BA03	Torque Indicator
AW1842BA04	Torque Indicator
AW1842BA05	Torque Indicator
AW1842BA06	Torque Indicator
AW2812AH04	Airspeed Indicator
AW2812AQ01	Airspeed Indicator
AW2823AK01	Airspeed Indicator
AW2823AK02	Airspeed Indicator
AW2823AK03	Airspeed Indicator
AW2823AK04	Airspeed Indicator
AW2823AK05	Airspeed Indicator
AW2823AK06	Airspeed Indicator
AW2823AK09	Airspeed Indicator
AW2823AK11	Airspeed Indicator
AW2823AK12	Airspeed Indicator
AW2823AK13	Airspeed Indicator

AW2823AK15	Airspeed Indicator
AW2823AK16	Airspeed Indicator
AW2823AK17	Airspeed Indicator
AW2823AK18	Airspeed Indicator
AW2823AK19	Airspeed Indicator
AW2823AM01	Airspeed Indicator
AW2823AM02	Airspeed Indicator
AW2829AE02	Airspeed Indicator
AW2837AB01	Airspeed Indicator
AW2837AB02	Airspeed Indicator
AW2837AB03	Airspeed Indicator
AW2837AB04	Airspeed Indicator
AW2837AB05	Airspeed Indicator
AW2837AC01	Airspeed Indicator
AW2837AC02	Airspeed Indicator
AW2837AC03	Airspeed Indicator
AW2837AC05	Airspeed Indicator
AW2837AC06	Airspeed Indicator
AW2837AC07	Airspeed Indicator
AW2837AH01	Airspeed Indicator
AW2837AJ01	Airspeed Indicator
AW2842AH01	Torque Indicator
AW2923AK08	Airspeed Indicator
AW2938AC02	Mach Airspeed Indicator
AZ649	Air Data Sensor
B0020-14107	Altimeter
B0090 81101	Altimeter
B0090 81102	Altimeter
B0090 81104	Altimeter
B0090 81107	Altimeter
B0090 81108	Altimeter
B0090 81110	Altimeter
B024381143	Mach Airspeed Indicator
B0294-2001844204	Control Motion Transducer
B118-249	Liquid Quantity Indicator
B13-941.22.05.1.CW	Clock
B13-941.22.05.2.0	Clock
B13-941.22.05.4.AM	Clock
B13-944.22.00.0.A	Clock
B13-944.22.28.2.A	Clock
B13-944.32.05.1.CH	Clock
B15821-10-008	Airspeed Indicator
B15-945.32.05.4.CD	Clock
B17-941.22.05.1.A	Clock
B17-941.22.28.4.CR	Clock
B17-941.27.00.0.A	Clock
B17-951.22.05-4.AA	Clock
B17-951.22-05-1.DG	Clock
B17-952.22.05.3.A	Clock

B18-945.22.00.0.A	Clock
B18-945.22.05.1.A	Clock
B18-945.22.05.4.CR	Clock
B18-945.22.05-1.K	Clock
B18-945.22.28.1.A	Clock
B18-945.22.28.1.K	Clock
B18-945.22.28.2.A	Clock
B18-945.22.28.4.CR	Clock
B18-945.22.28.4.DN	Clock
B18-945.25.00.0.AH	Clock
B18-945.32.28.1.AJ	Clock
B18-945.32.28.3.AG	Clock
B18-945.35.28.1.AF	Clock
B18-945.35.28.1.AI	Clock
B1894522000A	Clock
B1894522282A	Clock
B1894532281AG	Clock
B18-945-32-28-1AG	Clock
B1894532283AG	Clock
B18-955.22.00.0.CL	Clock
B18-955.22.00.0.CS	Clock
B18-955.22.05.4.CG	Clock
B18-955.22.28.4.DC	Clock
B2350-0016	Motor Driven Valve
B2888-01	Rate Gyro
B3555A	Dome Light
B4-1120L10	Clock
B4420210002	Altimeter
B4515210002	Altimeter
B45152-10-003	Altimeter
B4515210004	Altimeter
B45152-10-004	Altimeter
B4515210005	Altimeter
B45152-10-005	Altimeter
B45152-10-009	Altimeter
B4515210013	Altimeter
B45152-10-013	Altimeter
B451521002	Altimeter
B45152-10-104	Altimeter
B45152-10-105	Altimeter
B45152-10-113	Altimeter
B4515210410	Encoding Altimeter
B45451-10-001	Encoding Altimeter
B45451-10-002	Encoding Altimeter
B45451-10-011	Encoding Altimeter
B45451-10-101	Encoding Altimeter
B45451-10-102	Encoding Altimeter
B45501-10-001	Encoding Altimeter
B45501-10-002	Encoding Altimeter

B45501-10-101	Encoding Altimeter
B45501-10-102	Encoding Altimeter
B45521-10-001	Encoding Altimeter
B45521-10-002	Encoding Altimeter
B45521-10-101	Encoding Altimeter
B45521-10-102	Encoding Altimeter
B45531-10-001	Encoding Altimeter
B4553110002	Altimeter
B4553110004	Altimeter
B455311002	Altimeter
B455311004	Altimeter
B45531-10-101	Encoding Altimeter
B45531-10-102	Encoding Altimeter
B4553110104	Altimeter
B709-7	Torque Indicator
B771M40C1003	Triple Tachometer Indicator
BA-141	Altimeter
BARAN 87	ANEMO-BAROMETRIC MODULE
BAS-212/412-100G	Oil Pressure Transmitter
BAS-212/412-1500SG	Pressure Transducer
BAS-212/412-150G	Pressure Transducer
BAS-212/412-50G	Pressure Transducer
BAS-222-125G-1	Engine Oil Pressure Transducer
BAS-222-250G	Pressure Transducer
BE409	Voltmeter
BE412	Voltmeter
BE412-40	Voltmeter
BE413	Ammeter
BE413-40	Ammeter
BE418-3	Ammeter
BE440	Dual Volt/Amp Indicator
BH183M-13	Turbine Inlet Temperature Indicator
BH183R-16	Turbine Inlet Temperature Indicator
BH183R-58	Turbine Inlet Temperature Indicator
BH185L-37	Fan Speed Indicator
BHI85L-37	Fan Speed Indicator
BSC10-4	Power Control Panel
BSE-206-30G	Fuel Pressure Transducer
BTI-600-2A-1	Battery Temperature Indicator
BYLF51175	Temperature Sensor
BYLF-51514	Temperature Sensor
C1000	C-1000 Control Head
C-1000	C-1000 Control Unit
C1000-10	C-1000 Control Head
C1000-11	C-1000 Control Head
C14	Directional Gyro
C-14	Directional Gyro
C14123AA	Altimeter
C14129BA	Altimeter

C14130AA	Altimeter
C14158AA	Altimeter
C14A	Directional Gyro
C-14A	Directional Gyro
C14D	Directional Gyro
C-14D	Directional Gyro
C16111AA	H.S.I.
C16112AA	Fuel Pressure Conditioning Unit
C16113AA	Fuel Pressure Conditioning Unit
C-1611D/AIC	INTERCOMMUNICATION SET
C16158CA	Multifunction Indicator
C16159AB	Rotor Rpm Indicator
C16159BA	Rotor Rpm Indicator
C16159CA	Rotor Rpm Indicator
C16159DA	Rotor Rpm Indicator
C16160AA	Rotor Rpm Indicator
C16196AB	Temperature Probe
C16222AA01	Torque Indicator
C16239AA	Tachometer Indicator
C16240AA	Temperature Indicator
C16287AA	Tachometer Indicator
C16287BA	Tachometer Indicator
C16287CA	Tachometer Indicator
C16287DA	Tachometer Indicator
C16298AA	Temperature Indicator
C16299AA	Ng Tachometer Indicator
C16307AA	Pressure Indicator
C16307BA	Pressure Indicator
C16307CA	Pressure Indicator
C16307DA	Pressure Indicator
C19239AA	Tachometer Indicator
C200-0	Flexcomm Fm Communications Transceiver
C200-1	Flexcomm Fm Communications Transceiver
C2200-L4	Compass
C2200-L4-1	Compass
C2200-L4-1B	Compass
C2200-L4-B	Compass
C2300-DL4	Compass
C2300-DL4-1	Compass
C2300-DL4-1B	Compass
C2300DL4-24B	Compass
C2300DL4-B	Compass
C2300DL4-CM	Compass
C2300DL4-CM-24	Compass
C2300DL4-CM-24B	Compass
C2300DL4-CM-B	Compass
C2300DL4-CMI-B	Compass
C2300-L-24	Compass
C2300L4	Compass

C2300-L4	Compass
C2300-L4-24	Compass
C2300L4-24B	Compass
C2300-L4-24B	Compass
C2300-L4-B	Compass
C2300L4I	Compass
C2300L4I-24B	Compass
C2300L4-M23	Compass
C2300L4VFM-12	Compass
C2300L4VFM-24	Compass
C2300L4VM-12	Compass
C2300L4VM-24	Compass
C2300LV4M-23	Compass
C2350-DL4-VF	Compass
C2350L4-M23	Compass
C2400-L4P	Compass
C2400-L4P-1	Compass
C2400-L4P-1A	Compass
C2400-L4P-1AB	Compass
C2400-L4P-1B	Compass
C2400-L4P-2	Compass
C2400-L4P-24	Compass
C2400-L4P-24B	Compass
C2400-L4P-2A	Compass
C2400-L4P-B	Compass
C2400-L4T-1BB	Compass
C2400L4VM24B	Compass
C2400-L4VT	Compass
C2400-L4VT-1A	Compass
C2400-L4VT-1B	Compass
C2400-L4VT-1BB	Compass
C2400-L4VT-24	Compass
C2400-L4VT-B	Compass
C2400L4VW-310-RG	Compass
C-2G	COMPASS CONTROLLER
C406-2	Emergency Locator Transmitter
C406-2HM	Emergency Locator Transmitter
C41542-10-003	Altimeter
C450-1	Engine Gauge
C450-2	Engine Gauge
C450A-1	Engine Gauge
C450A-2	Engine Gauge
C450A-3	Engine Gauge
C45501-10-001	Encoding Altimeter
C45501-10-002	Encoding Altimeter
C45501-10-101	Encoding Altimeter
C45501-10-102	Encoding Altimeter
C45521-10-001	Encoding Altimeter
C45521-10-002	Encoding Altimeter

C45521-10-101	Encoding Altimeter
C45521-10-102	Encoding Altimeter
C-5C	Standby Compass
C-5J	Magnetic Compass
C-6280(P)/APX	Transponder Control
C-6280A(P)/APX	Transponder Control
C-6533/ARC	CONTROL COMMUNICATION
C6533/ARC	Audio Controller
C660501-0102	Compass
C661003-0506	Turn & Slip Indicator
C661011-0105	Altimeter
C661011-0805	Altimeter
C661014-0101	Altimeter
C661025-0101	Altimeter 50' Increments Mb
C661025-0102	Altimeter 20' Increments Mb
C661030-0301	Turn & Bank Indicator
C661035-0101	Vertical Speed Indicator
C661045-0301	Airspeed Indicator
C661045-0302	Airspeed Indicator
C661045-0303	Airspeed Indicator
C661045-0304	Airspeed Indicator
C661045-0305	Airspeed Indicator
C661045-0306	Airspeed Indicator
C661045-0308	Airspeed Indicator
C661045-0309	Airspeed Indicator
C661045-0310	Airspeed Indicator
C661045-0311	Airspeed Indicator
C661045-0312	Airspeed Indicator
C661045-0313	Airspeed Indicator
C661045-0315	Airspeed Indicator
C661045-0316	Airspeed Indicator
C661045-0317	Airspeed Indicator
C661045-0318	Airspeed Indicator
C661045-0319	Airspeed Indicator
C661051-0101	Gyro Horizon
C661051-0201	Gyro Horizon
C661052-0201	Directional Gyro (Electric)
C661053-0101	Directional Gyro
C661053-0102	Directional Gyro
C661061-0101	Mach Airspeed Indicator
C661062-0102	Mach Airspeed Indicator
C661063-0101	Mach Airspeed Indicator
C661063-0102	Mach Airspeed Indicator
C661063-0103	Mach Airspeed Indicator
C661064-0237	Airspeed Indicator
C661065-0237	True Airspeed Indicator
C661071-0101	Altimeter
C661072-0102	Altimeter
C661074-0101	Encoding Altimeter In Hg

C661074-0102	Encoding Altimeter Mb
C661076-0102	Gyro Horizon
C662503-0109	Prop De-Ice Ammeter
C664511-0102	Digital Clock
C-6717/APX	Transponder Control
C6SC1029-3	Gas Generator Tachometer Indicator
C6SC1030-9	Temperature Indicator
C6SC1034-17	Airspeed Indicator
C6SC1034-25	Airspeed Indicator
C6SC1034-27	Airspeed Indicator
C6SC1034-29	Airspeed Indicator
C6SC1034-31	Airspeed Indicator
C6SC1034-33	Airspeed Indicator
C6SC1034-35	Airspeed Indicator
C6SC1034-7	Airspeed Indicator
C6SC1036-1	Fuel Flow Indicator
C6SC1037-5	Prop Speed Indicator
C6SC1037-7	Prop Rpm Indicator
C6SC1038-1	Aileron Trim Position Indicator
C6SC1081-3	Position Indicator
C6SC1084-3	Oil Pressure Transmitter
C6SC1084-5	Torque Transmitter
C6SC1085-5	Turbine Temperature Indicator
C6SC1089-1	Oil Pressure Indicator
C6SC1090-1	Torque Indicator
C6SC1116	Torque Transmitter
C-7483/APX	Transponder Control
CAD-31	Control Adapter
CAD-62	Control Adapter
CB2100	Compass
CB2100T4	Compass
CB-2100T4	Compass
CB-2100-T4	Compass
CB-2100-T4A	Compass
CB2100T6C	Compass
CB2100T6D	Compass
CB2100-T6D	Compass
CB-2100-T6-D	Compass
CC250-001	Comm Control Unit
CG1117AA02	Afcs Panel
CH251-01F	Receiver Transmitter
CL2300L4-24B	Compass
CL-ABU-11/A	Clock
CLT-22	Vhf Comm Control
CLT-32	Vhf Nav Control
CLT-62	Adf Control
CLT-92	Atc Control
CM2645L1	Fuel Quantity Indicator
CM2675-1	Directional Gyro

CM-440	RADAR SIGNAL DETECTING SET
CN1314/A	Displacement Gyro
CN-1314/A	Displacement Gyro
CN-1314B/A	Displacement Gyro
CN-1497C/A	Displacement Gyro
CN-811A/ASN	Displacement Gyro
CN-998/ASN-43	Directional Gyro
CN-998A/ASN-43	Directional Gyro
CN-998B	Displacement Gyro
CN-998B/ASN-43	Directional Gyro
CP1755ABC	Audio Controller
CP1766A	Audio Controller
CP1766G	Audio Controller
CP1766GB01	Audio Controller
CP1766GB02	Audio Controller
CP1766H	Audio Controller
CP1766J	Audio Controller
CP1766K	Audio Controller
CP1876EB01	Audio Controller
CP1976A1	Audio Control Panel Lighting
CP1976A2	Audio Controller
CP1976AA01	Audio Controller
CP1976AA02	Audio Controller
CP1976AA03	Audio Controller
CP1976B1	Audio Controller
CP1976B2	Audio Controller
CP1976C	Audio Controller
CP1976DA02	Audio Controller
CP1976EA01	Audio Controller
CP1976EB01	Audio Controller
CP1976FA01	Audio Controller
CP1976FB01	Audio Controller
CP1976GA01	Audio Controller
CP2321A	Audio Controller
CP2321B	Audio Controller
CP2618A	Audio Controller
CP2618AA02	Audio Controller
CP2618AA03	Audio Controller
CP2618AA05	Audio Controller
CP2618BA03	Audio Controller
CP2618CA03	Audio Controller
CP2618CB03	Audio Controller
CP2618DA01	Audio Controller
CP2618DB01	Audio Controller
CPT 606	Beacon Assembly
CR2795B105A1	Voltage Regulator
CS412	Dual Remote Compensator
CS-412	Dual Remote Compensator
CSV1152-12AB	Voltage Regulator

CSV1829-1	Voltage Regulator
CSV1829-3	Voltage Regulator
CSV1829-7	Voltage Regulator
CTL-22	Comm Control
CTL-32	Nav Control
CTL-62	Adf Control
CTL-92	Atc Control
CW801M	Power Supply
D107318	Fuel Boost Pump
D107318D	Fuel Boost Pump
D107318D1	Fuel Boost Pump
D107318E	Fuel Boost Pump
D107319	Fuel Boost Pump
D107613	Servo Motor
D120-P2-T	Altimeter
D2206104004	Altimeter
D22061-04-004	Altimeter
D2206104010	Altimeter
D22061-04-010	Altimeter
D2206122010	Altimeter
D-30337-04-008	Dual Tachometer Indicator
D-3040	Landing Light
D-30401	Landing Light
D-3040B	Landing Light
D-3040B-1	Landing Light
D-3040E	Landing Light
D-3040E-1	Landing Light
D3137L-B2-1C	Radio Magnetic Indicator
D3337L-B-2-1-SSB1	Rmi
D42129/1	Control Motion Transducer
D42129/2	Control Motion Transducer
D4720-01	Turn & Bank Indicator
D480-07-001	Annunciator
DA-42-37	Pressure Indicator
DCR-40-70B	Power Supply
DCR-40-70B2	Power Supply
DDL-OC110A	Turbine Speed Indicator
DDL-OC110B	Turbine Speed Indicator
DDL-OC110D	Turbine Speed Indicator
DDL-OC119A	T5 Temperature Indicator
DG02E-3BHL	Directional Gyro
DG02E-3BL	Directional Gyro
DG-OC110D	Turbine Speed Indicator
DGL-OC119D	O.A.T. Indicator
DG-OC110A	Turbine Speed Indicator
DG-OC110D	Digital Turbine Speed Indicator
DGS65	Directional Gyro
DGS-65	Directional Gyro
DH1030-24-600CS	Inverter

DHCSC70022-1	D.C. Volt Indicator
DK 457-120	Triple Tachometer Indicator
DK033	Pressure Transmitter
DK033-1	Pressure Transmitter
DK033-3	Water Pressure Transmitter
DK040	Pressure Transmitter
DK042	Pressure Transmitter
DK100	Locating Beacon
DK120	Locating Beacon
DK130	Locating Beacon
DK140	Locating Beacon
DK433	Fuel Pressure Indicator
DK433-39	Fuel Pressure Indicator
DK433-40	Fuel Pressure Indicator
DK433-53	Fuel Pressure Indicator
DK449-42	Triple Oil Pressure Indicator
DK449-53	Triple Oil Pressure Indicator
DK453	Pressure Indicator
DK504	Dual Torque Indicator
DK504-39	Dual Torque Indicator
DK504-40	Dual Torque Indicator
DK504-45	Dual Torque Indicator
DL 453	Dual Tachometer Indicator
DL1326M164	Linear Actuator
DL2155M20	STABILATOR ELECTRO/MECHANICAL LINEAR ACTUATOR
DL401-14	Dual Tachometer Indicator
DL401-15	Dual Tachometer Indicator
DL401-16	Dual Tachometer Indicator
DL401-17	Dual Tachometer Indicator
DL401-18	Dual Tachometer Indicator
DL401-1A	Dual Tachometer Indicator
DL404-109	Triple Tachometer Indicator
DL404-112	Triple Tachometer Indicator
DL404-19	Triple Tachometer Indicator
DL404-38	Triple Tachometer Indicator
DL404-39	Triple Tachometer Indicator
DL404-4	Triple Tachometer Indicator
DL404-40	Triple Tachometer Indicator
DL404-41	Triple Tachometer Indicator
DL404-42	Triple Tachometer Indicator
DL404-50	Triple Tachometer Indicator
DL404-53	Triple Tachometer Indicator
DL404-7	Triple Tachometer Indicator
DL404-9	Triple Tachometer Indicator
DL412	Tachometer Indicator
DL412-39	Tachometer Indicator
DL412-40	Tachometer Indicator
DL412-41	Tachometer Indicator
DL412-41A	Tachometer Indicator

DL412-53	Tachometer Indicator
DL412-55	Tachometer Indicator
DL412-56	Tachometer Indicator
DL412-57	Tachometer Indicator
DL412-60	Tachometer Indicator
DL412-61	Tachometer Indicator
DL412-62	Tachometer Indicator
DL412-63	Tachometer Indicator
DL412-64	Tachometer Indicator
DL412-65	Tachometer Indicator
DL412-66	Tachometer Indicator
DL412-67	Tachometer Indicator
DL412-70	Tachometer Indicator
DL436-36	Triple Tachometer Indicator
DL436-38	Triple Tachometer Indicator
DL436-39	Triple Tachometer Indicator
DL439	Dual Tachometer Indicator
DL439-003-003	Dual Tachometer Indicator
DL439-003-003MA	Dual Tachometer Indicator
DL439-004-003	Dual Tachometer Indicator
DL439-101-003	Dual Tachometer Indicator
DL4451-2	Propeller Speed Indicator
DL446	Gas Producer Tachometer Indicator
DL446-2	Gas Producer Tachometer Indicator
DL446-3	Gas Producer Tachometer Indicator
DL446-6	Turbine Speed Indicator
DL450	Dual Tachometer Indicator
DL453	Dual Tachometer Indicator
DL457-120	Triple Tachometer Indicator
DL457-300	Triple Tachometer Indicator
DL457-400	Triple Tachometer Indicator
DL457-600	Triple Tachometer Indicator
DME-40	Dme Transceiver
DME42	Dme Xcvr
DME-42	Dme Transceiver
DMS 44A	DISTANCE MEASURING SYSTEM
DMYNO-05133-002	Fuel Flow Indicator
DMYNO-38704-001	Fuel Flow Indicator
DMYNO-98429-001	Clock
DSA274	Attitude Indicator
DSF 1549-10	Flow Rate Indicator
DSF 1549-4	Flow Rate Indicator
DSF 1549-5	Flow Rate Indicator
DSF1549-2	Fuel Flow Indicator
DSF1549-3	Fuel Flow Indicator
DSF419	Fuel Quantity Indicator
DSF508-11	Oil Quantity Indicator
DSF508-12	Oil Quantity Indicator
DSF508-12M	Oil Quantity Indicator

DSF508-13	Oil Quantity Indicator
DSF508-14	Oil Quantity Indicator
DSF508-15	Oil Quantity Indicator
DSF508-16	Oil Quantity Indicator
DSF508-17	Oil Quantity Indicator
DSF508-18	Oil Quantity Indicator
DSF508-8	Oil Quantity Indicator
DSF508-9	Oil Quantity Indicator
DSF-684-1	Fuel Quantity Indicator
DSF989-2	Fuel Quantity Indicator
DSF989-3	Fuel Quantity Indicator
DSF989-5	Fuel Quantity Indicator
DSF989-7	Fuel Quantity Indicator
DST1017-25	Inter Turbine Temperature Indicator
DST17-1	Temperature Indicator
DST29-1	Temperature Indicator
DST29-2	Temperature Indicator
DST29-3	Temperature Indicator
DST29-6	T.I.T. Indicator
DT405-1	Dual Torque Indicator
DT409-10	Triple Torque Indicator
DT409-12	Triple Torque Indicator
DT409-13	Triple Torque Indicator
DT409-3	Triple Torque Indicator
DT409-4	Triple Torque Indicator
DT409-9	Triple Torque Indicator
DT410-10	Dual Torque Indicator
DT410-11	Dual Torque Indicator
DT410-2	Dual Torque Indicator
DT410-3	Dual Torque Indicator
DT410-4	Dual Torque Indicator
DT410-5	Dual Torque Indicator
DT410-8	Dual Torque Indicator
DT411	Torque Indicator
DT413-021	Dual Torque Indicator
DT413-121	Dual Torque Indicator
DT501-6	Dual Torque Indicator
DT501-7	Dual Torque Indicator
E07241-04-003	Airspeed Indicator
E07241-10-004	Airspeed Indicator
E1070-2	Power Module
E1070C	Power Module
E1070F	Power Module
E1070G	Power Module
E149AC	Triple Tachometer Indicator
E149AC1	Triple Tachometer Indicator
E149AC2	Triple Tachometer Indicator
E149AC7	Triple Tachometer Indicator
E149U	Triple Tachometer Indicator

E149V	Triple Tachometer Indicator
E22061-04-016	Altimeter
EA100AN17	Quantity Indicator
EA100AN53	Quantity Indicator
EA100AN62	Quantity Indicator
EA100AN70	Quantity Indicator
EA100AN93	Quantity Indicator
EA100ANH	Quantity Indicator
EA100ANH126	Quantity Indicator
EA100ANH133H	Quantity Indicator
EA100ANH-141H	Hydraulic Fluid Indicator
EA100ANH144	Quantity Indicator
EA100ANH94	Quantity Indicator
EA100ANH97	Quantity Indicator
EA100ANH98	Quantity Indicator
EA1015B-2374	Tank Unit
EA1028B-2375	Tank Unit
EA1028B-2375M	Tank Unit
EA102AN11-146	Quantity Indicator
EA102AN116	Quantity Indicator
EA102AN44	Quantity Indicator
EA102AN65	Quantity Indicator
EA1065AW2315	Oil Quantity Transmitter
EA1065AW-2315	Oil Quantity Transmitter
EA-1403-5Z	Cabin Rate Of Climb Indicator
EA1409-1Z	Vertical Speed Indicator
EA-1409A	Vertical Speed Indicator
EA326-15	Position Indicator
EA326-15A	Position Indicator
EA326-2	Position Indicator
EA326-8	Position Indicator
EA327-3	Position Indicator
EA-401A	Encoding Altimeter
EA470-3518	Fuel Quantity Tank Unit
EA470-3587	Fuel Quantity Tank Unit
EA470-3588	Fuel Probe
EA470-3709	Tank Unit
EA470A-1526	Fuel Probe
EA470B-3588	Fuel Probe
EA470B-3710	Fuel Probe
EA-5171	Airspeed Indicator
EA-5171-0100-CES	Airspeed Indicator
EA-5171-0101-CES	Airspeed Indicator
EA-5171-0102-CES	Airspeed Indicator
EA-5171-0103-CES	Airspeed Indicator
EA-5171-0104-CES	Airspeed Indicator
EA-5171-0105-CES	Airspeed Indicator
EA-5171-0106-CES	Airspeed Indicator
EA-5171-0107-CES	Airspeed Indicator

EA-5171-0108-CES	Airspeed Indicator
EA-5171-0109-CES	Airspeed Indicator
EA-5171-0110-CES	Airspeed Indicator
EA-5171-0111-CES	Airspeed Indicator
EA-5171-0112-CES	Airspeed Indicator
EA-5171-0113-CES	Airspeed Indicator
EA-5171-0114-CES	Airspeed Indicator
EA-5171-0300-CES	Airspeed Indicator
EA-5171-0600-CES	Airspeed Indicator
EA-5171-1	Airspeed Indicator
EA-5171-101-CES	Airspeed Indicator
EA-5171-102-CES	Airspeed Indicator
EA-5171-103-CES	Airspeed Indicator
EA-5171-104-CES	Airspeed Indicator
EA-5171-105-CES	Airspeed Indicator
EA-5171-106-CES	Airspeed Indicator
EA-5171-107-CES	Airspeed Indicator
EA-5171-108-CES	Airspeed Indicator
EA-5171-109-CES	Airspeed Indicator
EA-5171-10-CES	Airspeed Indicator
EA-5171-110-CES	Airspeed Indicator
EA-5171-111-CES	Airspeed Indicator
EA-5171-112-CES	Airspeed Indicator
EA-5171-113-CES	Airspeed Indicator
EA-5171-114-CES	Airspeed Indicator
EA-5171-11-CES	Airspeed Indicator
EA-5171-121-CES	Airspeed Indicator
EA-5171-12-CES	Airspeed Indicator
EA-5171-13-CES	Airspeed Indicator
EA-5171-14-CES	Airspeed Indicator
EA-5171-15-CES	Airspeed Indicator
EA-5171-16-CES	Airspeed Indicator
EA-5171-17-CES	Airspeed Indicator
EA-5171-18-CES	Airspeed Indicator
EA-5171-1-BEL	Airspeed Indicator
EA-5171-1-CES	Airspeed Indicator
EA-5171-1-FRD	Airspeed Indicator
EA-5171-1-MON	Airspeed Indicator
EA-5171-1-TAC	Airspeed Indicator
EA-5171-1-VAR	Airspeed Indicator
EA-5171-2	Airspeed Indicator
EA-5171-202-CES	Airspeed Indicator
EA-5171-203-CES	Airspeed Indicator
EA-5171-204-CES	Airspeed Indicator
EA-5171-205-CES	Airspeed Indicator
EA-5171-2-BEL	Airspeed Indicator
EA-5171-2-CES	Airspeed Indicator
EA-5171-2-MON	Airspeed Indicator
EA-5171-3-BEL	Airspeed Indicator

EA-5171-3-CES	Airspeed Indicator
EA-5171-3-MON	Airspeed Indicator
EA-5171-4-BEL	Airspeed Indicator
EA-5171-4-CES	Airspeed Indicator
EA-5171-5-CES	Airspeed Indicator
EA-5171-6-CES	Airspeed Indicator
EA-5171-7-CES	Airspeed Indicator
EA-5171-8-CES	Airspeed Indicator
EA-5171-9-CES	Airspeed Indicator
EA-5172	Airspeed Indicator
EA-5172-1	Airspeed Indicator
EA-5172-101-AA	Airspeed Indicator
EA-5172-101-CES	Airspeed Indicator
EA-5172-102-AA	Airspeed Indicator
EA-5172-102-CES	Airspeed Indicator
EA-5172-103-AA	Airspeed Indicator
EA-5172-104-AA	Airspeed Indicator
EA-5172-104-CES	Airspeed Indicator
EA-5172-106-CES	Airspeed Indicator
EA-5172-107-CES	Airspeed Indicator
EA-5172-108-CES	Airspeed Indicator
EA-5172-109-CES	Airspeed Indicator
EA-5172-11-BEC	Airspeed Indicator
EA-5172-13-BEC	Airspeed Indicator
EA-5172-1-AA	Airspeed Indicator
EA-5172-1-ALA	Airspeed Indicator
EA-5172-1-BEL	Airspeed Indicator
EA-5172-1-CES	Airspeed Indicator
EA-5172-1-MON	Airspeed Indicator
EA-5172-1-ROB	Airspeed Indicator
EA-5172-202-CES	Airspeed Indicator
EA-5172-2-AA	Airspeed Indicator
EA-5172-2-BEL	Airspeed Indicator
EA-5172-2-CES	Airspeed Indicator
EA-5172-2-MON	Airspeed Indicator
EA-5172-3-AA	Airspeed Indicator
EA-5172-3-CES	Airspeed Indicator
EA5172-45-CES	Airspeed Indicator
EA-5172-4-AA	Airspeed Indicator
EA-5172-4-BEL	Airspeed Indicator
EA-5172-4-CES	Airspeed Indicator
EA-5172-5-AA	Airspeed Indicator
EA-5172-5-CES	Airspeed Indicator
EA-5172-6-CES	Airspeed Indicator
EA-5172-7-CES	Airspeed Indicator
EA-5172-8-CES	Airspeed Indicator
EA-5173	Airspeed Indicator
EA-5173-0201-CES	Airspeed Indicator
EA-5173-0202-CES	Airspeed Indicator

EA-5173-0203-CES	Airspeed Indicator
EA-5173-0204-CES	Airspeed Indicator
EA-5173-0205-CES	Airspeed Indicator
EA-5173-0206-CES	Airspeed Indicator
EA-5173-0209-CES	Airspeed Indicator
EA-5173-0210-CES	Airspeed Indicator
EA-5173-0211-CES	Airspeed Indicator
EA-5173-0212-CES	Airspeed Indicator
EA-5173-0213-CES	Airspeed Indicator
EA-5173-0215-CES	Airspeed Indicator
EA-5173-1	Airspeed Indicator
EA-5173-101-ROB	Airspeed Indicator
EA-5173-11-ACM	Airspeed Indicator
EA-5173-16-ACM	Airspeed Indicator
EA-5173-19-ACM	Airspeed Indicator
EA-5173-19-BEC	Airspeed Indicator
EA-5173-20-ACM	Airspeed Indicator
EA-5173-21-ACM	Airspeed Indicator
EA-5173-22-ACM	Airspeed Indicator
EA-5173-23-ACM	Airspeed Indicator
EA-5173-24-ACM	Airspeed Indicator
EA-5173-25-ACM	Airspeed Indicator
EA-5173-26-ACM	Airspeed Indicator
EA-5173-27-ACM	Airspeed Indicator
EA-5173-28-ACM	Airspeed Indicator
EA-5173-29-ACM	Airspeed Indicator
EA-5173-32-ACM	Airspeed Indicator
EA-5173-49-BEC	Airspeed Indicator
EA-5173-51-BEC	Airspeed Indicator
EA-5173-63-BEC	Airspeed Indicator
EA-5173-6-ACM	Airspeed Indicator
EA-5173-9-ACM	Airspeed Indicator
EA-5174	Airspeed Indicator
EA-5174-1-ACM	Airspeed Indicator
EA-5175	Airspeed Indicator
EA5175-13	Airspeed Indicator
EA-5175-1-ACM	Airspeed Indicator
EA-5175-23PTL-CES	Airspeed Indicator
EA-5175-2-ACM	Airspeed Indicator
EA-5175-3-ACM	Airspeed Indicator
EA-5175-4-ACM	Airspeed Indicator
EA-5175-515T	Airspeed Indicator
EA5175-52-CES	True Airspeed Indicator
EA-5175-5-ACM	Airspeed Indicator
EA-5175-6-ACM	Airspeed Indicator
EA-5176	Airspeed Indicator
EA-5176-1-CES	Airspeed Indicator
EA-5176-6	Airspeed Indicator
EA-5176-7	Airspeed Indicator

EA-5176-8	Airspeed Indicator
EA-801A	Encoding Altimeter
EBC-406HM	E.L.T.
EHU-15/A	Temperature Indicator
EHU-15A/A	Temperature Indicator
EHU-9/A	Temperature Indicator
EKCC18043	Temperature Indicator
ELT96 A 25 60 000 000	Emergency Locator Transmitter
ELT97 A 20 60 000 000	Emergency Locator Transmitter
EMSE377-2	Power Supply
ERU-5/A	Tachometer Indicator
ERU-5A/A	Tachometer Indicator
ERU-6/A	Tachometer Indicator
ERU-6A/A	Tachometer Indicator
EVT422G	Electrical Fan
EVT605C00	Electrical Fan
F-1	Airspeed Indicator
F11504-4D	Airspeed Indicator
F1559710003	Tachometer Indicator
F-1A	Airspeed Indicator
FA 6268	Turbine Outlet Temperature Indicator
FA-6268	Turbine Outlet Temperature Indicator
FDU-3000	FLUX DETECTOR UNITS
FDU-70	FLUX DETECTOR UNITS
FDU-70A	FLUX DETECTOR UNITS
FG1006AA50	Fuel Probe
FG1006AA51	Fuel Probe
FG1006AA52	Fuel Probe
FG1006AA53	Fuel Probe
FG1006AA56	Fuel Probe
FG1006AA57	Fuel Probe
FG1006AA58	Fuel Probe
FG1006AA63	Fuel Probe
FG1007AA04	Fuel Probe
FM504	Airspeed Indicator
FM504-39	Airspeed Indicator
FM504-40	Airspeed Indicator
FM504-49	Airspeed Indicator
FM504-50	Airspeed Indicator
FM504-53	Airspeed Indicator
G 6250-5	Searchlight
G-10	Temperature Indicator
G3 001 02	MINIMUM-MAXIMUM ALARM FOR N ROTORS
G3 001 03	Rotor Rpm Warning
G-3001	Landing Light
G-3001-1	Landing Light
G3001A	Landing Light
G-3001A	Landing Light
G-3001A-1	Landing Light

G-3001B	Landing Light
G-3001B-1	Landing Light
G-3001B-2	Landing Light
G-3101	Landing Light
G-3101-1	Landing Light
G-3101A	Landing Light
G-3201	Landing Light
G-3201-1	Landing Light
G-3201A	Landing Light
G-3201A-1	Landing Light
G-3201B	Landing Light
G-3201B-1	Landing Light
G-371-01-1A	Altimeter
G371-01-1B	Altimeter
G-4000	Turn & Bank Indicator
G-4003	Turn & Bank Indicator
G-4433A	Control Adf
G-4434A	Vhf Communications Transceiver
G-502A	Directional Gyro
G-504A	Directional Gyro
G-519A-1	Gyro Horizon
G5400-1	Landing Light
G5400-15	Landing Light
G5400-16	Landing Light
G5400-17	Landing Light
G5400-18	Landing Light
G5400-2	Landing Light
G5400-3	Landing Light
G5400-4	Landing Light
G5400-5	Landing Light
G5400-6	Landing Light
G-5400-6	Landing Light
G-5400A-6	Landing Light
G-549B	Gyro Horizon
G-550A	Gyro Horizon
G-6200	Audio Controller
G-6200-02	Audio Controller
G-6200-03	Audio Controller
G-6200-04	Audio Controller
G-6200-05	Audio Controller
G-6200-06	Audio Controller
G-6200-07	Audio Controller
G-6200-12	Audio Controller
G-6200-13	Audio Controller
G-6200-15	Audio Controller
G6250-1	Searchlight
G-6250-1	Searchlight
G6250-2	Searchlight
G6250-3	Searchlight

G6250-4	Searchlight
G-6250-4	Searchlight
G6250-5	Searchlight
G-6250-5	Searchlight
G-6250-6	Searchlight
G8385-1	Searchlight
G-8385-1	Searchlight
G8385-13	Searchlight
G8385-3	Searchlight
G-8385-3	Searchlight
G8385-7	Searchlight
G-8385-7	Searchlight
G8385-9	Searchlight
G-8385-9	Searchlight
G8400A24C	Light Assy-Navigational Rotating Warning White
G8400A8-24S	Rotating Beacon
G991-01-10	Vertical Speed Indicator
G991-01-1C	Vertical Speed Indicator
G9950-1	Navigation Light
G9950-11	Navigation Light
G9950-13	Navigation Light
G9950-17	Navigation Light
G9950-19	Navigation Light
G9950-2	Navigation Light
G9950-21	Navigation Light
G9950-23	Navigation Light
G9950-25	Navigation Light
G9950-27	Navigation Light
G9950-5	Navigation Light
G9950-7	Navigation Light
G9950-9	Navigation Light
GA-4088	Altimeter
GC-1010-24-6AM	Generator Control Unit
GC-1010-24-6D	Voltage Regulator
GC10257-4	Printed Circuit Board
GC10257-5	Regulator Circuit Card
GC10257-6A	E.C.E. Card Assembly
GC10257-6B	E.C.E. Card Assembly
GC10257-7	E.C.E. Card Assembly
GC10257-8	Circuit Board, Generator
GC10257-9	E.C.E. Card Assembly
GC10257Y1	E.C.E. Card Assembly
GCSC502-4	Generator Control Unit
GCSG505-28-1	Dc Generator Control Unit
GENERATOR CONTROL UNIT	Generator Control Unit
GEU-7/A	Tach Generator
GEU7A	Tach Generator
GEU-7A	Tach Generator
GG2479AA01	Rate Gyro

GG2479AA03	Rate Gyro
GG2479AB01	Rate Gyro
GG2479AB03	Rate Gyro
GG2479AB04	Rate Gyro
Gg8385	Searchlight
GH-14	Gyro Horizon
GH14-191	Artificial Horizon
GH14-391	Artificial Horizon
GH-14A	Gyro Horizon
GH-14B	Gyro Horizon
GH-14C	Attitude Indicator
GH206	Gyro Horizon
GH-206	Gyro Horizon
GMU-28/A	Liquid Quantity Indicator
GTX 320	ATC TRANSPONDER
GTX 327	ATC TRANSPONDER
GTX 327 ATC	Transponder
GTX 330	GTX WITH ADS-B OUT FUNCTIONALITY
GTX 333	GTX WITH ADS-B OUT FUNCTIONALITY
GV76-1	Vertical Gyro
GV76-2	Vertical Gyro
H138JFM	Gyro Horizon
H140ABM2	Gyro Horizon
H140ACM2	Gyro Horizon
H140ADM2	Gyro Horizon
H140AMM	Gyro Horizon
H140ARM2	Gyro Horizon
H140ASM2	Gyro Horizon
H140ATM2	Gyro Horizon
H140AUM1	Gyro Horizon
H140AUM2	Gyro Horizon
H140BAM2	Gyro Horizon
H140BHM1	Gyro Horizon
H140BHM2	Gyro Horizon
H140BKM	Gyro Horizon
H140BLM	Gyro Horizon
H140CAM1	Gyro Horizon
H140CJM1	Gyro Horizon
H140CLM1	Gyro Horizon
H140CPM1	Gyro Horizon
H140CQM3	Gyro Horizon
H140CRM1	Gyro Horizon
H140CSM1	Gyro Horizon
H140CWM	Gyro Horizon
H140DCM	Gyro Horizon
H140JAM1	Gyro Horizon
H140JBM	Gyro Horizon
H140JBM1	Gyro Horizon
H140JDM1	Gyro Horizon

H140JMM1	Gyro Horizon
H140JKM1	Gyro Horizon
H140JLM	Gyro Horizon
H140JSM3	Gyro Horizon
H140JTM1	Gyro Horizon
H140JUM2	Gyro Horizon
H140JVM2	Gyro Horizon
H140JWM1	Gyro Horizon
H140JYM1	Gyro Horizon
H140KAM	Gyro Horizon
H140KBM	Gyro Horizon
H140KDM	Gyro Horizon
H140KRM	Gyro Horizon
H150AKM	Attitude Indicator
H150AKM1	Attitude Indicator
H188C	Pfcs Indicator
H1900K-8	Temperature Indicator
H1901-10	N1 Monitor/Indicator
H221AGM	Gyro Horizon
H221AHM	Gyro Horizon
H221ALM	Gyro Horizon
H221AMM	Gyro Horizon
H221ANM	Gyro Horizon
H221APM	Gyro Horizon
H221ARM	Gyro Horizon
H221AUM	Gyro Horizon
H221AVM	Gyro Horizon
H221AWM	Gyro Horizon
H221BDM	Gyro Horizon
H221BFM	Gyro Horizon
H221BLM	Gyro Horizon
H221BPM	Gyro Horizon
H221CGM	GYROSCOPE HORIZON
H221FAM	Gyro Horizon
H301ABM1	Gyro Horizon
H301AFM	Gyro Horizon
H301AGM1	Gyro Horizon
H301AJM1	Gyro Horizon
H301AKM1	Gyro Horizon
H301APM1	Gyro Horizon
H301ATM	Gyro Horizon
H301AZM1	Gyro Horizon
H301BAM	Gyro Horizon
H301BCM1	Gyro Horizon
H301BDM1	Gyro Horizon
H321AAM1	Gyro Horizon
H321ABM1	Gyro Horizon
H321ACM1	Gyro Horizon
H321AFM1	Gyro Horizon

H321AGM1	Gyro Horizon
H321AKM1	Gyro Horizon
H321ALM	Horizon Gyro
H321ALM1	Gyro Horizon
H321AMM1	Gyro Horizon
H321ANM1	Gyro Horizon
H321AQM1	Gyro Horizon
H321ASM1	Gyro Horizon
H321AYM1	Gyro Horizon
H321AZM1	Gyro Horizon
H321BAM1	Gyro Horizon
H321BBM	Gyro Horizon
H321BDM1	Gyro Horizon
H321BDM2	Gyro Horizon
H321BEM2	Gyro Horizon
H321BFM2	Gyro Horizon
H321BGM1	Gyro Horizon
H321BHM1	Gyro Horizon
H321BKM	Gyro Horizon
H321BNM	Gyro Horizon
H321BTM	Gyro Horizon
H321BVM1	Gyro Horizon
H321BWM	Gyro Horizon
H321CBM	Gyro Horizon
H321CCM	Gyro Horizon
H321CEM	Gyro Horizon
H321CJM	Gyro Horizon
H321CMM	Gyro Horizon
H321CZM	Gyro Horizon
H321DAM	Gyro Horizon
H321DBM	Gyro Horizon
H321EEM	Gyro Horizon
H321EFM	Gyro Horizon
H321EGM	Gyro Horizon
H321EHM	Gyro Horizon
H321ENM	Gyro Horizon
H321EPM	Gyro Horizon
H321FBM	Gyro Horizon
H321FCM	Gyro Horizon
H321FDM	Gyro Horizon
H341ADM1	Gyro Horizon
H341ADM2	Gyroscopic Horizon
H341ALM	Gyro Horizon
H341AMM1	Gyroscopic Horizon
H341AYM	Gyro Horizon
H341TAM	Gyro Horizon
H900K-2007	Temperature Indicator
H900K-2007A	Temperature Indicator
H900K-2077	Autotemp Indicator

HM547	Altimeter
HM565	Altimeter
HS-100	Static Inverter
HSI-70	H.S.I.
HSI-84	H.S.I.
IA9220	Dual Torque Indicator
IA9223	Dual Torque Indicator
IA9223A	Dual Torque Indicator
IB1000-1GJ-2044	Static Inverter
ID1347C/ARN-82	Course Indicator
ID-1791/A	Attitude Indicator
ID-1791A/A	Attitude Indicator
ID-2103/A	Horizontal Situation Indicator
ID-2104/A	Attitude Indicator
ID-2104A/A	Attitude Indicator
ID-250	Radio Magnetic Indicator
ID-250/ARN	Radio Magnetic Indicator
ID250A/ARN	Course Indicator
ID-250A/ARN	Radio Magnetic Indicator
ID-998/ASN	Rmi
IDA0302061	Torque Indicator
IDA0302130	Torque Indicator
IDA0302220	Torque Indicator
IDA0302361	Torque Indicator
IDA0302362	Torque Indicator
IDA0302400	Torque Indicator
IDA0302401	Torque Indicator
IDA0302470	Torque Indicator
IDM2202480	Delta Ng Indicator
IDM2202481	Delta Ng Indicator
IDM2202482	Delta Ng Indicator
IE5711	Temperature Indicator
IE5712	Temperature Indicator
IE5715	Temperature Indicator
IFR5-12-8	Indicator
IG-832A	Navigation Situation Display
IN602	Indicator
IND 351	Navigation Indicator
IND 451	Dme Indicator
IND 650	Adf Indicator
IND-31C	H.S.I.
IND-351	Navigation Indicator
IND-41	Dme Indicator
IND-41B	Dme Indicator
IND-42A	Dme Indicator
IND-42C	Dme Indicator
IND-451	Dme Indicator
IND-650	Adf Indicator
IND-A5-UH1	A.D.I.

IND-A5-UH-1	A.D.I.
INDICATOR	Synchro Indicator
IP-1150	RADAR SIGNAL DETECTING SET
IPT-19-1000-2000A	Pressure Transducer
IPT-20-1000-150G	Pressure Transmitter
IPT-20-1000-80G	Pressure Transmitter
IPT-20R1-1000-150G	Pressure Transmitter
IPT-20RT1-1000-100G	Pressure Transmitter
IPT-20RT1-1000-150G	Pressure Transducer
IPT-20RT1-1000-250G	Pressure Transmitter
IPT-20RT1-1000-30G	Pressure Transmitter
IPT-20RT1-1000-80G	Pressure Transmitter
IPT-20RT1K-1000-80G	Pressure Transducer
IPT-20RTI-1000-100G	Pressure Transmitter
IPT-24RT1-1000-190G	Pressure Transmitter
IPT-38-1000-80D	Pressure Transmitter
IPT-49-1000-4000A	Pressure Transmitter
IPT-51DFP-1000-70D	Pressure Transducer
IPT-70RT1-1000-250G	Pressure Transducer
IPT-70RT1-1000-25G	Pressure Transducer
ISA0301367	Torque Indicator
IU262-001-10	Directional Gyro
IU262-001-13	Directional Gyro
IU305	Instrument Cluster
IU367	Attitude Director Indicator
IU569-001	Cluster Indicator
IV150N	Vertical Speed Indicator
J8000-01	Directional Gyro
J8000-02	Directional Gyro
J8000-03	Directional Gyro
J8000-04	Directional Gyro
J8000-05	Directional Gyro
J8000-06	Directional Gyro
J8000-07	Directional Gyro
J8000-08	Directional Gyro
J8000-09	Directional Gyro
J8000-10	Directional Gyro
J8000-11	Directional Gyro
JB153.07	Clock
JE2-NG	Emergency Locator Transmitter
JG402A2	Fuel Quantity Indicator
JG402A3	Fuel Quantity Indicator
JG402-A3	Fuel Quantity Indicator
JG402A32	Fuel Quantity Indicator
JG402A4	Fuel Quantity Indicator
JG402A52	Fuel Quantity Indicator
JG402A53	Fuel Quantity Indicator
JG402A55	Fuel Quantity Indicator
JG412A1	Fuel Quantity Indicator

JG412A10	Fuel Quantity Indicator
JG412A11	Fuel Quantity Indicator
JG412A2	Fuel Quantity Indicator
JG412A3	Fuel Quantity Indicator
JG412A4	Fuel Quantity Indicator
JG412A52	Fuel Quantity Indicator
JG412A53	Fuel Quantity Indicator
JG412A54	Fuel Quantity Indicator
JG412A55	Fuel Quantity Indicator
JG412A56	Fuel Quantity Indicator
K1010	Temperature Indicator
K5400-01	Gyro Horizon
K5400-02	Horizon Gyro
K5400-03	Gyro Horizon
K5400-04	Gyro Horizon
K5400-05	Gyro Horizon
K5400-06	Gyro Horizon
KA 35	Marker Beacon
KA 39	Power Supply
KA 51A	Slaving Accessory
KA 51B	Slaving Accessory
KA25	Isolation Amplifier
KA35A	Marker Light
KA39	Voltage Converter
KA40	Remote Light Adapter
KA51A	Slaving Accessory
KA51B	Slaving Accessory
KAA18031U/0/1	Altimeter
KAA1803K	Altimeter
KAA1803LU/0/1	Altimeter
KAA1803LU0-3	Altimeter
KAA1803PM0	Altimeter
KAA1803PMFO	Altimeter
KAA1803R	Altimeter
KANNAD 121 AF	Emergency Locator Transmitter
KANNAD 406 AF	Emergency Locator Transmitter
KANNAD 406 AF-H	Emergency Locator Transmitter
KANNAD 406 AP	Emergency Locator Transmitter
KANNAD 406 AS	Emergency Locator Transmitter
KAS297A	Altitude Selector/Alerter
KC1276	Power Supply
KCA 01012C	Standby Compass
KCA 0101C	Standby Compass
KCA 0101W	Standby Compass
KCA 0102C	Standby Compass
KCA 0102W	Standby Compass
KCA 0104W	Standby Compass
KCA 0106W	Standby Compass
KCA01012C	Standby Compass

KCA0101C	Compass
KCA0101W	Compass
KCA0102C	Compass
KCA0102W	Compass
KCA0104FY	Standby Compass
KCA0104W	Compass
KCA0105W	Compass
KCA-0105W	Standby Compass
KCA0106W	Standby Compass
KCA0107W	Standby Compass
KCA0109W	Standby Compass
KCA0110W	Standby Compass
KCA0112W	Standby Compass
KCA0113FY	Standby Compass
KCA0113W	Standby Compass
KCA0114W	Standby Compass
KCS55A	Artificial Horizon
KCU 951	CONTROL UNIT
KDA 697	Rmi Adapter
KDA697	Rmi Converter
KDF 805	ADF RECEIVER
KDF 806	Adf Receiver
KDF806	Adf Receiver
KDI 572	Dme Indicator
KDI 573	Dme Slave Indicator
KDI 574	Dme Indicator
KDI571	Dme Indicator
KDI572	Dme Indicator
KDI573	Dme Indicator
KDI574	Dme Indicator
KDM 706	Dme Indicator
KDM 706A	Dme Indicator
KDM705A	Dme Indicator
KDM706	Dme Indicator
KDM706A	Dme Indicator
K-DW-02	Rpm Warning Box
K-DW-02/1	Rpm Warning Box
K-DW-02/1A	Rpm Warning Control Unit
KDW02-1A	Rpm Warning Box
KE-127	Altimeter
KEA 346	Encoding Altimeter
KEA129	Encoding Altimeter
KEA130A	Encoding Altimeter
KEA346	Encoding Altimeter
KFS 560B	Navigation Control
KFS 564	Navigation Control
KFS 564A	Comm Control Unit
KFS 570B	Atc Transponder Control
KFS 576	Digital Control

KFS 576A	Digital Control
KFS 586	Adf Control
KFS 586	Adf Control
KFS 586A	Adf Control
KFS 598	Comm Control Unit
KFS 598A	Comm Control Unit
KFS560B	Navigation Control
KFS564	Navigation Control
KFS564A	Navigation Control
KFS570B	Transponder Control
KFS576	Atc Transponder
KFS576A	Atc Transponder
KFS-580	Adf Control
KFS580B	Adf Control
KFS586	Adf Control
KFS586A	Adf Control
KFS598	Vhf Communications Transceiver
KFS-598	Vhf Communications Transceiver
KFS598A	Vhf Communications Control
KFS599A	Uhfcommunication Control
KG 102A	Directional Gyro
KG 107	Directional Gyro
KG 253	Gyro Horizon
KG 258-5	Attitude Gyro
KG102A	Directional Gyro
KG258	Gyro Horizon
KI 202	Vor/Loc Indicator
KI 203	Vor/Loc Indicator
KI 204	Vor/Loc Glideslope Indicator
KI 205	Vor/Loc Glideslope Indicator
KI 206	Vor/Loc Glideslope Indicator
KI 207	Navigation Indicator
KI 208	Vor/Loc Converter/Indicator
KI 209	Indicator
KI 227	Adf Indicator
KI 229	Rmi
KI 250	Radar Altimeter
KI 254	Attitude Gyro
KI202	Navigation Indicator
KI203	Navigation Indicator
KI204	Navigation Indicator
KI-204	Navigation Indicator
KI206	Navigation Indicator
KI207	Navigation Indicator
KI208	Vor/Loc Indicator
KI209	Vor/Loc Indicator
KI227	Adf Indicator
KI-227	Adf Indicator
KI228	Adf Indicator

KI229	Rmi
KI250	Radar Altimeter
KI254	Gyro Horizon
KI256	Gyro Horizon
KI525	Horizontal Situation Indicator
KI525A	Horizontal Situation Indicator
KM 455-3	Oil Temperature & Pressure Indicator
KM432-3	Oil Temperature & Pressure Indicator
KMA 24	Audio Panel/Marker Receiver
KMA 24H	Audio Controller
KMA20	Marker Beacon Receiver
KMA24	Isolation Amplifier
KMA24 H70	Isolation Amplifier
KMA24H	Isolation Amplifier
KMR 675	Marker Beacon
KMR675	Marker Beacon Receiver
KMT 112	Slaving Control
KMT112	Flux Valve
KN 53	Navigation Receiver
KN 62A	Dme Transceiver
KN 72	Vor Converter
KN 75	VOR/LOC CONVERTER & GLIDSCOPE RECEIVER
KN53	Navigation Receiver
KN62A	Dme Indicator
KN63	Dme Indicator
KN64	Dme Indicator
KNI416	Radar Altimeter
KNI573	Dme Slave Indicator
KNI-581	R.M.I.
KNI582	Rmi
KNR630	Vor Receiver
KNR634	Navigation Receiver
KNR634A	Navigation Receiver
KNS81	Navigation Receiver
KPI552	H.S.I.
KPI552B	Horizontal Situation Indicator
KPI553	H.S.I.
KPI553A	H.S.I.
KR 21	Marker Receiver
KR 22	Marker System
KR 87	Adf Control
KR10	Radar Altimeter
KR10A	Radar Altimeter
KR21	Marker Beacon Receiver
KR22	Marker Beacon Receiver
KR87	Adf Receiver
KR-87	Adf Receiver
KRA10	Radar Altimeter
KRA10A	Radar Altimeter

KRG333	3 Axis Sensor
KSG105	Directional Gyro
KT70	Transponder
KT76	Transponder
KT76A	Transponder
KT76C	Transponder
KT78	Transponder
KT78A	Transponder
KT79	Transponder
KTD0701K	Tachometer Indicator
KTR905	Vhf Communications Transceiver
KTR908	Vhf Communications Transceiver
KTR909	Transceiver
KTS 158	TEST SET
KTS153	Pictorial Naviation System
KTS155	Dme Indicator
KTS-598	Vhf Communications Transceiver
KTS-598A	Vhf Communications Transceiver
KVG350	Vertical Gyro
KX155	Vhf Transceiver /Navigation Receiver
KX155A	Transceiver
KX165	Transceiver
KX165A	Transceiver
KX175B	Rmi
KXP755	Transponder
KXP756	Transponder
KY195B	Vhf Communications Transceiver
KY196	Vhf Communications Transceiver
KY196A	Vhf Communications Transceiver
KY196B	Vhf Communications Transceiver
KY197	Vhf Communications Transceiver
KY197A	Vhf Communications Transceiver
KY197E	Vhf Communications Transceiver
KY96A	Vhf Communications Transceiver
KY97A	Vhf Communications Transceiver
L281M2008101	Fuel Probe
L293M00C1001	Pressure Switch
L316M20C1001	Oil Temperature & Pressure Indicator
L334M3820101	Landing Light
L334M3820101.A003	Landing Light
L341M30C1001	Vertical Speed Indicator
L771M40C1004	Triple Tachometer Indicator
L771M40C1005	Triple Tachometer Indicator
L771M40C1010	Triple Tachometer Indicator
L771M40C1014	Triple Tachometer Indicator
L7815CT	Voltage Regulator
LA11A2104	Linear Actuator
LA11A2118	Linear Actuator
LA11A2119-1	Actuator

LA11A2121	Actuator
LA11A2121-1	Actuator
LA11A2129	Passenger Step Actuator
LA11A2129-1	Passenger Step Actuator
LA-71-11	Altimeter
LC-2	Clock
LC-2E	Clock
LD12-001	Light Dimmer
LE-50-IL	Altimeter
LE-50-ILB	Altimeter
LLLC-12047	Tachometer Indicator
LM117K	Voltage Regulator
LT-370	Light Dimmer Power Supply
LT-48	Light Dimmer Power Supply
LT-48(A)	Light Dimmer Power Supply
LT-48(B)	Light Dimmer Power Supply
LT-48(C)	Light Dimmer Power Supply
LT-48(D)	Light Dimmer Power Supply
LT-48(E)	Light Dimmer Power Supply
LT-48(G)	Light Dimmer Power Supply
LT-48(H)	Light Dimmer Power Supply
LT-48(N)	Light Dimmer Power Supply
LT-48A	Power Supply (Dimmer)
LT-48B	Light Dimmer Power Supply
LT-50	Light Dimmer Power Supply
LT-53	Light Dimmer Power Supply
LT-71	Dc To Dc Converter
M/C438532323-00	Handgrip
M1986	Hourmeter
M-1A	Airspeed Indicator
M3075-05	Turn & Slip Indicator
M3075-07	Turn & Slip Indicator
M3075-1	Turn & Slip Indicator
M3075-2	Turn & Slip Indicator
M3075-3	Turn & Slip Indicator
M3075-4	Turn & Slip Indicator
M3075-5	Turn & Slip Indicator
M3075-6	Turn & Slip Indicator
M3075-7	Turn & Slip Indicator
M-3075-7	Turn & Slip Indicator
M3075-8	Turn & Slip Indicator
M3075-9	Turn & Slip Indicator
M3500-5	Turn & Slip Indicator
M3520-2	Turn & Slip Indicator
M3540-01	Turn & Slip Indicator
M3540-04	Turn & Slip Indicator
M3540-05	Turn & Slip Indicator
M3540-06	Turn & Slip Indicator
M3540-1	Turn & Slip Indicator

M3540-4	Turn & Slip Indicator
M3562-01	Turn & Slip Indicator
M3637-05	Turn & Slip Indicator
M450	Dc Voltmeter
M5000-08	Turn & Bank Indicator
M5000-10	Turn & Bank Indicator
M5000-8	Turn & Bank Indicator
M5600-01	Turn Rate Indicator
M5600-02	Turn Rate Indicator
M5930-02	Turn & Bank Indicator
M7921T-1A	Fan Motor
M800	Clock
M800-5-BATT	Clock
M803-2-0/5V-BATT	Clock/Oat/Volt Indicator
M803B-2-0/5V-BATT	Clock
M811B	Clock
M811B-24	Clock
M877	Clock
M880A	Clock
MB-1A	Altimeter
MB801-28	Clock
MBT 251B	Power Supply
MC1723L	Voltage Regulator
MD-1	Vertical Gyro
MD-109-1	DC Load Indicator
MD-111-3	Gyro Suction Gage
MD-114-3	Pneumatic Pressure Indicator
MD-114-5	Pneumatic Pressure Indicator
MD124-1	Cabin Temperature Indicator
MD-124-1	Cabin Temperature Indicator
MD132-3	Vacuum Gage
MD41-1404	Annunciation Control Unit
MD41-1404A	Annunciation Control Unit
MD41-1408A	Gps Annunciation Unit
MD41-1414A	Annunciation Control Unit
MD41-1418A	Annunciation Control Unit
MD41-1464A	Annunciation Control Unit
MD41-1468A	Gps Annunciation Control Unit
MD41-1474A	Annunciation Control Unit
MD41-1478A	Annunciation Control Unit
MD41-324	Annunciation Control Unit
MD41-328	Annunciation Control Unit
MD41-328(5V)	Annunciation Control Unit
MD41-334	Annunciation Control Unit
MD41-338	Annunciation Control Unit
MD41-338(5V)	Annunciation Control Unit
MD41-444	Annunciation Control Unit
MD41-448	Annunciation Control Unit
MD41-448(5V)	Annunciation Control Unit

MD41-454	Annunciation Control Unit
MD41-458	Annunciation Control Unit
MD41-458(5V)	Annunciation Control Unit
MD41-524	Annunciation Control Unit
MD41-528	Annunciation Control Unit
MD41-534	Annunciation Control Unit
MD41-538	Annunciation Control Unit
MD41-624	Gps Annunciation Control Unit
MD41-628	Annunciator
MD41-634	Gps Annunciation Control Unit
MD41-638	Gps Annunciation Control Unit
MD-69-1	DC Voltmeter
MD-736/A	DISCRETE SIGNAL DISCRIMIATOR
MD81-2	Oil Temp/Pressure Indicator
MD81-3	Oil Temp/Pressure Indicator
MD82-3	Torque Indicator
MEM140-01	HYPERSUST TEST BOX (BOX TEST HIGH LIFT DEVICES)
MIL-A-6752A	Voltmeter
MIL-A-81851	Altimeter
MILA81852	Altimeter
MIL-I-25623	Tachometer Indicator
MJ-1	HYDRAULIC PRESSURE TRANSMITTER
MM-0C19A	Temperature Indicator
MM-0C19D	Temperature Indicator
MM-0C19E	Temperature Indicator
MM-3A	REMOTE ATTITUDE INDICATOR
MML-0C19AR	Temperature Indicator
MML-0C19AS	Temperature Indicator
MML-0C19AT	Temperature Indicator
MML-0C19AR	Temperature Indicator
MML-0C19AS	Temperature Indicator
MML-0C19AT	Temperature Indicator
MML-0C19AU	Temperature Indicator
MM-0C19A	Temperature Indicator
MM-0C19D	Temperature Indicator
MM-0C19E	Temperature Indicator
MP-498	Magnetic Brake
MP498-103	Magnetic Brake
MP498-3	Magnetic Brake
MP-498-3	Magnetic Brake
MS17313-1	Attitude Indicator
MS17983-1	Compass
MS17983-2	Compass
MS17983-4	Compass
MS18071-12	Voltage Regulator
MS18071-2	Voltage Regulator
MS21971-1	Tachometer Indicator
MS21983-1	Inverter
MS24332-1	Voltmeter

MS24569-1	Temperature Indicator
MS25025-1	Loadmeter
MS25277-1	Beacon Assembly
MS25454-3	Vertical Speed Indicator
MS28000-1	Tachometer Indicator
MS28004-1	Temperature Indicator
MS28004-2	Temperature Indicator
MS28004-3	Temperature Indicator
MS28004-4	Temperature Indicator
MS28005-1	Pressure Transmitter
MS28005-2	HYDRAULIC PRESSURE TRANSMITTER
MS28005-3	Pressure Transmitter
MS28005-4	Pressure Transmitter
MS28005-5	Pressure Transmitter
MS28005-6	HYDRAULIC PRESSURE TRANSMITTER
MS28005-7	HYDRAULIC PRESSURE TRANSMITTER
MS28005-8	HYDRAULIC PRESSURE TRANSMITTER
MS28008-1	Outside Air Temperature Indicator
MS28009-1	Temperature Indicator
MS28009-2	Temperature Indicator
MS28009-4	Temperature Indicator
MS28010-1	Pressure Indicator
MS28010-3	Pressure Indicator
MS28010-5	Pressure Indicator
MS-28021	Airspeed Indicator
MS28021-4	Airspeed Indicator
MS28023-1	Position Indicator
MS28024-3	Turn & Slip Indicator
MS28024-3A	Turn & Slip Indicator
MS28027-2	Rmi
MS28034-1	Temperature Indicator
MS-28041	Airspeed Indicator
MS28041-1A	Turn & Slip Indicator
MS28041-1B	Turn & Slip Indicator
MS28044-1	Altimeter
MS28044-L1	Altimeter
MS28044-L1A	Altimeter
MS28045T1	Airspeed Indicator
MS28045-T1	Airspeed Indicator
MS28045-T2	Airspeed Indicator
MS28054-2	Tach Generator
MS33629	Tachometer Indicator
MS33639	Percent Tachometer Indicator
MS-702	Flight Director Mode Selector
MU-1	Tachometer Indicator
MV524D-2	Valve
MV524D-3	Valve
N301-503	Ics Box
N301A-000	Single User Controller

N301A-032	Audio Controller
N301A-1	Audio Controller
N301A-2	Audio Controller
N301A-3	Audio Controller
N301A-4	Audio Controller
N301A-5	Audio Controller
N301A-500	Single User Controller
N30A5B	Underwater Acoustic Beacon
N335-001	Dual Audio Control
NE149AB4	Tachometer Indicator
NPX136D	Fm Transceiver
NPX138N	Fm Transceiver
NSD-360A	Navigation Situation Display
NSOA036-1	Mach Airspeed Indicator
NT150-000WR	Vhf Fm Communications Transceiver
NT450	Transceiver
NT-450-000W/R	Transceiver
NTX138-050	Vhf Fm Communications Transceiver
OMP3965-101	NOSE LANDING GEAR
OMP3965-11	NOSE LANDING GEAR
OMP3965-15	NOSE LANDING GEAR
OMP3965-17	NOSE LANDING GEAR
OMP3966-101	MAIN LANDING GEAR
OMP3966-102	MAIN LANDING GEAR
OMP3966-13	MAIN LANDING GEAR
OMP3966-14	MAIN LANDING GEAR
OMP3966-15	MAIN LANDING GEAR
OMP3966-16	MAIN LANDING GEAR
OMP3966-17	MAIN LANDING GEAR
OMP3966-18	MAIN LANDING GEAR
OMP3969-2	DOWNLOCK ACTUATOR
OMP3970-101	NOSE LANDING GEAR
OMP3970-2	NOSE LANDING GEAR
OPT-20RT1-1000-150G	Pressure Transmitter
P166395	Motor Driven Valve
P2-07-0001-100	Flashlight
P2-07-0001-101	Flashlight
P2-07-0001-201	Flashlight
P2-07-0001-205	Flashlight
P2-07-0001-207	Flashlight
P2-07-0001-211	Flashlight
P2-07-0001-214	Flashlight
P2-07-0001-215	Flashlight
P2-07-0001-400	Flashlight
P2-07-0009-120	Flashlight
P2-07-0009-520	Flashlight
PA 110	Pa Amp
PA110-010	Amplifier Pa
PA110-015	Loudhailer Power Amplifier

PC125-3A	Static Inverter
PC-125-3A	Static Inverter
PC-12VR	Dc To Dc Converter
PC-15	Static Inverter
PC-15A	Static Inverter
PC-15B	Static Inverter
PC-15BC	Static Inverter
PC15BC(A)	Static Inverter
PC-15C	Static Inverter
PC-15D	Static Inverter
PC-15E	Static Inverter
PC-15F	Static Inverter
PC-15G	Static Inverter
PC-251	Static Inverter
PC251123A	Static Inverter
PC-251-123A	Static Inverter
PC-251-123B	Static Inverter
PC251-123C	Static Inverter
PC-251-123C	Static Inverter
PC-251-123D	Static Inverter
PC-251-123E	Static Inverter
PC-251-15A	Static Inverter
PC-251-15B	Static Inverter
PC-251-15C	Static Inverter
PC-251-1C	Static Inverter
PC-251-1D	Static Inverter
PC-251-3A	Static Inverter
PC-251-3B	Static Inverter
PC-251-5A	Static Inverter
PC-251-5B	Static Inverter
PC-251-5C	Static Inverter
PC350	Static Inverter
PC450-1A	Static Inverter
PC-450-1A	Static Inverter
PC-450-1B	Static Inverter
PC-50	Static Inverter
PC900-1A0600PH-1*1	Fuel Flow Indicator
PC900-1A0800PH1-1	Fuel Flow Indicator
PC900-1A0800PH1-2	Fuel Flow Indicator
PC900-6A0600PH-8-2	Fuel Flow Indicator
PC900-ECAP-0001	Fuel Flow Indicator
PF228-N1	Fuel Quantity Indicator
PF228-N2	Fuel Quantity Indicator
PF240-N3	Fuel Quantity Indicator
PF240-N4	Fuel Quantity Indicator
PF25-N32	Liquid Quantity Indicator
PF25-N33	Liquid Quantity Indicator
PF25-N34	Liquid Quantity Indicator
PF25-N35	Liquid Quantity Indicator

PF25-N36	Liquid Quantity Indicator
PF25-N37	Liquid Quantity Indicator
PF25-N38	Liquid Quantity Indicator
PF25-N39	Liquid Quantity Indicator
PF25-N40	Liquid Quantity Indicator
PF25-N41	Liquid Quantity Indicator
PF28-N1	Liquid Quantity Indicator
PF28-N3	Liquid Quantity Indicator
PF28-N4	Liquid Quantity Indicator
PF28-N5	Liquid Quantity Indicator
PF28-N6	Liquid Quantity Indicator
PF28-N7	Liquid Quantity Indicator
PF28-N8	Liquid Quantity Indicator
PF28-N9	Liquid Quantity Indicator
PF530-N3	Fuel Quantity Transmitter
PF537-N1	Fuel Quantity Transmitter
PF537-N2	Fuel Quantity Transmitter
PF537-N3	Fuel Quantity Transmitter
PH-130	Emergency Fire Control Switch
PM 22880-1	Handgrip
PM21110-1	Handgrip
PM21225-6A	Handgrip
PM21225-6F	Handgrip
PM21225-9	Handgrip
PM21239-11	Handgrip
PM21239-19	Handgrip
PM21319-1	Handgrip
PM21329-11	Handgrip
PM21329-13	Handgrip
PM21329-17	Handgrip
PM21329-19	Handgrip
PM21331-2	Handgrip
PM213329-13	Handgrip
PM21486	Handgrip
PM21487	Handgrip
PM21515-3	Handgrip
PM21515-4	Handgrip
PM21657-13	Handgrip
PM21657-14	Handgrip
PM21657-15	Handgrip
PM21657-16	Handgrip
PM21657-3	Handgrip
PM21657-4	Handgrip
PM21657-5	Handgrip
PM21657-6	Handgrip
PM21657-7	Handgrip
PM21657-8	Handgrip
PM21662-1	Handgrip
PM21663-2	Handgrip

PM21675-1	Handgrip
PM21681-1	Handgrip
PM21718-1	Handgrip
PM21718-11	Handgrip
PM21718-12	Handgrip
PM21718-13	Handgrip
PM21718-2	Handgrip
PM21718-4	Handgrip
PM21718-5	Handgrip
PM21718-7	Handgrip
PM21840	Handgrip
PM21885-4	Handgrip
PM21885-5	Handgrip
PM21908	Handgrip
PM21913	Handgrip
PM21913-1	Handgrip
PM21913-2	Handgrip
PM21913-3	Handgrip
PM21914	Handgrip
PM21914-1	Handgrip
PM21914-2	Handgrip
PM21914-3	Handgrip
PM21914-4	Handgrip
PM21915	Handgrip
PM2220	Handgrip
PM22220	Handgrip
PM22220-1	Handgrip
PM22220-5	Handgrip
PM22220-6	Handgrip
PM22220-7	Handgrip
PM22225-2	Handgrip
PM22228	Handgrip
PM22228-1	Handgrip
PM22259-2	Handgrip
PM22319	Handgrip
PM22362	Handgrip
PM22362-1	Handgrip
PM22404	Handgrip
PM22427	Handgrip
PM22427-1	Handgrip
PM22477	Handgrip
PM22478-11	Handgrip
PM22514-3	Handgrip
PM22515-3	Handgrip
PM22515-4	Handgrip
PM22554	Handgrip
PM22604-2	Handgrip
PM22608	Handgrip
PM22608-1	Handgrip

PM22609	Handgrip
PM22659-2	Handgrip
PM22700	Handgrip
PM22700-1	Handgrip
PM22720-1	Handgrip
PM22723-1	Handgrip
PM22724-4	Handgrip
PM22724-5	Handgrip
PM22740	Handgrip
PM22755	Handgrip
PM22760-2	Handgrip
PM22760-3	Handgrip
PM22762	Handgrip
PM22780-1	Handgrip
PM22783-1	Handgrip
PM22785	Handgrip
PM22815-1	Handgrip
PM22830	Handgrip
PM22880	Handgrip
PM22880-1	Handgrip
PM22885	Handgrip
PM22921	Handgrip
PM22921-1	Handgrip
PM22921-2	Handgrip
PM22981	Handgrip
PM22983-1	Handgrip
PM23125	Handgrip
PM23210	Handgrip
PM23223-1	Handgrip
PM23225-1	Handgrip
PM23225-2	Handgrip
PM23230-1	Handgrip
PM23233-1	Handgrip
PR530-N4	Fuel Probe
PS 347	Power Supply
PS240	Inverter
PS-240	Inverter
PS277-3	Inverter
PS285	Inverter
PS304	Static Inverter
PS304-1	Static Inverter
PS347	Power Supply
PS-835	Emergency Power Supply
PS-835C	Power Supply
PS-855	Emergency Power Supply
PS-855B	Emergency Power Supply
PTA12-100	Telephone Adapter
PU-543/A	MOTOR GENERATORS
PU-543A/A	MOTOR GENERATORS

PU-543B/A	MOTOR GENERATORS
PU-543C/A	MOTOR GENERATORS
PU-543D/A	MOTOR GENERATORS
PW727MV/BU/44/700	Temperature Indicator
R-1838	RADAR SIGNAL DETECTING SET
R30-VIL-3	Vertical Speed Indicator
R460M10	Magnetic Brake
R460M15	Magnetic Brake
R460M15-11	Magnetic Brake
R460M15-3	Magnetic Brake
R460M39-3	Magnetic Brake
R460M39-4	Magnetic Brake
R460M43	Magnetic Brake
RA-215	Radar Altimeter Indicator
RA235	Altimeter
RA-315	Radar Altimeter Indicator
RAA82-R004	Auxiliary Alarm Control
RC30V	Vertical Speed Indicator
RC-30-V	Vertical Speed Indicator
RC30V10	Vertical Speed Indicator
RC-30-V-10	Vertical Speed Indicator
RC30VIL	Vertical Speed Indicator
RC-30-VIL	Vertical Speed Indicator
RC30VIL2	Vertical Speed Indicator
RC30VIL-2	Vertical Speed Indicator
RC-30-VIL-2	Vertical Speed Indicator
RC30VIL4	Vertical Speed Indicator
RC-30-VIL-4	Vertical Speed Indicator
RC-500	Control Head
RC-550	Control Head
RC-60	Vertical Speed Indicator
RC-60 VIL	Vertical Speed Indicator
RC-6000	Remote Control Head
RC60MS	Vertical Speed Indicator
RC60VIL1	Vertical Speed Indicator
RC60VIL3	Vertical Speed Indicator
RC-7000	Remote Control Head
RC-7300	Remote Control Head
RC-9000	Remote Control Head
RC-9100	Remote Control Head
RCA 11/A-8F	Directional Gyro
RCA 11A-15	Directional Gyro
RCA 11A-16B	Directional Gyro
RCA 11A-17B	Directional Gyro
RCA 11A-8	Directional Gyro
RCA 15AK-1	Directional Gyro
RCA 15AK-2	Directional Gyro
RCA 15BK-1	Directional Gyro
RCA 15BK-2	Directional Gyro

RCA 26BK-8	Gyro Horizon
RCA 40A-()	Tachometer Indicator
RCA 40AB-()	Tachometer Indicator
RCA 41A-()	Tachometer Indicator
RCA 41A-07	Tachometer Indicator
RCA 41A-09	Tachometer Indicator
RCA 56	Turn & Bank Indicator
RCA 56-3B	Turn & Bank Indicator
RCA 82A-11	Turn Coordinator
RCA 83A-11	Turn Coordinator
RCA11-4	Directional Gyro
RCA11A-1	Directional Gyro
RCA11A-10	Directional Gyro
RCA11A-11	Directional Gyro
RCA11A-12	Directional Gyro
RCA11A-13	Directional Gyro
RCA11A-14	Directional Gyro
RCA11A-15	Directional Gyro
RCA11A-16	Directional Gyro
RCA11A-2	Directional Gyro
RCA11A-3	Directional Gyro
RCA11A-8	Directional Gyro
RCA11A-9	Directional Gyro
RCA12	Turn & Bank Indicator
RCA12F65	Turn & Bank Indicator
RCA12P1	Turn & Bank Indicator
RCA12P61	Turn & Bank Indicator
RCA12P64	Turn & Bank Indicator
RCA12R22M	Turn & Bank Indicator
RCA12R65	Turn & Bank Indicator
RCA12W2	Turn & Bank Indicator
RCA15A-1	Directional Gyro
RCA15AK-1	Directional Gyro
RCA15AK-16	Directional Gyro
RCA15AK-17	Directional Gyro
RCA15AK-2	Directional Gyro
RCA15B-1	Directional Gyro
RCA15B-2	Directional Gyro
RCA15BK-1	Directional Gyro
RCA15BK-16	Directional Gyro
RCA15BK-17	Directional Gyro
RCA15BK2	Directional Gyro
RCA15BK-2	Directional Gyro
RCA15BK-4	Directional Gyro
RCA15BK-7	Directional Gyro
RCA15C-1	Directional Gyro
RCA15C-3	Directional Gyro
RCA15C-4	Directional Gyro
RCA15CM-1	Directional Gyro

RCA15CM-2	Directional Gyro
RCA18P61	Turn & Bank Indicator
RCA2	Turn & Bank Indicator
RCA22-13	Gyro Horizon
RCA22-33	Gyro Horizon
RCA25A-5	Attitude Gyro
RCA25A-6	Attitude Indicator
RCA25B-2	Attitude Indicator
RCA25B-6	Attitude Indicator
RCA25B-8	Attitude Indicator
RCA25B-9	Attitude Indicator
RCA25C2	Attitude Gyro
RCA25C-2	Attitude Gyro
RCA26AK-1	Attitude Gyro
RCA26AK-2	Attitude Gyro
RCA26AK-3	Attitude Gyro
RCA26AK-4	Attitude Gyro
RCA26AK-6	Attitude Gyro
RCA26BK-1	Attitude Gyro
RCA26BK-10	Attitude Gyro
RCA26BK-12	Attitude Gyro
RCA26BK-16	Attitude Gyro
RCA26BK-17	Attitude Gyro
RCA26BK-18	Attitude Gyro
RCA26BK-2	Attitude Gyro
RCA26BK-20	Attitude Gyro
RCA26BK-21	Attitude Gyro
RCA26BK-29	Attitude Gyro
RCA26BK-3	Attitude Gyro
RCA26BK-31	Attitude Gyro
RCA26BK-34	Attitude Gyro
RCA26BK-36	Attitude Gyro
RCA26BK-4	Attitude Gyro
RCA26BK-6	Attitude Gyro
RCA26BK-7	Attitude Gyro
RCA26BK8	Attitude Gyro
RCA26BK-8	Attitude Gyro
RCA26BK-9	Attitude Gyro
RCA26C-5	Attitude Gyro
RCA26C-7	Attitude Gyro
RCA26C-8	Attitude Gyro
RCA26C-9	Attitude Gyro
RCA26CM-1	Attitude Gyro
RCA26CM-2	Attitude Gyro
RCA26CM-3	Attitude Gyro
RCA26CM-4	Attitude Gyro
RCA26CM-5	Attitude Gyro
RCA26CM-6	Attitude Gyro
RCA26EK-6	Attitude Gyro

RCA26EK-7	Attitude Gyro
RCA26EK-8	Attitude Gyro
RCA26EK-9	Attitude Gyro
RCA26EX-2	Attitude Gyro
RCA28	Turn & Bank Indicator
RCA28F65	Turn & Bank Indicator
RCA28P61	Turn & Bank Indicator
RCA28P61D2A	Turn & Bank Indicator
RCA28P64	Turn & Bank Indicator
RCA28R22M	Turn & Bank Indicator
RCA28R65	Turn & Bank Indicator
RCA28W2	Turn & Bank Indicator
RCA28WP	Turn & Bank Indicator
RCA29AK-1	Attitude Indicator
RCA29BK-3	Attitude Indicator
RCA2W	Turn & Slip Indicator
RCA30	Turn & Slip Indicator
RCA30-01	Turn & Slip Indicator
RCA30-02	Turn & Slip Indicator
RCA30-03	Turn & Slip Indicator
RCA30-04	Turn & Slip Indicator
RCA30-05	Turn & Slip Indicator
RCA30-06	Turn & Slip Indicator
RCA30-07	Turn & Slip Indicator
RCA30-08	Turn & Slip Indicator
RCA30-09	Turn & Slip Indicator
RCA30-10	Turn & Slip Indicator
RCA30-11	Turn & Slip Indicator
RCA30-12	Turn & Slip Indicator
RCA30-13	Turn & Slip Indicator
RCA35-1	Turn & Slip Indicator
RCA40-02	Tachometer Indicator
RCA40-03	Tachometer Indicator
RCA40-05	Tachometer Indicator
RCA40-06	Tachometer Indicator
RCA40-07	Tachometer Indicator
RCA40-09	Tachometer Indicator
RCA40-3	Prop Rpm Indicator
RCA40A-10	Tachometer Indicator
RCA40A-11	Tachometer Indicator
RCA40B-01	Tachometer Indicator
RCA40B-02	Tachometer Indicator
RCA40B-03	Tachometer Indicator
RCA40B-04	Tachometer Indicator
RCA40B-05	Tachometer Indicator
RCA40B-07	Tachometer Indicator
RCA40B-08	Tachometer Indicator
RCA40B-09	Tachometer Indicator
RCA40B-10	Tachometer Indicator

RCA40B-11	Tachometer Indicator
RCA40B-12	Tachometer Indicator
RCA41-01	Tachometer Indicator
RCA41-03	Tachometer Indicator
RCA41-04	Tachometer Indicator
RCA41-05	Tachometer Indicator
RCA41-06	Tachometer Indicator
RCA41-07	Tachometer Indicator
RCA41-08	Tachometer Indicator
RCA41-09	Tachometer Indicator
RCA41-10	Tachometer Indicator
RCA41-11	Tachometer Indicator
RCA41-11A	Tachometer Indicator
RCA41-12	Tachometer Indicator
RCA41-3	Percent Rpm Indicator
RCA41A-07	Tachometer Indicator
RCA41A-15	Tachometer Indicator
RCA41AB-02	Turbine Tachometer Indicator
RCA41B-01	Tachometer Indicator
RCA41B-02	Tachometer Indicator
RCA41B-03	Tachometer Indicator
RCA41B-04	Tachometer Indicator
RCA41B-05	Tachometer Indicator
RCA42-01	Tachometer Indicator
RCA42-02	Tachometer Indicator
RCA42-03	Tachometer Indicator
RCA42-04	Tachometer Indicator
RCA42-05	Tachometer Indicator
RCA42-06	Tachometer Indicator
RCA42-07	Tachometer Indicator
RCA42-08	Tachometer Indicator
RCA56	Turn & Bank Indicator
RCA56-11	Turn & Bank Indicator
RCA56-12	Turn & Bank Indicator
RCA56-13B	Turn & Bank Indicator
RCA56-13BL	Turn & Bank Indicator
RCA56-3	Turn & Bank Indicator
RCA56-3L	Turn & Bank Indicator
RCA56-5	Turn & Bank Indicator
RCA56-8	Turn & Bank Indicator
RCA56-9	Turn & Bank Indicator
RCA58-01	Turn & Bank Indicator
RCA58-02	Turn & Bank Indicator
RCA58-03	Turn & Bank Indicator
RCA58-04	Turn & Bank Indicator
RCA58-06	Turn & Bank Indicator
RCA58-09	Turn & Bank Indicator
RCA58-11	Turn & Bank Indicator
RCA60-1	Turn & Bank Indicator

RCA60-2	Turn & Bank Indicator
RCA60-3	Turn & Bank Indicator
RCA60-4	Turn & Bank Indicator
RCA70-01	Torque Indicator
RCA70-02	Torque Indicator
RCA70-1	Torque Indicator
RCA80-1	Turn Coordinator
RCA80-2	Turn Coordinator
RCA80A-10	Turn Coordinator
RCA80A-9	Turn Coordinator
RCA80B-15	Turn Coordinator
RCA80B-15L	Turn Coordinator
RCA80B-2	Turn Coordinator
RCA82A-1	Turn Coordinator
RCA82A-11	Turn Coordinator
RCA82A-2	Turn Coordinator
RCA82A-3	Turn Coordinator
RCA82A-4	Turn Coordinator
RCA83A-1	Turn Coordinator
RCA83A-11	Turn Coordinator
RCA83A-2	Turn Coordinator
RCM60ACL	Vertical Speed Indicator
RCR 650A	Adf Receiver
RCS60IL	Vertical Speed Indicator
RD-500A	Horizontal Situation Indicator
RD-550A	Horizontal Situation Indicator
RD-650	Horizontal Situation Indicator
RD650A	Horizontal Situation Indicator
RG-203	Rate Gyro
RG20E	Rate Gyro
RH-445	Radio Magnetic Indicator
RL/801 AM/MS/3	Altimeter
RMI-30	R.M.I.
RMI-36	R.M.I.
RS08-001	Relay/Transfer Switch
RS08-350	Relay/Transfer Switch
RS08-500	Relay/Transfer Switch
RS12-020	Relay/Transfer Switch
RS12-030	Relay/Transfer Switch
RS12-350	Relay/Transfer Switch
RS16 001	Relay/Transfer Switch
RS24 020	Relay/Transfer Switch
RS24 350	Relay/Transfer Switch
RT 406F-1	Uhf Fm Transceiver
RT 406F-2	Uhf Fm Transceiver
RT 406F-50	Uhf Fm Transceiver
RT 138 2	Vhf Hi Band Fm Transceiver
RT 138 3	Vhf Hi Band Fm Transceiver
RT 138-0	Vhf Hi Band Fm Transceiver

RT 138-1	Vhf Hi Band Fm Transceiver
RT 138F	Flexcomm Fm Communications Transceiver
RT 138F 00	Vhf Hi Band Fm Transceiver
RT 138F 02	Vhf Hi Band Fm Transceiver
RT 138F 03	Vhf Hi Band Fm Transceiver
RT 138F 50	Vhf Hi Band Fm Transceiver
RT 138F 51	Vhf Hi Band Fm Transceiver
RT 138F 52	Vhf Hi Band Fm Transceiver
RT 138F 53	Vhf Hi Band Fm Transceiver
RT 138F-01	Vhf Hi Band Fm Transceiver
RT 30	Vhf Low Band Fm Transceiver
RT 30-0	Vhf Low Band Fm Transceiver
RT 30-1	Vhf Low Band Fm Transceiver
RT 30-2	Vhf Low Band Fm Transceiver
RT 406F	Uhf Fm Transceiver
RT 406F-3	Uhf Fm Transceiver
RT 406F-51	Uhf Fm Transceiver
RT 406F-52	Uhf Fm Transceiver
RT 406F-53	Uhf Fm Transceiver
RT 450	Uhf Fm Transceiver
RT 450-0	Uhf Fm Transceiver
RT 450-1	Uhf Fm Transceiver
RT 450-2	Uhf Fm Transceiver
RT 450-3	Uhf Fm Transceiver
RT138	Flexcomm Fm Communications Transceiver
RT-138	Flexcomm Fm Communications Transceiver
RT138-0	Flexcomm Fm Communications Transceiver
RT138-1	Flexcomm Fm Communications Transceiver
RT138-2	Flexcomm Fm Communications Transceiver
RT138-3	Flexcomm Fm Communications Transceiver
RT138F	Flexcomm Fm Communications Transceiver
RT-138F	Flexcomm Fm Communications Transceiver
RT30	Flexcomm Fm Communications Transceiver
RT-30	Flexcomm Fm Communications Transceiver
RT-38	Flexcomm Fm Communications Transceiver
RT406F	Flexcomm Fm Communications Transceiver
RT-406F	Flexcomm Fm Communications Transceiver
RT450	Flexcomm Fm Communications Transceiver
RT-450	Flexcomm Fm Communications Transceiver
RT450-1	Flexcomm Fm Communications Transceiver
RT450-2	Flexcomm Fm Communications Transceiver
RT450-3	Flexcomm Fm Communications Transceiver
RYLC-53076-1	Linear Actuator
S 128-5-139	DUAL TACHOMETER
S 128-5-150	DUAL TACHOMETER
S 206-2	Dual Oil Pressure Indicator
S 206-3	Dual Oil Pressure Indicator
S 206-4	Dual Oil Pressure Indicator
S 206-5	Dual Oil Pressure Indicator

S 208-1	Dual Oil Pressure Indicator
S 208-6	Dual Oil Pressure Indicator
S1226	Beacon Assembly
S128.5.139	DUAL TACHOMETER
S128.5.150	DUAL TACHOMETER
S128-5-139	DUAL TACHOMETER
S128-5-150	Rpm Indicator
S1323N4	Airspeed Indicator
S15 KILR1	Airspeed Indicator
S-15-KA	Airspeed Indicator
S-15-KAV	Airspeed Indicator
S-15-KAW	Airspeed Indicator
S-15-KILR-11	Airspeed Indicator
S-15-KILR-13	Airspeed Indicator
S-15-KILR-15	Airspeed Indicator
S-15-KILR-17	Airspeed Indicator
S-15-KILR-19	Airspeed Indicator
S-15-KILR-20	Airspeed Indicator
S-15-KILR-21	Airspeed Indicator
S-15-KILR-9	Airspeed Indicator
S-15-KLIR-1	Airspeed Indicator
S-15-KLIR-9	Airspeed Indicator
S15-TSO	Airspeed Indicator
S1770	Ammeter
S1820501-01	Emergency Locator Transmitter
S1820501-02	Emergency Locator Transmitter
S1820502-01	ELT
S1820502-02	ELT
S1820502-04	ELT
S1821501-01	Emergency Locator Transmitter
S1821501-02	Emergency Locator Transmitter
S1821502-01	ELT
S1821502-02	ELT
S1821502-06	ELT
S1822501-01	Emergency Locator Transmitter
S1822501-02	Emergency Locator Transmitter
S1822502-02	ELT
S1823501-01	Emergency Locator Transmitter
S1823501-02	Emergency Locator Transmitter
S1823502-02	ELT
S1823502-03	ELT
S1823502-05	ELT
S1824501-01	Emergency Locator Transmitter
S1824501-02	Emergency Locator Transmitter
S1824502-01	ELT
S1824502-02	ELT
S1826502-02	ELT
S201-5	Tachometer Indicator
S-208-6	Oil Indicator

S-218-2	Hydraulic Pressure Indicator
S231N001-5	Standby Engine Indicator
S231N001-9	Standby Engine Indicator
S231T110-6	Attitude Indicator
S251N402-12	Flap Lever Position Transmitter
S251N403-17	Flap Lever Position Transmitter
S251N403-18	Flap Lever Position Transmitter
S256T007-10	Flap Position Transmitter
S256T007-11	Flap Position Transmitter
S256T007-12	Flap Position Transmitter
S256T007-13	Flap Position Transmitter
S256T007-14	Flap Position Transmitter
S256T007-15	Flap Position Transmitter
S256T007-16	Flap Position Transmitter
S256T007-17	Flap Position Transmitter
S256T007-19	Flap Position Transmitter
S256T007-20	Flap Position Transmitter
S256U002-15	Flap Lever Position Transmitter
S256U002-16	Flap Lever Position Transmitter
S256U002-19	Flap Lever Position Transmitter
S256U002-20	Flap Lever Position Transmitter
S25-KILR1	Airspeed Indicator
S332T301-181	Fire Overheat Control Card
S332T301-81	Fire Overheat Control Card
S347-001-13	Fuel Flow Indicator
S347T001-11	Fuel Flow Indicator
S347T001-13	Fuel Flow Indicator
S347T001-14	Fuel Flow Indicator
S347T001-15	Fuel Flow Indicator
S347T001-16	Fuel Flow Indicator
S347T001-24	Fuel Flow Indicator
S347T001-25	Fuel Flow Indicator
S347T001-26	Fuel Flow Indicator
S347T001-7	Fuel Flow Indicator
S347T001-8	Fuel Flow Indicator
S36016-002	Directional Gyro
S-40-KAW	Airspeed Indicator
S46007-H4C6	Directional Gyro
S46018-03C05PBB	Directional Gyro
S61401-01104-101	Handgrip
S61401-01104-102C	Handgrip
S6140-61105-11	Handgrip
S6140-61105-13	Handgrip
S6140-61105-17	Handgrip
S6140-61105-19	Handgrip
S6140-61416-2	Handgrip
S6142-51005-001	Handgrip
S6142-61416-10	Handgrip
S6142-61416-13	Handgrip

S6142-61416-14	Handgrip
S6142-61416-15	Handgrip
S6142-61416-16	Handgrip
S6142-61416-4	Handgrip
S6142-61416-5	Handgrip
S6142-61416-6	Handgrip
S6142-61416-7	Handgrip
S6142-61416-8	Handgrip
S6142-61416-9	Handgrip
S6145-61445-001	Vertical Speed Indicator
S6145-61445-1	Vertical Speed Indicator
S6147-61053-101	A.D.I.
SA-40-1	Airspeed Indicator
SC-841A	Static Converter
SEC-OC19EJ-1	Inter Turbine Temperature Indicator
SED-03A	Dual Oil Pressure Indicator
SED-04A	Dual Oil Pressure Indicator
SEDLC329B-1	Tachometer Indicator
SEDL-C329C	Dual Tachometer Indicator
SEDL0C29J	NH/NL % RPM INDICATOR
SEDL-OC29J	Nh/Nl Percent Rpm Indicator
SEDL-OC-29J	NH/NL % RPM INDICATOR
SEDL-OC29M	Nh/Nl Percent Rpm Indicator
SEDL-OC2D	Torque Pressure Indicator
SEDL0C2L	Engine Torque Indicator
SEDL-OC2L	Torque Pressure Indicator
SEDL-OC2P	Engine Torque Indicator
SEDL-OC2R	Torque Indicator
SEDL-OC2RX	Torque Indicator
SEDL-OC2S	Engine Torque Indicator
SEDL-OC2Y	Engine Torque Indicator
SEDL0C329A	Dual Tachometer Indicator
SEDL-OC4BC	Oil Pressure/Temperature Indicator
SEDL-OC4BE	Oil Pressure/Temperature Indicator
SEL-O19	Turbine Outlet Temperature Indicator
SEL-O19AU	Turbine Outlet Temperature Indicator
SEL-O19AU-1	Turbine Outlet Temperature Indicator
SEL-O19AU-2	Turbine Outlet Temperature Indicator
SEL-O19AU-3	Turbine Outlet Temperature Indicator
SELO19BC	Turbine Outlet Temperature Indicator
SEL-O19BC	Turbine Outlet Temperature Indicator
SELO19BD	Turbine Outlet Temperature Indicator
SEL-O19BD	Turbine Outlet Temperature Indicator
SELO19BU	Turbine Outlet Temperature Indicator
SEL-O19BU	Turbine Outlet Temperature Indicator
SELO19BW	Turbine Outlet Temperature Indicator
SEL-O19BW	Turbine Outlet Temperature Indicator
SEL-O19DR	Turbine Outlet Temperature Indicator
SEL-O19DS	Turbine Outlet Temperature Indicator

SEL-O19DS-1	Turbine Outlet Temperature Indicator
SELO19-DT	Turbine Outlet Temperature Indicator
SEL-O19DT	Turbine Outlet Temperature Indicator
SEL-O19ED	Turbine Outlet Temperature Indicator
SEL-OC19AG	EXHAUST GAS TEMPERATURE INDICATOR
SEL-OC19AM	Turbine Outlet Temperature Indicator
SEL-OC19AP	Temperature Indicator
SELOC19BF	Temperature Indicator
SELOC19BF-03	Temperature Indicator
SELOC19BF-04	Temperature Indicator
SELOC19BF-SD	Temperature Indicator
SEL-OC19CA	T6 Temperature Indicator
SEL-OC19D	EXHAUST GAS TEMPERATURE INDICATOR
SEL-OC19DW	Temperature Indicator
SEL-OC19E	EXHAUST GAS TEMPERATURE INDICATOR
SEL-OC19EA	T6 Temperature Indicator
SEL-OC19EC	T6 Temperature Indicator
SEL-OC19EG	T4 Temperature Indicator
SELOC19EH	T4 Temperature Indicator
SEL-OC19EH	Turbine Outlet Temperature Indicator
SEL-OC19EJ	Inter Turbine Temperature Indicator
SEL-OC19EJ-1	Inter Turbine Temperature Indicator
SELOC19EK	INTERTURBINE TEMPERATURE INDICATOR
SEL-OC19EK	Inter Turbine Temperature Indicator
SEL-OC19EP	Inter Turbine Temperature Indicator
SEL-OC19F	Egt Indicator
SEL-OC19G	Temperature Indicator
SEL-OC19K	P.T.I.T. Indicator
SEL-OC29BJ	Nh/Nl Percent Rpm Indicator
SEL-OC29CB	N1 Tachometer Indicator
SEL-OC29CF	N1 Tachometer Indicator
SEL-OC29DA	Nh % Rpm Indicator
SEL-OC29DF	Prop Rpm Indicator
SELOC29DG	Tachometer Indicator
SEL-OC29DG	Nh/Nl Percent Rpm Indicator
SEL-OC29DH	Prop Rpm Indicator
SEL-OC29DJ	Nl % Rpm Indicator
SEL-OC29F	N1 Tachometer Indicator
SEL-OC2N	Engine Torque Indicator
SEL-OC329A	Triple Tachometer Indicator
SEL-OC8G	Fuel Flow Indicator
SELOC8J	FUEL FLOW INDICATOR
SEL-OC8J	Fuel Flow Indicator
SETL-OC329A	Triple Tachometer Indicator
SETL-OC329D	Triple Tachometer Indicator
SETL-OC329E	Triple Tachometer Indicator
SETL-OC329F	Triple Tachometer Indicator
SETL-OC329G	Triple Tachometer Indicator
SETL-OC420F	Cabin Pressure Indicator

SK-40LC	Airspeed Indicator
SLZ7011A	Vertical Speed Indicator
SLZ8126	Vertical Speed Indicator
SLZ8826	Vertical Speed Indicator
SLZ9039	Vertical Speed Indicator
SLZ9065	Vertical Speed Indicator
SLZ9066	Vertical Speed Indicator
SLZ9067	Vertical Speed Indicator
SLZ9068	Vertical Speed Indicator
SLZ9084	Vertical Speed Indicator
SLZ9123	Vertical Speed Indicator
SLZ9125	Vertical Speed Indicator
SLZ9125A	Vertical Speed Indicator
SLZ9127	Vertical Speed Indicator
SLZ9140	Vertical Speed Indicator
SLZ9141	Vertical Speed Indicator
SLZ9145	Vertical Speed Indicator
SLZ9155	Vertical Speed Indicator
SLZ9157	Vertical Speed Indicator
SLZ9157-1	Vertical Speed Indicator
SLZ9158	Vertical Speed Indicator
SLZ9190	Vertical Speed Indicator
SLZ9200	Vertical Speed Indicator
SLZ9200A	Vertical Speed Indicator
SLZ9200A-1	Vertical Speed Indicator
SLZ9211	Vertical Speed Indicator
SLZ9239	Vertical Speed Indicator
SLZ9244	Vertical Speed Indicator
SLZ9247	Vertical Speed Indicator
SLZ9248	Vertical Speed Indicator
SLZ9270	Vertical Speed Indicator
SLZ9410	Vertical Speed Indicator
SLZ9415	Vertical Speed Indicator
SLZ9415(TSO-C8)	Vertical Speed Indicator
SLZ9416	Vertical Speed Indicator
SLZ9426A	Vertical Speed Indicator
SLZ9464A	Vertical Speed Indicator
SLZ9464A1	Vertical Speed Indicator
SLZ9464A-1	Vertical Speed Indicator
SLZ9504A	Vertical Speed Indicator
SLZ9603	Vertical Speed Indicator
SLZ9620	Vertical Speed Indicator
SLZ9635	Vertical Speed Indicator
SLZ9638	Vertical Speed Indicator
SLZ9669	Vertical Speed Indicator
SLZ9669-1	Vertical Speed Indicator
SLZ9669-2	Vertical Speed Indicator
SLZ9688A	Vertical Speed Indicator
SLZ9706	Vertical Speed Indicator

SLZ9832A	Vertical Speed Indicator
SLZ9845A	Vertical Speed Indicator
SLZ9851	Vertical Speed Indicator
SLZ9851-1	Vertical Speed Indicator
SP03301	Altimeter
SP-1400	Vertical Speed Indicator
SP-7576 SERIES	Directional Gyro
SP-7600 SERIES	Directional Gyro
SPC10(PW)	Inverter
SPC-10(W)	Static Inverter
SPC10N	Static Inverter
SPC-30	Static Inverter
SPC30B	Static Inverter
SPC-5	Static Inverter
SPS-1307	Static Inverter
SPS-1307D	Static Inverter
SPS-1607	Static Inverter
SPS-206	Static Inverter
SPS-750	Static Inverter
SR-153C	Synchro Indicator
SR-154C	Synchro Indicator
SR-2AB	Synchro Indicator
SR-2AC	Synchro Indicator
SR-2AD	Synchro Indicator
SR-2AE	Synchro Indicator
SR-2AF	Synchro Indicator
SR-2AG	Synchro Indicator
SR-2AH	Synchro Indicator
SR-2AJ	Synchro Indicator
SR-2AK	Synchro Indicator
SR-2AM	Synchro Indicator
SR-2AP	Synchro Indicator
SR-2AR	Synchro Indicator
SR-2AT	Synchro Indicator
SR-2AU	Synchro Indicator
SR-2AW	Synchro Indicator
SR-2W	Synchro Indicator
SR-2Y	Synchro Indicator
SR-2Z	Synchro Indicator
SR-3A	Pressure Indicator
SR-3C	Pressure Indicator
SR-4A	Pressure Indicator
SR-4B	Pressure Indicator
SR-5A	Pressure Indicator
SR-6A	Pressure Indicator
SR-7A	Pressure Indicator
SR-8B	Pressure Indicator
SR-94J	Synchro Indicator
SR-94K	Synchro Indicator

SR-94L	Synchro Indicator
SR-9A	Pressure Indicator
SRA-14A	Torque Indicator
SRA-14E	Torque Indicator
SR-C2AQ	Synchro Indicator
SR-C2AS	Synchro Indicator
SRD-4A	Pressure Indicator
SRD-4B	Pressure Indicator
SRD-4G	Pressure Indicator
SRD-7A	Pressure Indicator
SRD-7C	Pressure Indicator
SRDL-OC12F	Hydraulic Quantity Indicator
SRLC2A	Torque Indicator
SRLC2B	Torque Indicator
SRLC2C	Torque Indicator
SRLC2D	Torque Indicator
SRL-C2E	Torque Indicator
SRLC2F	Torque Indicator
SRLC2G	Torque Indicator
SRLC2H	Torque Indicator
SRLC2J	Torque Indicator
SRLC2K	Torque Indicator
SRL-C2K	Torque Indicator
SRL-C2L	Torque Indicator
SRLC3C	Pressure Indicator
SRLC8C	Fuel Flow Indicator
SRLC8F	Fuel Flow Indicator
SRSW-94A	Synchro Indicator
SRSW-94B	Synchro Indicator
SRSW-94C	Synchro Indicator
SSBU-23A/A	Vertical Gyro
SSD120	Altitude Digitizer
SSD120-35A	Altitude Digitizer
ST-104A	Pressure Transmitter
ST-207A	Pressure Transmitter
ST471	Elevator Trim Indicator
ST471-1	Rudder Trim Indicator
ST471-2	Aileron Trim Indicator
ST475	Angle Of Attack Indicator
ST-4H	Oil Pressure Transmitter
ST-502N-1	Torque Transmitter
ST-504AB-1	Torque Transmitter
ST-6B	Pressure Transmitter
ST-7C	Pressure Transmitter
ST-7D	Pressure Transmitter
STROBE LIGHT	Strobe Light
SWMK4E0188	Windshield Wiper Motor
SX7EJ10	Relay
SX7EJ8	Relay

SYLC 50293	Linear Actuator
SYLC 50479	Linear Actuator
SYLC 9190-10	Linear Actuator
SYLC50114	Actuator
SYLC50228	Actuator
SYLC50228-1	Actuator
SYLC50228-3	Passenger Step Actuator
SYLC50479	Linear Actuator
SYLC50480-1	Actuator
SYLC-52630-1	Actuator
SYLC-52630-2	Actuator
SYLC9548-1	Actuator
SYLC-9548-1	Linear Actuator
SYLC9868	Linear Actuator
T101738-101	Rpm Limit Detector
T101738-103	Rpm Limit Detector
T4-50NM-A-4-R	Torque Transducer
TARSYN-333	Three Axis Gyro
TARSYN-555H	Three Axis Gyro
TC100 (12)	Turn Coordinator
TC100 (24)	Turn Coordinator
TC-120	Turn Coordinator
TC120-3D8	Turn Coordinator
TCR 451	Dme R/T
TDAP-611	Audio Control Station
TDFM136B	VHF/FM Transceiver
TDFM-136B	VHF/FM Transceiver
TDFM-9000	Digital FM Transceiver
TDFM-9100	Digital FM Transceiver
TDFM-9200	Digital FM Transceiver
TDFM-9300	Digital FM Transceiver
TDR 950	Transponder
TDR90	Transponder
TDR-90	Atc Transponder
TFM138	VHF/FM Transceiver
TFM-138	VHF/FM Transceiver
TFM138A	VHF/FM Transceiver
TFM-138A	VHF/FM Transceiver
TFM138B	VHF/FM Transceiver
TFM-138B	VHF/FM Transceiver
TFM138C	VHF/FM Transceiver
TFM-138C	VHF/FM Transceiver
TFM138D	VHF/FM Transceiver
TFM-138D	VHF/FM Transceiver
TFM30	VHF/FM Transceiver
TFM-30	VHF/FM Transceiver
TFM403	VHF/FM Transceiver
TFM-403	VHF/FM Transceiver
TFM500	VHF/FM/UHF Transceiver

TFM-500	VHF/FM/UHF Transceiver
TFM520	Vhf Am/Fm, Uhf Fm Communications Transceiver
TFM-520	Vhf Am/Fm, Uhf Fm Communications Transceiver
TFM530	VHF/Low Band/FM Transceiver
TFM-530	VHF/Low Band/FM Transceiver
TFM550	VHF High/VHF Low/UHF/FM Transceiver
TFM-550	VHF High/VHF Low/UHF/FM Transceiver
TFM556	VHF High/VHF Low/UHF/FM Transceiver
TFM-556	VHF High/VHF Low/UHF/FM Transceiver
TFM566	VHF/Low Band/FM Transceiver
TFM-566	VHF/Low Band/FM Transceiver
TFM66	Vhf/Uhf Communications Transceiver
TFM-66	Vhf/Uhf Communications Transceiver
TG255-001	Tach Generator
TG255-002	Tach Generator
TG255-003	Tach Generator
TG255-004	Tach Generator
TG255-005	Tach Generator
TG255-006	Tach Generator
TG255-007	Tach Generator
TG255-008	Tach Generator
TGH-11-HS-4	Transmitter
TH250	Tac/Com Control
TH250-17JB	Vhf Fm Communications Transceiver
TH250-2FF	Flexcomm Fm Communications Transceiver
TH250-2NN	Comm Control Unit
TH260	Tac/Com Control
TH260-2ZZ	Fm Tactical Com
TH350	Tac/Com Control
TH3502FFFY	Control Head Tac/Com
TH350-2FFN	Control Head
TH350-2FFNY	Control Head
TH350-7FFN	Fm Control
TH360	Tac/Com Control
TH450	Tac/Com Control
TH450-0NNNE	Comm Control Unit
TH450-2FFFJ	Flexcomm Fm Communications Transceiver
TH450A-6JJDB	Comm Control Unit
TH460-2ZZZZY	Controller
TH460B-12ZZZZ	Slave Head
TM0502	Tach Generator
TM113	Temperature Switch
TM113-1	Temperature Switch
TM410-39	Oil Temperature Indicator
TM410-53	Oil Temperature Indicator
TM410-54	Temperature Indicator
TM410-7	Triple Temperature Indicator
TM420-39	Turbine Outlet Temperature Indicator
TM427-53	Turbine Outlet Temperature Indicator

TM435-2	Turbine Outlet Temperature Indicator
TM435-53	Egt Indicator
TM472 MOD A	Temperature Indicator
TM476	Temperature Indicator
TNAS 1024-118	Transmitter
TNAS1024-118	Transmitter
TNAS1024-178	Transmitter
TNS-012-A	Landing Gear Alarm
TNS512-231-1	Transmitter
TRU-2A/A	Rate Gyro
TRU-66/A	Pressure Transmitter
TS100A	Speaker
TS100WR	Speaker
TS-1588/AIC	RADIO TEST SET
TS-1588A/AIC	RADIO TEST SET
TS200-4BL	Turn & Slip Indicator
TS400-1A	Turn & Bank Indicator
TS400-2SLC	Turn & Bank Indicator
TSG 420-103	Static Inverter
TYPE 35-5	Altimeter
TYPE 35-9	Altimeter
TYPE 470-0	Tach Generator
TYPE 470-3	Tach Generator
TYPE 55-1	Altimeter
TYPE 55-3	Altimeter
TYPE MU-1	Tachometer Indicator
TYPE TRU-2A/2	Rate Gyro
U2-025	TWO STEP TRIGGER SWITCH
U2-037	TWO STEP TRIGGER SWITCH
UA723CN	Voltage Regulator
UG316A1	TRANSISTORIZED INDICATOR TESTER
UI15035P2-13 (-)	Altimeter
UI15035P2B P164 (-)	Altimeter
UI15035P2-P157 (A)	Altimeter
UI15035P2-P43 (H)	Altimeter
UI15035PB-P56 (J)	Altimeter
UI15035P-P23 (B)	Altimeter
UI15035P-P41 (B)	Altimeter
UI15035P-P59 (A)	Altimeter
UI15934 (K)	Altimeter
UI15934-A148 (C)	Altimeter
UI15934-A150 (-)	Altimeter
UI15934-A253 (-)	Altimeter
UI15934-A614 (-)	Altimeter
UI15934-A617 (D)	Altimeter
UI15934-A624 (-)	Altimeter
UI15934-A631 (A)	Altimeter
UI15934-A660 (-)	Altimeter
UI15934AD-A146 (E)	Altimeter

UI15934D (A)	Altimeter
UI15934PA-A184 (A)	Altimeter
UI15934PAL A436 (-)	Altimeter
UI15934PAL-A173 (A)	Altimeter
UI15934PAL-A334 (A)	Altimeter
UI15934PAM-A620 (B)	Altimeter
UI15934PAML-A132 (C)	Altimeter
UI15934PD-A158 (A)	Altimeter
UI15934PD-A656 (-)	Altimeter
UI15934PM-A440 (C)	Altimeter
UI15934PM-A619 (B)	Altimeter
UI15934PPA-A618 (B)	Altimeter
UI15950-A166 (-)	Altimeter
UI-3000	Cabin Pressure Indicator
UI-3001	Cabin Pressure Indicator
UI-3002	Cabin Pressure Indicator
UI5035	Altimeter
UI5035-12P (-)	Altimeter
UI5035-P12 (-)	Encoding Altimeter
UI5035-P154 (-)	Altimeter
UI5035P2-13 (-)	Encoding Altimeter
UI5035P2B-P164 (-)	Encoding Altimeter
UI5035P2--P157 (A)	Encoding Altimeter
UI5035P2-P43 (H)	Encoding Altimeter
UI5035-P47 (E)	Encoding Altimeter
UI5035-P61 (B)	Encoding Altimeter
UI5035-PA7 (E)	Altimeter
UI5035PB-P56 (J)	Encoding Altimeter
UI5035PB-P61 (B)	Altimeter
UI5035P-P23 (B)	Encoding Altimeter
UI5035P-P41 (B)	Encoding Altimeter
UI5035P-P47 (E)	Encoding Altimeter
UI5035P-P59 (A)	Encoding Altimeter
UI5934	Altimeter
UI5934-A631 (A)	Altimeter
UI5934P2-P157 (A)	Altimeter
UI5950 (A)	Altimeter
UI59T	Altimeter
UI59T (C)	Altimeter
UI-6111	Manifold Pressure Gage
UI-6112	Manifold Pressure Gage
UI-6121	Manifold Pressure Gage
UI-6122	Manifold Pressure Gage
UI-6211	Fuel Pressure Indicator
UI-6212	Fuel Pressure Indicator
UI-6213	Fuel Pressure Indicator
UI-6221	Fuel Pressure Indicator
UI-6222	Fuel Pressure Indicator
UI-6223	Fuel Pressure Indicator

UI-6224	Fuel Pressure Indicator
UI-6225	Fuel Pressure Indicator
UI-6311	Manifold/Fuel Pressure Gage
UI-6312	Manifold/Fuel Pressure Gage
UI-6313	Manifold/Fuel Pressure Gage
UI-6314	Manifold/Fuel Pressure Gage
UI-6315	Manifold/Fuel Pressure Gage
UI-6331	Manifold/Fuel Pressure Gage
UI-6332	Manifold/Fuel Pressure Gage
UI-6333	Manifold/Fuel Pressure Gage
UI-7000	Vertical Speed Indicator
UI-7020B	Vertical Speed Indicator
UI-7030	Vertical Speed Indicator
UI-7030B	Vertical Speed Indicator
UI-7040	Vertical Speed Indicator
UI-7040B	Vertical Speed Indicator
UI-7060B	Vertical Speed Indicator
UI-7100	Vertical Speed Indicator
UI-7120	Vertical Speed Indicator
UI-7120B	Vertical Speed Indicator
UI-7120L	Vertical Speed Indicator
UI-7130	Vertical Speed Indicator
UI-7130B	Vertical Speed Indicator
UI-7130L	Vertical Speed Indicator
UI-7140	Vertical Speed Indicator
UI-7140B	Vertical Speed Indicator
UI-7140L	Vertical Speed Indicator
UI-7160	Vertical Speed Indicator
UI-7160B	Vertical Speed Indicator
UI-7160L	Vertical Speed Indicator
VCT1518C	Blower Assembly
VCT1518D	Oil Cooling Fan
VG-14	Vertical Gyro
VG-14A	Vertical Gyro
VG-14H	Vertical Gyro
VG-204Y	Displacement Gyro
VG-206A	Displacement Gyro
VG-206B	Displacement Gyro
VG206-C	Displacement Gyro
VG208C	Vertical Gyro
VHF 20A	Vhf Communications Transceiver
VHF 251	Vhf Communications Transceiver
VHF 251E	Vhf Communications Transceiver
VHF-20A	Transceiver
VHF-20B	Transceiver
VHF-21	Vhf Comm Transceiver
VHF21A	Vhf Communications Transceiver
VHF-21A	Vhf Comm Transceiver

VHF-21B	Vhf Comm Transceiver
VHF-22	Vhf Comm Transceiver
VHF-22A	Vhf Comm Transceiver
VHF-22B	Vhf Comm Transceiver
VIL-OC7D	Hydraulic Pressure Indicator
VIR 351	Vhf Communications Transceiver
VIR-30	Vor/Loc Receiver
VIR-32	Nav Receiver
VIR-33	Navigation Receiver
VM450-2L	Vertical Speed Indicator
VM450-6-1LF	Vertical Speed Indicator
VM450-6L	Vertical Speed Indicator
VM-450-6-L	Vertical Speed Indicator
VM450-6-L-P	Vertical Speed Indicator
VR-1010-24-1A	Voltage Regulator
VR-1010-24-2A	DC VOLTAGE REGULATOR
VR-1010-24-4D	Voltage Regulator
VR1530-3	Voltage Regulator
VSDL-OC219A	Oil Temperature Indicator
VSDL-OC219AE	Oil Temperature Indicator
VSDL-OC219C	Oil Temperature Indicator
VSDL-OC219CF	Oil Temperature Indicator
VSDL-OC219E	Oil Temperature Indicator
VSDL-OC219F	Oil Temperature Indicator
VSDL-OC410AF	Fan Speed Indicator
VSDL-OC19A	Oil Temperature Indicator
VSDL-OC19E	Oil Temperature Indicator
VSDL-OC203A	Fuel Quantity Indicator
VSDL-OC203AC	Fuel Quantity Indicator
VSDL-OC203C	Fuel Quantity Indicator
VSDL-OC204A	Oil Pressure Indicator
VSDL-OC204AG	Oil Pressure Indicator
VSDL-OC204C	Oil Pressure Indicator
VSDL-OC204CH	Oil Pressure Indicator
VSDL-OC204E	Oil Pressure Indicator
VSDL-OC204H	Oil Pressure Indicator
VSDL-OC204N	Oil Pressure Indicator
VSDL-OC208A	Fuel Flow Indicator
VSDL-OC208A,D	Fuel Flow Indicator
VSDL-OC208C	Fuel Flow Indicator
VSDL-OC208C,E	Fuel Flow Indicator
VSDL-OC208D	Fuel Flow Indicator
VSDL-OC208E	Fuel Flow Indicator
VSDL-OC208F	Fuel Flow Indicator
VSDL-OC219C	Oil Temperature Indicator
VSDL-OC219F	Oil Temperature Indicator
VSDL-OC401A-1	Fan Speed Indicator
VSDL-OC403A	Fuel Quantity Indicator

VSDL-OC403A,D	Fuel Quantity Indicator
VSDL-OC403D	Fuel Quantity Indicator
VSDL-OC403D-1	Fuel Quantity Indicator
VSDL-OC408A	Fuel Flow Indicator
VSDL-OC408A,E	Fuel Flow Indicator
VSDL-OC408D	Fuel Flow Indicator
VSDL-OC408D,F	Fuel Flow Indicator
VSDL-OC408E	Fuel Flow Indicator
VSDL-OC408F	Fuel Flow Indicator
VSDL-OC410A	Fan Speed Indicator
VSDL-OC410A-1	Fan Speed Indicator
VSDL-OC410AAB	Fan Speed Indicator
VSDL-OC410AB	Fan Speed Indicator
VSDL-OC410AD	Fan Speed Indicator
VSDL-OC410AE	Fan Speed Indicator
VSDL-OC410AF	Fan Speed Indicator
VSDL-OC410B	Fan Speed Indicator
VSDL-OC410B,P	Fan Speed Indicator
VSDL-OC410H	Fan Speed Indicator
VSDL-OC410L	Fan Speed Indicator
VSDL-OC410L,R	Fan Speed Indicator
VSDL-OC410L-1	Fan Speed Indicator
VSDL-OC410M	Fan Speed Indicator
VSDL-OC410M,S	Fan Speed Indicator
VSDL-OC410M-1	Fan Speed Indicator
VSDL-OC410N	Fan Speed Indicator
VSDL-OC410N,T	Fan Speed Indicator
VSDL-OC410N-1	Fan Speed Indicator
VSDL-OC410P	Fan Speed Indicator
VSDL-OC410R	Fan Speed Indicator
VSDL-OC410S	Fan Speed Indicator
VSDL-OC410T	Fan Speed Indicator
VSDL-OC419A	Inter Turbine Temperature Indicator
VSDL-OC419A,G	Inter Turbine Temperature Indicator
VSDL-OC419E	Inter Turbine Temperature Indicator
VSDL-OC419E,H	Inter Turbine Temperature Indicator
VSDL-OC419G	Inter Turbine Temperature Indicator
VSDL-OC419H	Inter Turbine Temperature Indicator
VSDL-OC419L	Inter Turbine Temperature Indicator
VT044	Fuel Quantity Transmitter
VT044-1	Fuel Quantity Transmitter
VT080	Fuel Quantity Transmitter
VT081	Fuel Quantity Transmitter
VT087-1	Fuel Quantity Transmitter
VT087-2	Fuel Quantity Transmitter
VT089-1	Fuel Quantity Transmitter
VT089-11	Fuel Probe
VT089-4	Fuel Probe
VT089-9	Fuel Probe

VT098-1	Fuel Quantity Transmitter
VT108-2	Low Level Pressue Switch
VT426	Fuel Quantity Indicator
VT426/1	Fuel Quantity Indicator
VT426-1	Fuel Quantity Indicator
VT426-10	Fuel Quantity Indicator
VT426-39	Fuel Quantity Indicator
VT426-40	Fuel Quantity Indicator
VT426-41	Fuel Quantity Indicator
VT443-40	Fuel Quantity Indicator
VT462-2	Fuel Quantity Indicator
VT462-4	Fuel Quantity Indicator
VT462-5	Fuel Quantity Indicator
VT476-2	Fuel Quantity Indicator
VT476-20	Fuel Quantity Indicator
VT476-3	Fuel Quantity Indicator
VT477	Fuel Quantity Indicator
VT477-1	Hydraulic Quantity Indicator
VT477-2	Hydraulic Quantity Indicator
VT477-3	Hydraulic Quantity Indicator
VT484-4	Fuel Quantity Indicator
VT484-5	Fuel Quantity Indicator
W-33-7510	Clock
W-33-7510 ET	Clock
W33-7510-10ET-20L	Clock
W33-7510-ET	Clock
W-33-7511	Clock
W-33-7511-10	Clock
W-33-7530-10	Clock
W-33-7530-101	Clock
W33-7530-102	Clock
W-33-7535-30	Clock
W-33-7535-302	Clock
W-33-7535-30-2	Clock
W33-7550-10A	Clock
WA310	Airspeed Indicator
WD01-45-91155-04	Handgrip
WD01-45-91157	Handgrip
WD01-45-91157/2	Handgrip
WD01-45-91157/3	Handgrip
WD01-45-91157/5	Handgrip
WD01-45-91159	Handgrip
WD0345-00010-041	Handgrip
WD4145-00008-041	Handgrip
WD4145-00010-041	Handgrip
WD47-45-00006-04	Handgrip
WL/1101AM/MS/2	Encoding Altimeter
WL/113/AMA/JA/1	Mach Airspeed Indicator
WL/113AMA/JA/1	Mach Airpseed Indicator

WL/113AMA/JA/2	Mach Airpseed Indicator
WL/113AMA/JA/4	Mach Airpseed Indicator
WL/113AMA/JA/5	Mach Airpseed Indicator
WL/118AMA/JA/1	Mach Airpseed Indicator
WL/118AMA/JA/4	Mach Airpseed Indicator
WL/120AMA/JA/1	Mach Airpseed Indicator
WL/120AMA/JA/3	Mach Airpseed Indicator
WL/120AMA/JA/4	Mach Airpseed Indicator
WL/120AMA/JA/5	Mach Airpseed Indicator
WL/120AMA/JA/6	Mach Airpseed Indicator
WL/1401AM/MS/1	Encoding Altimeter
WL/1401AM/MS/2	Encoding Altimeter
WL/1401AM/MS/3	Encoding Altimeter
WL/1401AM/MS/4	Encoding Altimeter
WL/1403/AM/MS/1	Encoding Altimeter
WL/1403/AM/MS/2	Encoding Altimeter
WL/1403/AM/MS/3	Encoding Altimeter
WL/1403/AM/MS/4	Encoding Altimeter
WL/1403AM/MS/1	Encoding Altimeter
WL/1403AM/MS/2	Encoding Altimeter
WL/1403AM/MS/3	Encoding Altimeter
WL/1403AM/MS/4	Encoding Altimeter
WL/1403AM/MS/5	Encoding Altimeter
WL/1404/AM/MS/1	Encoding Altimeter
WL/1404/AM/MS/2	Encoding Altimeter
WL/1404/AM/MS/3	Encoding Altimeter
WL/1404/AM/MS/4	Encoding Altimeter
WL/1404/AM/MS/5	Encoding Altimeter
WL/1404/AM/MS/6	Encoding Altimeter
WL/1404/AM/MS/7	Encoding Altimeter
WL/1404/AM/MS/8	Encoding Altimeter
WL/1404AM/MS/1	Encoding Altimeter
WL/1404AM/MS/2	Encoding Altimeter
WL/1404AM/MS/3	Encoding Altimeter
WL/1404AM/MS/4	Encoding Altimeter
WL/1404AM/MS/5	Encoding Altimeter
WL/1404AM/MS/6	Encoding Altimeter
WL/1404AM/MS/7	Encoding Altimeter
WL/1404AM/MS/8	Encoding Altimeter
WL/1407AM/MS/1	Encoding Altimeter
WL/1407AM/MS/2	Encoding Altimeter
WL/1407AM/MS/3	Encoding Altimeter
WL/1407AM/MS/4	Encoding Altimeter
WL/KCA0104W	Compass
WL1001KCA1	Standby Compass
WL101EED2	N1% Rpm Indicator
WL101EED-2	N1 % Rpm Indicator
WL101EED3	N1% Rpm Indicator
WL101EED-3	N1 % Rpm Indicator

